USER'S MANUAL

Downloaded from LpManual.com Manuals

V11.6.00

Downloaded from LpManual.com Manuals

Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

©June 2011

Trademarks

Intel and **Intel Core** are trademarks/registered trademarks of Intel Corporation.

Downloaded from LpManual.com Manuals

R&TTE Directive

This device is in compliance with the essential requirements and other relevant provisions of the R&TTE Directive 1999/5/EC.

This device will be sold in the following EEA countries: Austria, Italy, Belgium, Liechtenstein, Denmark, Luxembourg, Finland, Netherlands, France, Norway, Germany, Portugal, Greece, Spain, Iceland, Sweden, Ireland, United Kingdom, Cyprus, Czech Republic, Estonia, Hungary, Latvia, Lithuania, Malta, Slovakia, Poland, Slovenia.

CE Marking

This device has been tested to and conforms to the regulatory requirements of the European Union and has attained CE Marking. The CE Mark is a conformity marking consisting of the letters “CE”. The CE Mark applies to products regulated by certain European health, safety and environmental protection legislation. The CE Mark is obligatory for products it applies to: the manufacturer affixes the marking in order to be allowed to sell his product in the European market.

This product conforms to the essential requirements of the R&TTE directive 1999/5/EC in order to attain CE Marking. A notified body has determined that this device has properly demonstrated that the requirements of the directive have been met and has issued a favorable certificate of expert opinion. As such the device will bear the notified body number 0560 after the CE mark.

The CE Marking is not a quality mark. Foremost, it refers to the safety rather than to the quality of a product. Secondly, CE Marking is mandatory for the product it applies to, whereas most quality markings are voluntary.

Downloaded from LpManual.com Manuals

FCC Statement
(Federal Communications Commission)

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the service representative or an experienced radio/TV technician for help.

Operation is subject to the following two conditions:

1. This device may not cause interference.

   And

2. This device must accept any interference, including interference that may cause undesired operation of the device.

Downloaded from LpManual.com Manuals

FCC RF Radiation Exposure Statement:

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Warning

Use only shielded cables to connect I/O devices to this equipment. You are cautioned that changes or modifications not expressly approved by the manufacturer for compliance with the above standards could void your authority to operate the equipment.

Downloaded from LpManual.com Manuals

IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock, and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using this equipment with a telephone line (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit (Full Range AC/DC Adapter - AC Input 100 - 240V, 50 - 60Hz DC Output 20V, 15A (**300W**) minimum).

This Computer's Optical Device is a Laser Class 1 Product

Downloaded from LpManual.com Manuals

Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:

1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.

Do not expose the computer to any shock or vibration.	*Do not place it on an unstable surface.*	*Do not place anything heavy on the computer.*

2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.

Do not expose it to excessive heat or direct sunlight.	*Do not leave it in a place where foreign matter or moisture may affect the system.*	*Don't use or store the computer in a humid environment.*	*Do not place the computer on any surface that will block the Vents/Fan Intakes.*

Downloaded from LpManual.com Manuals

3. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.

4. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.

Do not turn off the power until you properly shut down all programs.	*Do not turn off any peripheral devices when the computer is on.*	*Do not disassemble the computer by yourself.*	*Perform routine maintenance on your computer.*

5. **Take care when using peripheral devices**.

Use only approved brands of peripherals.	*Unplug the power cord before attaching peripheral devices.*

Downloaded from LpManual.com Manuals

Power Safety

The computer has specific power requirements:

Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

- Only use a power adapter approved for use with this computer.
- Your AC/DC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies (i.e. AC/DC adapter or car adapter).

Do not plug in the power cord if you are wet.	*Do not use the power cord if it is broken.*	*Do not place heavy objects on the power cord.*
		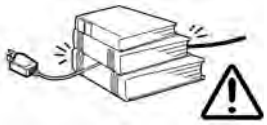

Downloaded from LpManual.com Manuals

Polymer Battery Precautions

Note the following information which is specific to polymer batteries only, and where applicable, this overrides the general battery precaution information overleaf.

- Polymer batteries may experience a slight expansion or swelling, however this is part of the battery's safety mechanism and is not a cause for concern.
- Use proper handling procedures when using polymer batteries. Do not use polymer batteries in high ambient temperature environments, and do not store unused batteries for extended periods.

See also the general battery precautionary information overleaf for further information.

Downloaded from LpManual.com Manuals

General Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not remove any batteries from the computer while it is powered on.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.

Battery Disposal & Caution

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Downloaded from LpManual.com Manuals

Cleaning

Do not apply cleaner directly to the computer; use a soft clean cloth.
Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.

Servicing

Do not attempt to service the computer yourself. Doing so may violate your warranty and expose you and the computer to electric shock. Refer all servicing to authorized service personnel. Unplug the computer from the power supply. Then refer servicing to qualified service personnel under any of the following conditions:

- When the power cord or AC/DC adapter is damaged or frayed.
- If the computer has been exposed to rain or other liquids.
- If the computer does not work normally when you follow the operating instructions.
- If the computer has been dropped or damaged (do not touch the poisonous liquid if the LCD panel breaks).
- If there is an unusual odor, heat or smoke coming from your computer.

Removal Warning

When removing any cover(s) and screw(s) for the purposes of device upgrade, remember to replace the cover(s) and screw(s) before turning the computer on.

Downloaded from LpManual.com Manuals

Travel Considerations

Packing

As you get ready for your trip, run through this list to make sure the system is ready to go:

1. Check that the battery pack and any spares are fully charged.
2. Power off the computer and peripherals.
3. Close the display panel and make sure it's latched.
4. Disconnect the AC/DC adapter and cables. Stow them in the carrying bag.
5. The AC/DC adapter uses voltages from 100 to 240 volts so you won't need a second voltage adapter. However, check with your travel agent to see if you need any socket adapters.
6. Put the notebook in its carrying bag and secure it with the bag's straps.
7. If you're taking any peripherals (e.g. a printer, mouse or digital camera), pack them and those devices' adapters and/or cables.
8. Anticipate customs - Some jurisdictions may have import restrictions or require proof of ownership for both hardware and software. Make sure your "papers" are handy.

Power Off Before Traveling

Make sure that your notebook is completely powered off before putting it into a travel bag (or any such container). Putting a notebook which is powered on in a travel bag may cause the Vents/Fan Intakes to be blocked. To prevent your computer from overheating make sure nothing blocks the Vent/Fan Intakes while the computer is in use.

Downloaded from LpManual.com Manuals

On the Road

In addition to the general safety and maintenance suggestions in this preface, and Chapter 8: Troubleshooting, keep these points in mind:

Hand-carry the notebook - For security, don't let it out of your sight. In some areas, computer theft is very common. Don't check it with "normal" luggage. Baggage handlers may not be sufficiently careful. Avoid knocking the computer against hard objects.

Beware of Electromagnetic fields - Devices such as metal detectors & X-ray machines can damage the computer, hard disk, floppy disks, and other media. They may also destroy any stored data - Pass your computer and disks around the devices. Ask security officials to hand-inspect them (you may be asked to turn it on). **Note**: Some airports also scan luggage with these devices.

Fly safely - Most airlines have regulations about the use of computers and other electronic devices in flight. These restrictions are for your safety, follow them. If you stow the notebook in an overhead compartment, make sure it's secure. Contents may shift and/or fall out when the compartment is opened.

Get power where you can - If an electrical outlet is available, use the AC/DC adapter and keep your battery(ies) charged.

Keep it dry - If you move quickly from a cold to a warm location, water vapor can condense inside the computer. Wait a few minutes before turning it on so that any moisture can evaporate.

Downloaded from LpManual.com Manuals

Developing Good Work Habits

Developing good work habits is important if you need to work in front of the computer for long periods of time. Improper work habits can result in discomfort or serious injury from repetitive strain to your hands, wrists or other joints. The following are some tips to reduce the strain:

- Adjust the height of the chair and/or desk so that the keyboard is at or slightly below the level of your elbow. Keep your forearms, wrists, and hands in a relaxed position.
- Your knees should be slightly higher than your hips. Place your feet flat on the floor or on a footrest if necessary.
- Use a chair with a back and adjust it to support your lower back comfortably.
- Sit straight so that your knees, hips and elbows form approximately 90-degree angles when you are working.
- Take periodic breaks if you are using the computer for long periods of time.

Remember to:

- Alter your posture frequently.
- Stretch and exercise your body several times a day.
- Take periodic breaks when you work at the computer for long periods of time. Frequent and short breaks are better than fewer and longer breaks.

Downloaded from LpManual.com Manuals

Lighting

Proper lighting and a comfortable viewing angle can reduce eye strain and shoulder and neck muscle fatigue.

- Position the display to avoid glare or reflections from overhead lighting or outside sources of light.
- Keep the display screen clean and set the brightness and contrast to levels that allow you to see the screen clearly.
- Position the display directly in front of you at a comfortable viewing distance.
- Adjust the display-viewing angle to find the best position.

LCD Screen Care

To prevent **image persistence** on LCD monitors (caused by the continuous display of graphics on the screen for an extended period of time) take the following precautions:

- Set the *Windows* **Power Plans** to turn the screen off after a few minutes of screen idle time.
- Use a rotating, moving or blank screen saver (this prevents an image from being displayed too long).
- Rotate desktop background images every few days.
- Turn the monitor off when the system is not in use.

Cable TV Safety

If you have included a **TV Tuner** in your purchase option then pay careful attention to the following:

- Make sure that your CATV system installer has connected the Coaxial cable shield to the grounding system of the building, as close to the point of cable entry as practical.
- This reminder is provided to call the CATV system installer's attention to Article 820-93 of the NEC (Section 54, Part I of the Canadian Electrical Code).
- The TV antenna supplied with any TV Tuner module is intended for indoor use only. Please do not use your TV Tuner module outdoors.

Downloaded from LpManual.com Manuals

LCD Electro-Plated Logos

Note that in computers featuring a raised LCD electro-plated logo, the logo is covered by a protective adhesive. Due to general wear and tear, this adhesive may deteriorate over time and the exposed logo may develop sharp edges. Be careful when handling the computer in this case, and avoid touching the raised LCD electro-plated logo. Avoid placing any other items in the carrying bag which may rub against the top of the computer during transport. If any such wear and tear develops contact your service center.

Downloaded from LpManual.com Manuals

Contents

Notice I
FCC Statement III
FCC RF Radiation Exposure Statement: IV
Instructions for Care and Operation VI
Power Safety VIII
Polymer Battery Precautions IX
General Battery Precautions X
Cleaning XI
Servicing XI
Travel Considerations XII

Quick Start Guide

Overview 1-1
Advanced Users 1-2
Beginners and Not-So-Advanced Users 1-2
Warning Boxes 1-2
Not Included 1-3
System Software 1-4
RAID & AHCI Setup 1-4
System Startup 1-5
System Map: LCD Panel Open & Top View 1-6
LED Indicators 1-7
Touch Sensor Instant Keys 1-8
Keyboard 1-9
Function Keys & Visual Indicators 1-10
System Map: Front & Rear Views 1-11
System Map: Right View 1-12
System Map: Left View 1-13
System Map: Bottom View 1-15
Windows 7 Start Menu & Control Panel 1-16
Video Features 1-17
Screen Resolution 1-18
NVIDIA Control Panel 1-19
Catalyst Control Center 1-20
Power Options 1-21

Storage Devices, Mouse, Audio & Printer

Overview 2-1
Hard Disk Drive 2-2
Optical Device 2-3
Loading Discs 2-3
Handling CDs or DVDs 2-4
DVD Regional Codes 2-5
Multi-In-1 Card Reader 2-6
ExpressCard Slot 2-7

Downloaded from LpManual.com Manuals

Inserting and Removing ExpressCards 2-7
Audio Features 2-8
Setup for Audio Recording 2-9
Setup for 5.1 or 7.1 Surround Sound 2-10
Dolby Settings 2-12
HDMI Audio Configuration 2-13
Audio Setup for LCD Monitors/
TVs with HDMI Input 2-14
TouchPad and Buttons/Mouse 2-16
Gestures and Device Settings 2-18
Adding a Printer 2-21
USB Printer 2-21
Install Instructions: 2-21
Parallel Printer 2-21

Power Management

Overview 3-1
The Power Sources 3-2
AC/DC Adapter 3-2
Battery 3-2
Turning On the Computer 3-3
Power Plans 3-4
Power-Saving States 3-6
Sleep 3-6
Hibernate 3-7
Shut down 3-7
Configuring the Power Buttons 3-8
Resuming Operation 3-9
Battery Information 3-10
Conserving Battery Power 3-11
Battery Life 3-12
New Battery 3-12
Recharging the Battery with the AC/DC Adapter 3-12
Proper handling of the Battery Pack 3-13
Battery FAQ 3-14

Drivers & Utilities

RAID & AHCI Setup 4-1
What to Install 4-1
Module Driver Installation 4-1
Driver Installation 4-2
Manual Driver Installation 4-4
Updating/Reinstalling Individual Drivers 4-4
User Account Control 4-5
Windows Security Message 4-5
New Hardware Found 4-5
Driver Installation Procedure 4-6
Chipset 4-7
Video (NVIDIA) 4-7
Video (AMD) 4-7

Downloaded from LpManual.com Manuals

LAN 4-7
Card Reader 4-7
TouchPad 4-8
USB 3.0 4-8
Hot Key 4-8
Audio 4-8
Windows Experience Index 4-9
Optional Drivers 4-10
Wireless LAN 4-10
PC Camera 4-11
Consumer Infrared (for TV Tuner Remote) 4-11
Security Modules (Fingerprint & TPM) 4-11

BIOS Utilities

Overview 5-1
The Power-On Self Test (POST) 5-2
Failing the POST 5-3
Fatal Errors 5-3
Non-Fatal Errors 5-3
The Setup Utility 5-4
Entering Setup 5-4
Setup Screens 5-5
Main Menu 5-6
System Time & Date (Main Menu) 5-6
System/Extended Memory: (Main Menu) 5-7
BIOS Revision/VGA Card etc. (Main Menu) 5-7
Advanced Menu 5-8
Advanced Chipset Control (Advanced Menu) 5-8
SATA Mode Selection (Advanced Menu) 5-9
Legacy USB Support: (Advanced Menu) 5-9
Boot-time Diagnostic Screen: (Advanced Menu) 5-9
Reset Configuration Data (Advanced Menu) 5-9
Power On Boot Beep (Advanced Menu) 5-10
Battery Low Alarm Beep: (Advanced Menu) 5-10
Advanced Chipset Control Menu 5-11
Bluetooth Power Setting >
Advanced Chipset Control 5-11
Intel Virtualization Technology >
Advanced Chipset Control 5-12
Hyperthreading > Advanced Chipset Control 5-12
CPU C State > Advanced Chipset Control 5-12
Turbo Boost > Advanced Chipset Control 5-12
Security Menu 5-13
Set Supervisor Password (Security Menu) 5-13
Set User Password (Security Menu) 5-14
Password on boot (Security Menu) 5-14
TPM State 5-15
Change TPM State (TPM State) 5-15
Boot Menu 5-17
Exit Menu 5-18

Downloaded from LpManual.com Manuals

Upgrading The Computer

Overview 6-1
When Not to Upgrade 6-2
Removing the Battery 6-3
Upgrading the Hard Disk Drive(s) 6-4
Upgrading the Optical (CD/DVD) Device 6-13
Upgrading the System Memory (RAM) 6-14

Modules

Overview 7-1
Setting Up SATA RAID Mode 7-2
AHCI Mode 7-2
RAID 7-2
Intel® Rapid Storage Technology Application 7-2
SATA RAID Setup Procedure (BIOS) 7-4
RAID Setup (Intel Matrix) 7-5
Intel Rapid Storage Technology 7-8
IRST Driver Installation 7-8
RAID Volume Data Verification and Repair 7-10
Replacing and Reverting Recovery and Master Volumes 7-10
RAID Volume Data Verification and Repair 7-12
Replacing and Reverting Recovery and Master Volumes 7-12
Wireless LAN Module 7-15
Intel® Wi-Fi Link Series Driver Installation 7-16
802.11b/g/n Driver Installation 7-16
Connecting to a Wireless Network in Windows 7 7-17
Intel® My WiFi Configuration 7-20
Windows Mobility Center 7-32
PC Camera Module 7-33
PC Camera Driver Installation 7-34
PC Camera Audio Setup 7-35
TV Tuner Module 7-41
Consumer Infrared Driver 7-42
Digital TV Broadcast Signal 7-43
TV Recording and Power Plans 7-43
Remote Control Unit 7-43
Bluetooth Module 7-44
3rd Party Bluetooth Combo Driver Installation 7-46
3rd Party Bluetooth & WLAN Combo Settings 7-47
Bluetooth Networking Setup 7-50
Bluetooth & WLAN Combo Module Configuration 7-51
Intel Bluetooth Combo Driver Installation 7-54
Bluetooth Configuration in Windows 7 7-55
Security Modules (Fingerprint & TPM) 7-59
Fingerprint Reader Module 7-60
Fingerprint Reader Driver Installation 7-60
User Enrollment 7-61
Fingerprint Control Center Features 7-64

Downloaded from LpManual.com Manuals

Trusted Platform Module 7-65
Enabling & Activating TPM 7-65
Trusted Platform Module (TPM) Driver Installation .. 7-67
Initializing TPM 7-67
Infineon Security Platform Settings Tool 7-70

Troubleshooting

Overview 8-1
Basic Hints and Tips 8-2
Backup and General Maintenance 8-3
Viruses 8-4
Upgrading and Adding New Hardware/Software 8-5
Problems & Possible Solutions 8-7
Bluetooth Connection Problems 8-15
Intel® WLAN & Bluetooth V3.0+HS
Combo Modules 8-19

Interface (Ports & Jacks)

Overview A-1
Ports and Jacks A-2
Card Reader A-2
Cable (CATV) A-2
Antenna Jack A-2
Consumer Infrared Transceiver A-2
DC-In Jack A-2
DVI-Out Port A-2
e-SATA Port A-3
HDMI-Out Port A-3
Headphone-Out Jack A-3
Line-In Jack A-3
Microphone-In Jack A-3
Mini-IEEE 1394b Port A-4
RJ-45 LAN Jack A-4
S/PDIF-Out Jack A-4
Security Lock Slot A-4
USB 2.0/1.1 Ports A-5
USB 3.0 Port A-5

NVIDIA Video Driver Controls

NVIDIA Video Driver Installation B-1
NVIDIA Control Panel (Win 7) B-2
Display Devices B-5
Display Modes B-6
Attaching Other Displays (Win 7) B-11
SLI Multi GPU Configuration B-14
SLI Multi GPU Configuration & Battery Power B-15
Enabling TV Display B-16

Downloaded from LpManual.com Manuals

AMD Video Driver Controls

Video Driver Installation C-1
Video (VGA) C-1
Catalyst™ Control Center C-2
Catalyst™ Control Center Preferences C-3
Display Devices & Options C-7
Configuring an External Display In the CCC C-8
Configuring an External Display In Windows 7 ..... C-12
HDMI Audio Configuration C-17

Specifications

Processor D-2
Core Logic D-2
Display D-2
Memory D-2
Video Adapter Options D-2
Video Adapter Options D-2
Video Adapter Options D-3
Video Adapter Options D-3
Video Adapter Options D-3
BIOS D-3
Storage D-4
Audio D-4
Keyboard & Pointing Device D-4
Slots D-4
Card Reader D-4
Interface D-4
Communication D-5
Security D-5
Operating System D-5
Power Management D-5
Power D-5
Environmental Spec D-5
Physical Dimensions & Weight D-5

Downloaded from LpManual.com Manuals

Chapter 1: Quick Start Guide

Overview

This Quick Start Guide is a brief introduction to the basic features of your computer, to navigating around the computer and to getting your system started. The remainder of the manual covers the following:

- **Chapter 2** A guide to using some of the main features of the computer e.g. the **storage devices** (**hard disk**, **optical device**, **card reader**), **TouchPad** & **Mouse, Audio Features** & **Printer**.
- **Chapter 3** The computer's **power** management options.
- **Chapter 4** The installation of the **drivers** and utilities essential to the operation or improvement of some of the computer's subsystems.
- **Chapter 5** An outline of the computer's built-in software or **BIOS** (Basic Input Output System).
- **Chapter 6** Instructions for **upgrading** your computer.
- **Chapter 7** A quick guide to the computer's **RAID**, **Wireless LAN, PC Camera, TV Tuner, Bluetooth & WLAN Combo** and **Security (Fingerprint and TPM)** modules (some of which may be **optional** depending on your purchase configuration).
- **Chapter 8** A **troubleshooting** guide.
- **Appendix A** Definitions of the **interface**, **ports**/**jacks** which allow your computer to communicate with external devices.
- **Appendix B** Information on the **NVIDIA** Video driver controls.
- **Appendix C** Information on the **AMD** Video driver controls.
- **Appendix D** The computer's **specification**.

Downloaded from LpManual.com Manuals

Advanced Users

If you are an advanced user you may skip over most of this Quick Start Guide. However you may find it useful to refer to *"Drivers & Utilities" on page 4 - 1*, *"BIOS Utilities" on page 5 - 1* and *"Upgrading The Computer" on page 6 - 1* in the User's Manual. You may also find the notes marked with a ✎ of interest to you.

Notes

Check the light colored boxes with the mark above to find detailed information about the computer's features.

Beginners and Not-So-Advanced Users

If you are new to computers (or do not have an advanced knowledge of them) then the information contained in this Quick Start Guide should be enough to get you up and running. Eventually you should try to look through all the documentation (more detailed descriptions of the functions, setup and system controls are covered in the remainder of the User's Manual), but do not worry if you do not understand everything the first time. Keep this manual nearby and refer to it to learn as you go. You may find it useful to refer to the notes marked with a ✎ as indicated in the margin. For a more detailed description of any of the interface ports and jacks see *"Interface (Ports & Jacks)" on page A - 1*.

Warning Boxes

No matter what your level please pay careful attention to the warning and safety information indicated by the symbol. Also please note the safety and handling instructions as indicated in the *Preface*.

Downloaded from eManual.com Manuals

Not Included

Operating Systems (e.g. *Windows 7*) and applications (e.g. word processing, spreadsheet and database programs) have their own manuals, so please consult the appropriate manuals.

Drivers

If you are installing new system software, or are re-configuring your computer for a different system, you will need to install the appropriate drivers. Drivers are programs which act as an interface between the computer and a hardware component e.g. a wireless network module. It is very important that you install the drivers in the order listed in ***Table 4 - 1, on page 4 - 3***. You will be unable to use most advanced controls until the necessary drivers and utilities are properly installed. If your system hasn't been properly configured (your service representative may have already done that for you), refer to ***"Drivers & Utilities" on page 4 - 1*** for installation instructions.

Ports and Jacks

See ***"Ports and Jacks" on page A - 2*** for a description of the interface (ports & jacks) which allow your computer to communicate with external devices, connect to the internet etc.

Downloaded from LpManual.com Manuals

TV Tuner Module Support

Note that the TV Tuner module (factory) option is supported by the **Windows Media Center** software. **Windows Media Center** is not included in **Starter** or **Home Basic** versions of ***Windows 7***.

System Software

Your computer may already come with system software pre-installed. Where this is not the case, or where you are re-configuring your computer for a different system, you will find the ***Windows 7*** operating system is supported.

Note: In order to run ***Windows 7*** without limitations or decreased performance, your computer requires a minimum **1GB** of system memory (RAM).

RAID & AHCI Setup

Note that setting up a RAID, or AHCI mode, needs to be done prior to installing the *Windows OS* (see ***"Setting Up SATA RAID Mode" on page 7 - 2***).

Downloaded from ePcManual.com Manuals

System Startup

1. Remove all packing materials, and place the computer on a stable surface.
2. Securely attach any peripherals you want to use with the notebook (e.g. keyboard and mouse) to their ports.
3. Attach the AC/DC adapter to the DC-In jack at the rear of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter.
4. Use one hand to raise the lid/LCD to a comfortable viewing angle (it is preferable not to exceed 135 degrees); use the other hand (as illustrated in ***Figure 1 - 1*** below) to support the base of the computer (**Note**: **Never** lift the computer by the lid/LCD).
5. Raise the lid/LCD to a comfortable viewing angle, and press the power button.

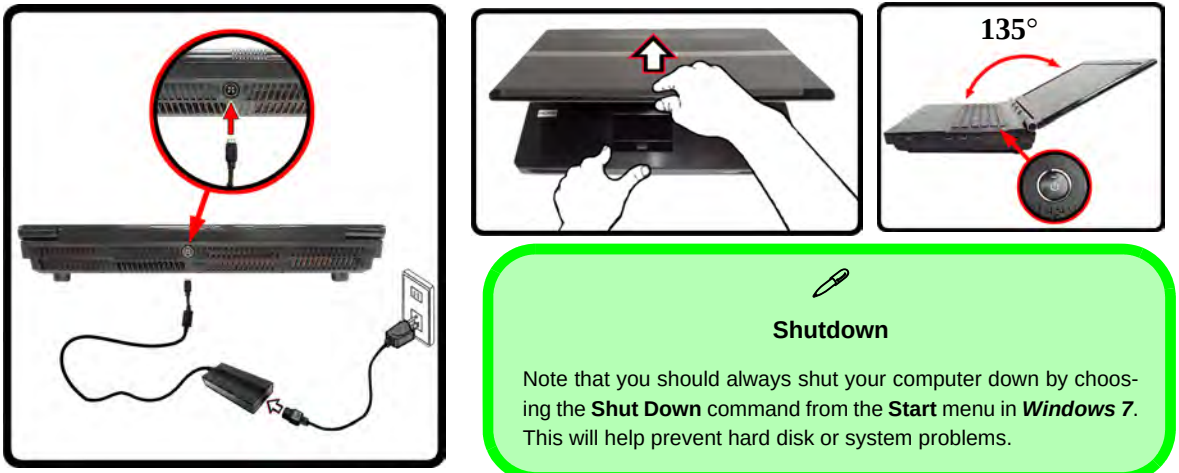

Shutdown

Note that you should always shut your computer down by choosing the **Shut Down** command from the **Start** menu in ***Windows 7***. This will help prevent hard disk or system problems.

Figure 1 - 1 **- Computer with AC/DC Adapter Plugged-In/Opening the Lid/LCD**

Downloaded from LpManual.com Manuals

System Map: LCD Panel Open & Top View

Figure 1 - 2
LCD Panel Open & Top View

1. Built-In PC Camera
2. Built-In Microphone
3. LCD
4. LED Status Indicators
5. Touch Sensor Instant Keys
6. Speakers
7. Power Button
8. Keyboard
9. TouchPad and Buttons
10. Fingerprint Reader Module
11. LCD Panel Color LED



Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices (e.g. WLAN or Bluetooth) aboard aircraft is usually prohibited. Make sure any wireless modules are OFF if you are using the computer aboard aircraft.

Use the appropriate function key combination to toggle power to any wireless modules, and check the indicators to see if any modules are powered on or not (see ***Table 1 - 3, on page 1 - 8***).

Downloaded from Laptopmanuals.com Manuals

LED Indicators

The LED indicators display helpful information about the current status of the computer.

Icon	Color	Description
	Blue	Scroll Lock is Activated
	Blue	Caps Lock is Activated
	Blue	Number Lock is Activated
	Blinking Blue	Hard Disk Activity

Table 1 - 1 **- LED Status Indicators**

Icon	Color	Description
	Orange	DC Power is Plugged In
	Green	The Computer is On
	Blinking Green	The Computer is In Sleep Mode
	Orange	The Battery is Charging
	Blinking Orange	The Battery has Reached Critically Low Power Status
	Green	The Battery is Fully Charged

Table 1 - 2 **- LED Power Indicators**

Downloaded from LpManual.com Manuals

Touch Sensor Instant Keys

Press the Touch Sensor Instant Keys on the computer to toggle the appropriate function on/off. When a module is powered on the appropriate icon will be highlighted blue.

Icon	Description
	Mute Toggle
	Bluetooth Module (**optional**) Power Toggle
	Wireless LAN Module (**optional**) Power Toggle
	PC Camera Module Power Toggle
V− V+	Volume Control (Press and hold your finger at either end V− / V+ of the volume control to adjust the system volume)

Table 1 - 3 **- Touch Sensor Instant Keys**

Note that you can also use the function key combinations for all of the functions above (see page ***1 - 10***).

Downloaded from Laptopmanuals.com manuals

Keyboard

The keyboard has an embedded numerical keypad for easy numeric data input, and features function keys to allow you to change operational features instantly. See *Table 1 - 4, on page 1 - 10* for full function key combination details.

Figure 1 - 3 **- Keyboard**

Special Characters

Some software applications allow the number-keys to be used with **Alt** to produce special characters. These special characters can only be produced by using the numeric keypad. Regular number keys (in the upper row of the keyboard) will not work. Make sure that **NumLk** is on.

Other Keyboards

If your keyboard is damaged or you just want to make a change, you can use any standard USB keyboard. The system will detect and enable it automatically. However special functions/hot-keys unique to the system's regular keyboard may not work.

Num Lk & Scr Lk

Hold down the **Fn Key** and Scr Lk/Num Lk to enable scroll lock/number lock, and check the LED indicator for status.

Downloaded from LpManual.com Manuals

Function Keys & Visual Indicators

The **function keys** (F1 - F12 etc.) will act as **hot keys** when pressed while the **Fn** key is held down. In addition to the basic function key combinations; visual indicators (see the table below) are available when the Hot Key driver is installed (see ***"Hot Key" on page 4 - 8***). After installing the driver an icon will appear in the taskbar.

Keys	Function/Visual Indicators	Keys	Function/Visual Indicators
Fn + ~	Play/Pause (in Audio/Video Programs)	Fn +F8/F9	Brightness Decrease/ Increase
Fn + F1	Touchpad Toggle 	Fn + F10	PC Camera Power Toggle
Fn + F2	Turn LCD Backlight Off (Press a key to or use Touchpad to turn on)	Fn + F11	*WLAN Module Power Toggle
Fn + F3	Mute Toggle	Fn + F12	Bluetooth Module Power Toggle
Fn + F4	Sleep Toggle	Fn + NumLk	Number Lock Toggle
Fn +F5/F6	Volume Decrease/ Increase	Fn + ScrLk	Scroll Lock Toggle
Fn + F7	Display Toggle - DO NOT use when SLI is enabled	Fn + **5**	Audio Toggle - Toggle between Stereo and 5.1 Surround Sound Modes

Table 1 - 4 **- Function Keys & Visual Indicators**

Download Keyboard Manual.com Manuals

System Map: Front & Rear Views

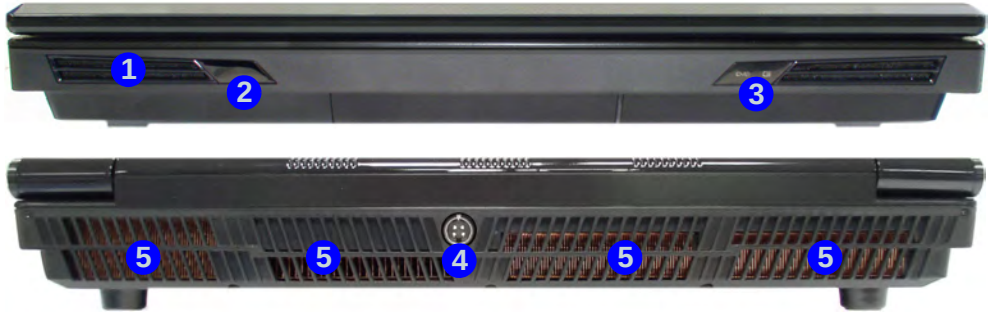

Figure 1 - 4
Front View

1. ExpressCard Slot (see page *2 - 7*)
2. Consumer Infrared Transceiver (enabled with optional TV Tuner only)
3. LED Power Indicators
4. DC-In Jack
5. Vent/Fan Intake

TV Tuner Module Support

Note that the TV Tuner module (factory) option is supported by the **Windows Media Center** software. **Windows Media Center** is not included in **Starter** or **Home Basic** versions of ***Windows 7***.

Downloaded from LpManual.com Manuals

System Map: Right View

Figure 1 - 5
Right View

1. Line-In Jack
2. S/PDIF-Out Jack
3. Microphone-In Jack
4. Headphone-In Jack
5. 3 * USB 2.0 Ports
6. Security Lock Slot

USB Ports

Note that the connections to the USB ports only fit one way, do not force them.

USB 2.0 or 3.0 Ports

USB 3.0 ports are denoted by their blue color; USB 2.0 ports are colored black.

Downloaded from Service Manuals Online

System Map: Left View

Figure 1 - 6
Left View

1. Speaker
2. DVI-Out Port
3. Cable (CATV) Antenna Jack*
4. RJ-45 LAN Jack
5. HDMI-Out Port
6. 2 * USB 3.0 Ports
7. eSATA Port
8. Mini-IEEE 1394b Port
9. 9-in-1 Card Reader
10. Optical Device Drive Bay

*Enabled with **Optional** Mini-PCI TV Tuner Only

USB 3.0 Ports

USB 3.0 ports are denoted by their blue color; USB 2.0 ports are colored black. Note that **the USB 3.0 port requires a driver installation** (see ***"USB 3.0" on page 4 - 7***), does not support wake on USB and is not operational under DOS.

9-in-1 Card Reader

The card reader allows you to use the most popular digital storage card formats:

MMC (MultiMedia Card) / RSMMC
SD (Secure Digital) / Mini SD / SDHC / *SDXC Compatible*
MS (Memory Stick) / MS Pro / MS Duo

HDMI Ports

Note that the HDMI Ports support video and audio signals to attached external displays (also see ***"HDMI Ports" on page 2 - 7***).

Mini-IEEE 1394b Port

The Mini-IEEE 1394b port only supports **SELF POWERED** IEEE 1394 devices.

Downloaded from LpManual.com Manuals

Disk Eject Warning

Don't try to eject a CD/DVD while the system is accessing it. This may cause the system to "crash". Stop the disk first then eject it, or press the stop button twice.

CD/DVD Emergency Eject

If you need to manually eject a CD/DVD (e.g. due to an unexpected power interruption) you may push the end of a straightened paper clip into the emergency eject hole. Do not use a sharpened pencil or any object that may break and become lodged in the hole. Don't try to remove a floppy disk/CD/DVD while the system is accessing it. This may cause the system to "crash".

Changing DVD Regional Codes

Go to the **Control Panel** and double-click **Device Manager (Hardware and Sound)**, then click the **+** next to **DVD/CD-ROM drives**. Double-click on the DVD-ROM device to bring up the **Properties** dialog box, and select the **DVD Region** (tab) to bring up the control panel to allow you to adjust the regional code.

DVD region detection is device dependent, not OS-dependent. You can select your module's region code **5** times. The fifth selection is permanent. This cannot be altered even if you change your operating system or you use the module in another computer.

1 - 14 System Map: Left View

Downloaded from Service Manuals Online

System Map: Bottom View

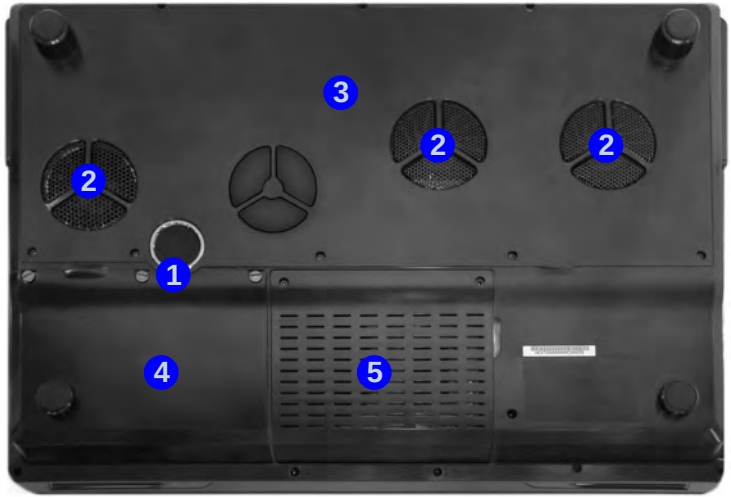

Figure 1 - 7
Bottom View

1. Sub Woofer
2. Fan Outlet/Intake
3. Component Bay Cover
4. Battery (Secondary HDD Bay - HDD3)
5. Primary HDD Bay (HDD1 & 2)

Battery Information

Always completely discharge, then fully charge, a new battery before using it. Completely discharge and charge the battery at least once every 30 days or after about 20 partial discharges. See *"Battery Information" on page 3 - 10* for full instructions.

Overheating

To prevent your computer from overheating make sure nothing blocks the vent(s)/fan intake(s) while the computer is in use.

Downloaded from LpManual.com Manuals

Windows 7 Start Menu & Control Panel

Most of the control panels, utilities and programs within ***Windows 7*** (and most other ***Windows*** versions) are accessed from the **Start** menu. When you install programs and utilities they will be installed on your hard disk drive, and a shortcut will usually be placed in the **Start** menu and/or the desktop. Right-click the **Start menu** icon , and then select **Properties** if you want to customize the appearance of the **Start** menu.

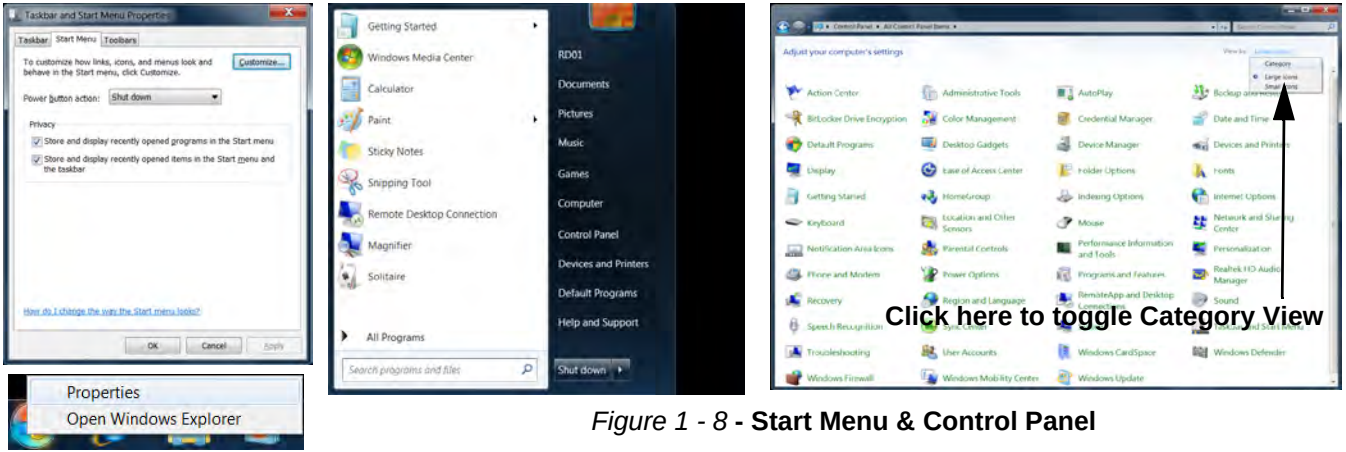

Figure 1 - 8 **- Start Menu & Control Panel**

In many instances throughout this manual you will see an instruction to open the **Control Panel**. The **Control Panel** is accessed from the **Start** menu, and it allows you to configure the settings for most of the key features in ***Windows*** (e.g. power, video, network, audio etc.). ***Windows 7*** provides basic controls for many of the features, however many new controls are added (or existing ones are enhanced) when you install the drivers. To see all controls it may be necessary to toggle off ***Category View*** to view the control panel icons.

Downloaded from ManualsPrinter.com Manuals

Video Features

This computer features two different (either **AMD** or **NVIDIA**) video options. You can switch display devices, and configure display options, from the **Display** control panel (in **Appearances and Personalization**) in ***Windows 7***.

To access **Display (Control Panel) and Screen Resolution** in ***Windows***:

1. Click **Start** and click **Control Panel**.
2. Click **Display** (icon) - In the **Appearances and Personalization** category.
3. Click **Adjust Screen Resolution/Adjust resolution**.

OR

4. Alternatively you can right-click the desktop and select **Screen resolution** 1 (*Figure 1 - 9 on page 1 - 18*).
5. Use the dropbox to select the screen **Resolution** 2 (*Figure 1 - 9 on page 1 - 18*).

NVIDIA & AMD Video Controls

More detailed video controls are provided by the **NVIDIA Control Panel** or **Catalyst Control Center**. For more detailed information see see *"NVIDIA Control Panel" on page 1 - 19*/*"Catalyst Control Center" on page 1 - 20* and *Appendix B* or *Appendix C*.

You can also access the control panels by right-clicking the desktop and selecting **NVIDIA Control Panel/Catalyst (TM) Control Center** (*Figure 1 - 10 on page 1 - 19*/*Figure 1 - 11 on page 1 - 20*).

Downloaded from LpManual.com Manuals

Screen Resolution

Video Options

Note that card types, specifications and drivers are subject to continual updates and changes. Check with your service center for the latest details on video cards supported.

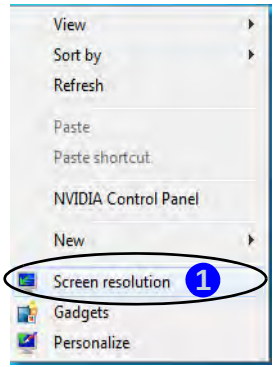

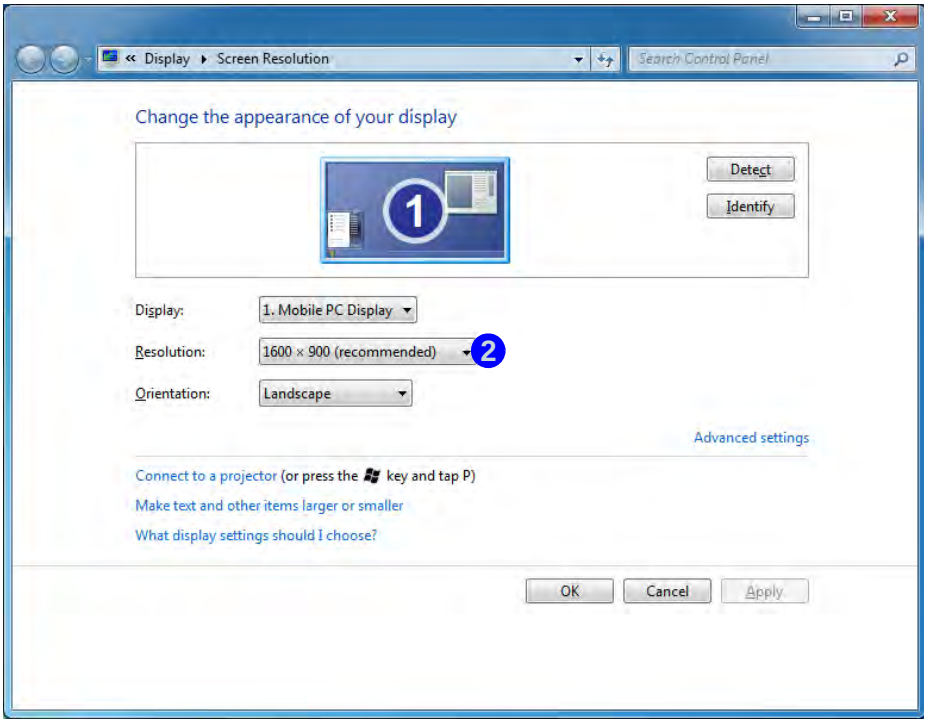

Figure 1 - 9 **- Screen Resolution**

Downloaded from Clevo Preinstallation Manuals

NVIDIA Control Panel

You can access the **NVIDIA Control Panel** as follows:

1. Click **Start**, and click **Control Panel**.
2. Click **NVIDIA Control Panel** 1 (*Figure 1 - 10*) - In the **Appearances and Personalization** category.
3. See *"NVIDIA Video Driver Controls" on page B - 1* for full details on control panels etc.

OR

4. You can also access the control panel by right-clicking the desktop and selecting **NVIDIA Control Panel** 2.

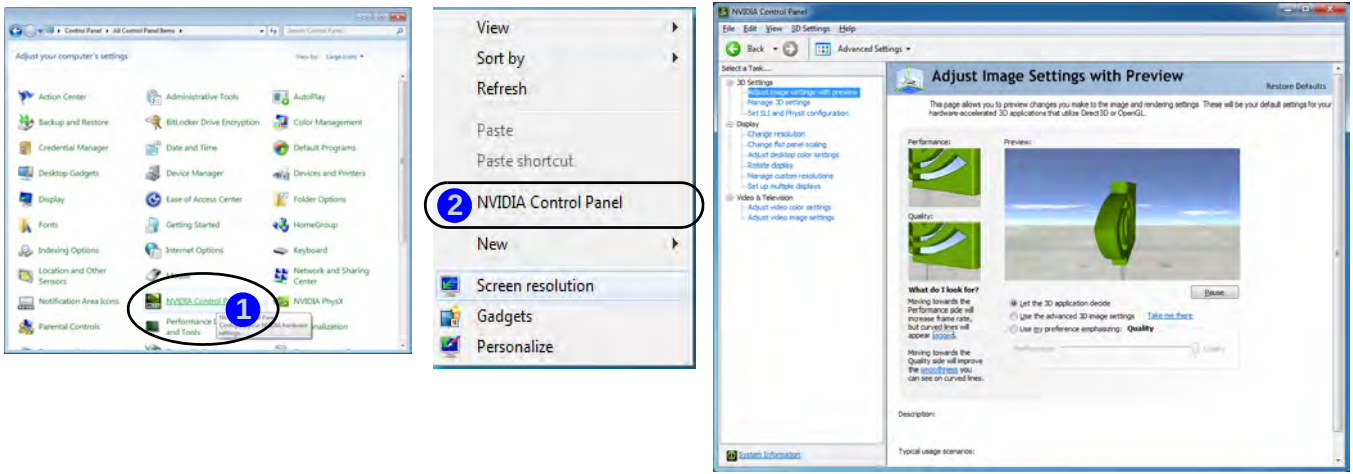

Figure 1 - 10 **- NVIDIA Control Panel**

Downloaded from LpManual.com Manuals

Catalyst Control Center

You can access the **Catalyst™ Control Center** as follows:

1. Right-click the desktop and select **Catalyst Control Center** 1 (***Figure 1 - 11***).
   OR
2. Double-click the icon 2 (***Figure 1 - 11***) in the ***Windows*** notification area (or right-click the icon and select **Catalyst Control Center**).
3. See ***"AMD Video Driver Controls" on page C - 1*** for full details on control panels etc.

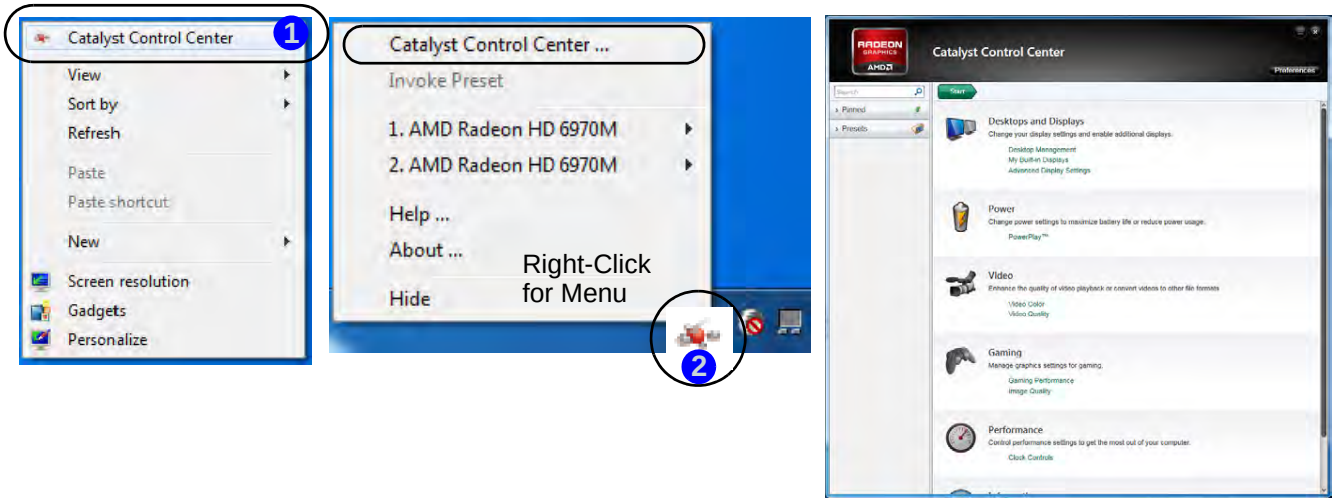

Figure 1 - 11 **- Catalyst Control Center Access**

Downloaded from Clevo Preinstallation Manuals

Power Options

The **Power Options** (**Hardware and Sound** menu) control panel icon in ***Windows*** (see page ***1 - 16***) allows you to configure power management features for your computer. You can conserve power by means of **power plans** and configure the options for the **power button**, **sleep button**, **computer lid (when closed)**, **display** and **sleep** mode from the left menu. Note that the **Power saver** plan may have an affect on computer performance.

Click to select one of the existing plans, or click ***Create a power plan*** in the left menu and select the options to create a new plan. Click ***Change plan settings*** and click ***Change advanced power settings*** to access further configuration options.

Pay attention to the instructions on battery care in ***"Battery Information" on page 3 - 10***.

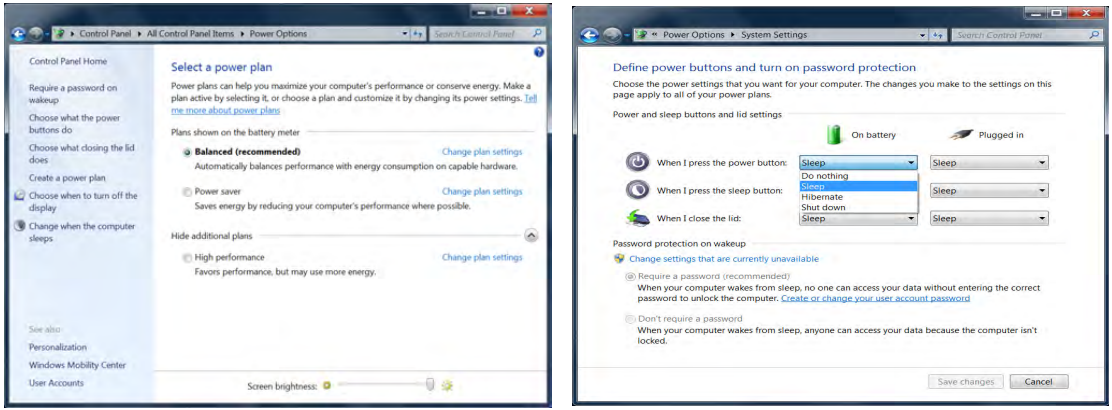
Control Panel ▸ All Control Panel Items ▸ Power Options
Control Panel Home
Require a password on wakeup
Choose what the power buttons do
Choose what closing the lid does
Create a power plan
Choose when to turn off the display
Change when the computer sleeps
Select a power plan
Power plans can help you maximize your computer's performance or conserve energy. Make a plan active by selecting it, or choose a plan and customize it by changing its power settings. Tell me more about power plans
Plans shown on the battery meter
Balanced (recommended)
Automatically balances performance with energy consumption on capable hardware.
Change plan settings
Power saver
Saves energy by reducing your computer's performance where possible.
Change plan settings
Hide additional plans
High performance
Favors performance, but may use more energy.
Change plan settings
See also
Personalization
Windows Mobility Center
User Accounts
Screen brightness:
Power Options ▸ System Settings
Define power buttons and turn on password protection
Choose the power settings that you want for your computer. The changes you make to the settings on this page apply to all of your power plans.
Power and sleep buttons and lid settings
On battery
Plugged in
When I press the power button:
When I press the sleep button:
When I close the lid:
Sleep
Do nothing
Sleep
Hibernate
Shut down
Password protection on wakeup
Change settings that are currently unavailable
Require a password (recommended)
When your computer wakes from sleep, no one can access your data without entering the correct password to unlock the computer. Create or change your user account password
Don't require a password
When your computer wakes from sleep, anyone can access your data because the computer isn't locked.
Save changes
Cancel

Figure 1 - 12 **- Power Options**

Downloaded from LpManual.com Manuals

Downloaded from LpManual.com Manuals

Chapter 2: Storage Devices, Mouse, Audio & Printer

Overview

Read this chapter to learn more about the following main features and components of the computer:

- Hard Disk Drive
- Optical Device
- Multi-In-1 Card Reader
- ExpressCard Slot
- Audio Features
- HDMI Audio Configuration
- Adding a Printer

Downloaded from LpManual.com Manuals

Power Safety

Before attempting to access any of the internal components of your computer please ensure that the machine is not connected to the AC power, and that the machine is turned off. Also ensure that all peripheral cables, including phone lines, are disconnected from the computer.

Hard Disk Drive

The hard disk drive(s) issuer) used to store your data in the computer. The hard disks) can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 9.5 mm. The primary hard disk bay 1 is accessible from the bottom of your computer as seen below, and the secondary hard disk bay 2 is located under the battery compartment.

The computer can accommodate up to three hard disks (two in the primary bay, and one in the secondary bay), and these may be configured in **RAID** or **AHCI** modes. Further details on removing and inserting the hard disk are available in ***"Upgrading the Hard Disk Drive(s)" on page 6 - 4***.

Figure 2 - 1
Hard Disk Location

Downloaded from Laptop Manuals

Optical Device

There is a bay for a 5.25" optical (CD/DVD) device (12.7mm height). The actual device will depend on the model you purchased (see *"Storage" on page D - 3*). The optical device is usually labeled "**Drive D:**" and may be used as a boot device if properly set in the **BIOS** (see *"Boot Menu" on page 5 - 15*).

Loading Discs

To insert a CD/DVD, press the open button 1 and carefully place a CD/DVD onto the disc tray with label-side facing up (use just enough force for the disc to click onto the tray's spindle). Gently push the CD/DVD tray in until its lock "clicks" and you are ready to start. The busy indicator 2 will light up while data is being accessed, or while an audio/video CD, or DVD, is playing. If power is unexpectedly interrupted, insert an object such as a straightened paper clip into the emergency eject hole 3 to open the tray.

Sound Volume Adjustment

How high the sound volume can be set depends on the setting of the volume control within ***Windows***. Click the **Volume** icon on the taskbar to check the setting.

Peripherals must be connected before you turn on the system.

Figure 2 - 2
Optical Device

Downloaded from LpManual.com Manuals

CD Emergency Eject

If you need to manually eject a CD (e.g. due to an unexpected power interruption) you may push the end of a straightened paper clip into the emergency eject hole. However please do NOT use a sharpened pencil or similar object that may break and become lodged in the hole.

Disk Eject Warning

Don't try to remove a CD/DVD while the system is accessing it. This may cause the system to "crash".

Handling CDs or DVDs

Proper handling of your CDs/DVDs will prevent them from being damaged. Please follow the advice below to make sure that the data stored on your CDs/DVDs can be accessed.

Note the following:

- Hold the CD or DVD by the edges; do not touch the surface of the disc.
- Use a clean, soft, dry cloth to remove dust or fingerprints.
- Do not write on the surface with a pen.
- Do not attach paper or other materials to the surface of the disc.
- Do not store or place the CD or DVD in high-temperature areas.
- Do not use benzene, thinner, or other cleaners to clean the CD or DVD.
- Do not bend the CD or DVD.
- Do not drop or subject the CD or DVD to shock.

Downloaded from ServiceManuals.com Manuals

DVD Regional Codes

To change the DVD regional codes see *"Changing DVD Regional Codes" on page 1 - 14*.

DVD Regional Coding		
Region	**Geographical Location**	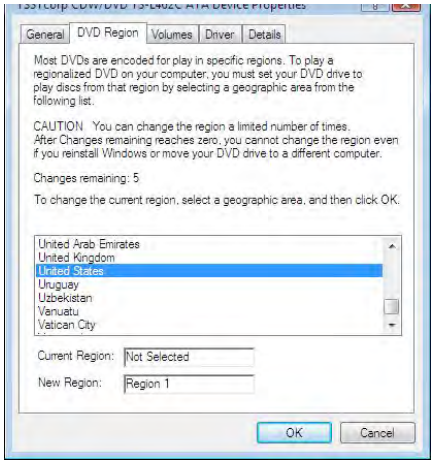
1	USA, Canada	
2	Western Europe, Japan, South Africa, Middle East & Egypt	
3	South-East Asia, Taiwan, South Korea, The Philippines, Indonesia, Hong Kong	
4	South & Central America, Mexico, Australia, New Zealand	
5	N Korea, Russia, Eastern Europe, India & Most of Africa	
6	China	

General
DVD Region
Volumes
Driver
Details
Most DVDs are encoded for play in specific regions. To play a regionalized DVD on your computer, you must set your DVD drive to play discs from that region by selecting a geographic area from the following list.
CAUTION: You can change the region a limited number of times. After Changes remaining reaches zero, you cannot change the region even if you reinstall Windows or move your DVD drive to a different computer.
Changes remaining: 5
To change the current region, select a geographic area, and then click OK.
United Arab Emirates
United Kingdom
United States
Uruguay
Uzbekistan
Vanuatu
Vatican City
Current Region:
Not Selected
New Region:
Region 1
OK
Cancel

Table 2 - 1
DVD Regional Coding

Downloaded from LpManual.com Manuals

Card Reader Cover

Make sure you keep the cover in the card reader when not in use. This will help prevent foreign objects and/or dust getting in to the card reader.

Multi-In-1 Card Reader

The card reader allows you to use some of the latest digital storage cards. Push the card into the slot and it will appear as a removable device, and can be accessed in the same way as your hard disk (s). Make sure you install the card reader driver (see *"Card Reader" on page 4 - 7*).

- MMC (MultiMedia Card) / RSMMC
- SD (Secure Digital) / Mini SD / SDHC / SDXC
- MS (Memory Stick) / MS Pro / MS Duo

Note: Some of these cards require PC adapters that are usually supplied with the cards.

Figure 2 - 3
Right View

1. Card Reader

Downloaded from Laptopmanuals.com Readers

ExpressCard Slot

The computer is equipped with an **ExpressCard/34** slot that reads Express Card/34 formats. ExpressCards are the successors to PCMCIA (PC Cards).

Inserting and Removing ExpressCards

- Press the cover to eject it before inserting an ExpressCard.
- Align the ExpressCard with the slot and push it in until it locks into place.
- To remove an ExpressCard, simply press the card to eject it.

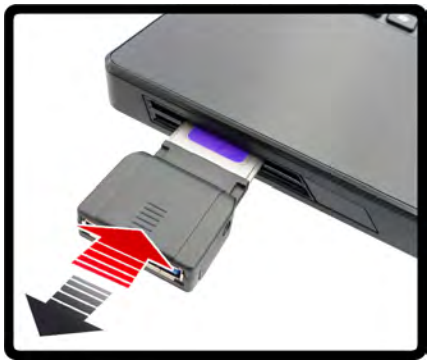

ExpressCard Slot Cover

Make sure you keep the cover in the ExpressCard slot when not in use. This will help prevent foreign objects and/or dust getting in to the ExpressCard Slot.

Figure 2 - 4
Express Card Slot

1. ExpressCard Slot

Downloaded from LpManual.com Manuals

Sound Volume Adjustment

The sound volume level is set using the volume control within ***Windows*** (and the volume function keys on the computer). Click the volume icon in the taskbar to check the setting.

Figure 2 - 5
Realtek Audio Manager

Audio Features

You can configure the audio options on your computer from the **Sound** control panel in ***Windows***, or from the **Realtek HD Audio Manager** icon in the taskbar/ control panel (right-click the taskbar icon to bring up an audio menu). The volume may also be adjusted by means of the **Fn** + **F5/F6** key combination or by pressing your finger on either end of the Touch Sensor volume control (see ***Table 1 - 3, on page 1 - 8***).

Right-click the icon to access the menu above.

See ***"HDMI Audio Configuration" on page 2 - 13*** for a description of the audio configuration when connecting an HDMI supported display device.

Downloaded from Service Manuals

Setup for Audio Recording

To record audio sources on your computer at optimum quality follow the instructions below:

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**) and make sure you are in **Classic View**.
2. Click **Realtek HD Audio Manager** (or right-click the taskbar icon and select **Sound Manager**).
3. Click **Microphone Effects** (tab) in **Microphone** (tab), and then click to select **Noise Suppression** (button), or adjust the **Recording Volume** level to around **60**, to obtain the optimum recording quality.
4. Click **OK** to close the control panel and save the settings.

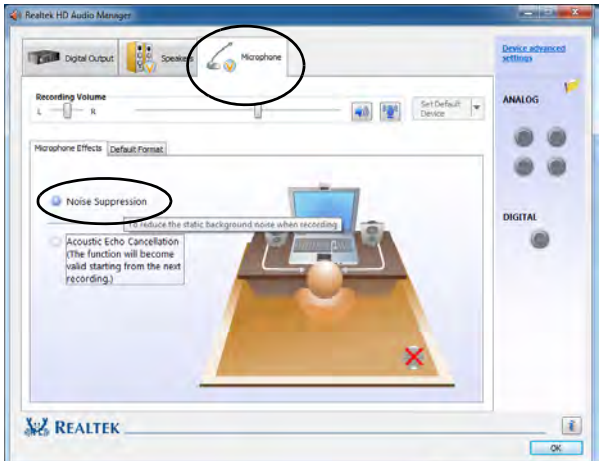

Figure 2 - 6
Realtek Audio Manager - Recording Setup

Downloaded from LpManual.com Manuals

Fn + 5 Audio Toggle

The **Fn + 5** key combination allows you to toggle the audio system between stereo and surround modes. The stereo mode will allow for a louder audio volume.

Note that if you have stereo mode enabled, and attempt to demo the speaker configuration, then the sound will only be enabled through the front and rear speakers.

Setup for 5.1 or 7.1 Surround Sound

To setup your system for 5.1 or 7.1 surround sound you will need to connect the audio cables to the Headphone-Out, Line-In, Microphone-In jack and S/PDIF-Out jacks (*note: the S/PDIF jack is used for 7.1 surround sound only*) .

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**) and make sure you are in **Classic View**.
2. Click **Realtek HD Audio Manager** (or right-click the taskbar icon and select **Sound Manager**).
3. Click **Speakers** (tab) and click **Speaker Configuration** (tab).
4. Select **5.1 or 7.1 Speaker** from the **Speaker Configuration** pull-down menu.

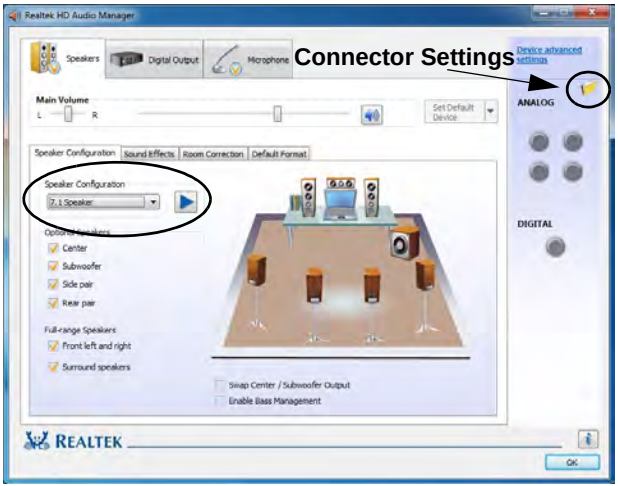

Figure 2 - 7
Speaker Configuration (7.1)

Auto Popup Dialog

You should enable the auto popup dialog to automatically detect when a device has been plugged-in. If disabled, double-click **connector settings** and click the box to enable the auto popup detection of plugged-n devices.

Download from Service Manuals

5. Plug the **front speaker** cables into the **Headphone-Out Jack**.
6. Plug in the other cables (you may require an adapter to connect each cable to the appropriate jack e.g a stereo mini to dual RCA adapter) from your speakers as follows:

- Line-In Jack = Rear Speaker Out
- Microphone-In Jack = Center/Subwoofer Speaker Out
- S/PDIF-Out Jack = Side Speaker Out (**for 7.1 Surround Sound Only**)

7. As you plug in each cable a dialog box will pop up (see ***"Auto Popup Dialog" on page 2 - 10***).
8. Click to put a tick in the appropriate box according to the speaker plugged-in (e.g. Rear Speaker Out), and then click **OK** to save the setting.
9. Click **OK** to exit **Realtek HD Audio Manager**.

The current connected device is :
Which device did you plug in?
Rear Speaker Out
S/PDIF-Out
Enable auto popup dialog, when device has been plugged in
OK
The current connected device is :
Which device did you plug in?
Line In
Side Speaker Out
Enable auto popup dialog, when device has been plugged in
OK
The current connected device is :
Which device did you plug in?
Mic In
Center/Subwoofer Speaker Out
Enable auto popup dialog, when device has been plugged in
OK

Figure 2 - 8
Connected Device Auto Popup

Note: Side Speaker Out is required for 7.1 Surround only.

Downloaded from LpManual.com Manuals

Dolby Settings

You can adjust the Dolby settings from the Dolby tab in Speakers Properties.

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Click **Sound** (**Hardware and Sound**).
3. Click **Playback** (tab).
4. Double-click **Speakers** (or select **Properties** from the right-click menu).
5. Click **Dolby** (tab)
6. Adjust the settings to your preferences and click OK.

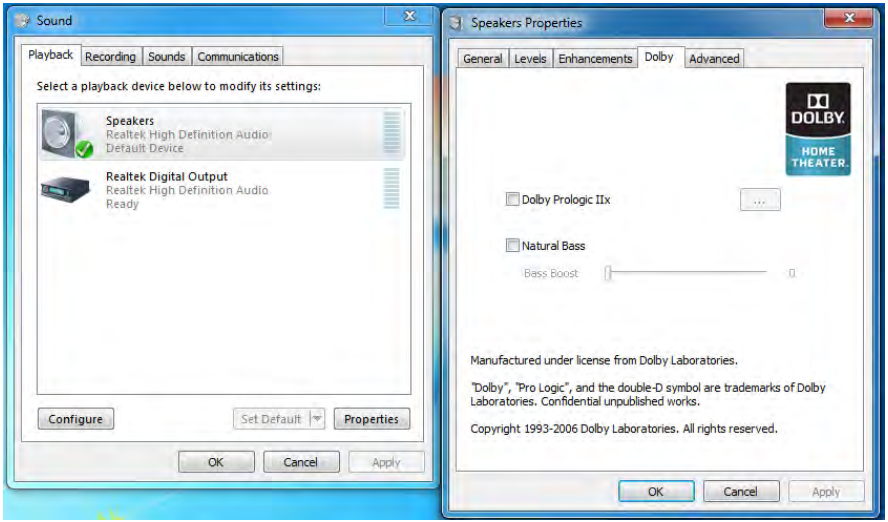

Figure 2 - 9
Speakers Properties Dolby Settings

Download from Www.Somanuals.com. All Manuals

HDMI Audio Configuration

As HDMI (High-Definition Multimedia Interface) carries both **audio** and video signals you can configure the audio output as per the instructions below.

Audio Setup for HDMI

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Click **Sound** (**Hardware and Sound**).
3. Click **Playback** (tab), and click to select **Realtek Digital Output.**
4. Click **Set Default** (button).
5. Click **OK** to close the **Sound** control panel.
6. Select **Speakers** as the default for standard audio sources.

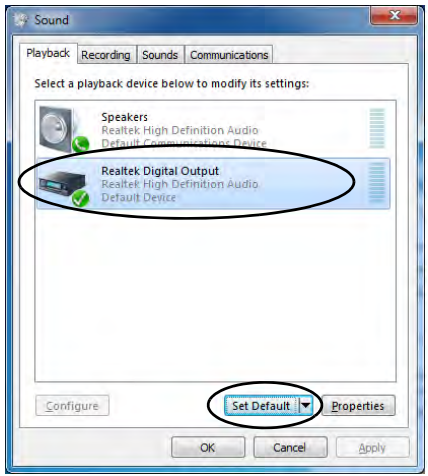

Figure 2 - 10
Sound Playback Options

Downloaded from LpManual.com Manuals

Audio Setup for LCD Monitors/TVs with HDMI Input

Some LCD monitors/TVs support HDMI input, but DO NOT have built-in digital audio decoders. Where this is the case, when playing DVDs in Windows Media Player/CyberLink Power DVD, a background noise can occur. If this situation does arise then please follow the instructions below.

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Click **Sound** (**Hardware and Sound**).
3. Double-click **Realtek Digital Output**.
4. Click **Supported Formats** (tab).
5. Click to disable (remove the check in the box) **DTS Audio** and **Dolby Digital**.
6. Click OK and close the control panels.

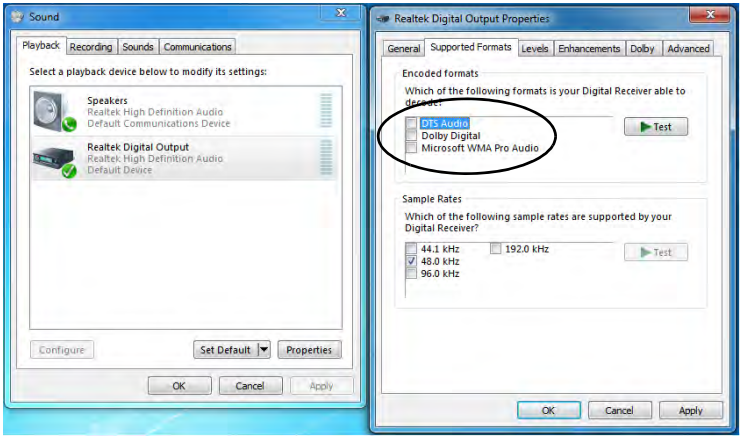

Figure 2 - 11
Sound
Supported Formats

Downloaded from ManualsNet.com Manuals

HDMI Notes

- Connect a device with HDMI support to the HDMI-Out port **BEFORE** attempting to play audio/video sources through the device.
- If you disconnect the HDMI cable the default audio playback device will not revert to speakers until the computer is restarted (if you do not wish to restart the computer then go to the **Sound** control panel and select **Speakers** as the default audio playback device).

HDMI Video Configuration

1. Connect an HDMI cable from the HDMI-Out port to your external display.
2. Configure your external display as per the instructions in ***"Configuring an External Display using the NVIDIA Control Panel" on page B - 7***.
3. Set up your external display (TV or LCD) for HDMI input (see your display device manual).
4. You can now play video/audio sources through your external display.

Other Applications

If you are using a third party application to play DVDs etc. you will need to consult the application's documentation to see the appropriate audio configuration (the application must support digital to analog translation).

Downloaded from LpManual.com Manuals

Mouse Driver

If you are using an external mouse your operating system may be able to auto-configure your mouse during its installation or only enable its basic functions. Be sure to check the device's user documentation for details.

TouchPad and Buttons/Mouse

The TouchPad is an alternative to the mouse; however, you can also add a mouse to your computer through one of the USB ports. The TouchPad buttons function in much the same way as a two-button mouse.

Download from Diakom.ua

Once you have installed the TouchPad driver (see *"TouchPad" on page 4 - 8*) you can configure the functions from the Mouse control panel in ***Windows***, or by double-clicking the TouchPad driver icon on the **taskbar**. You may then configure the TouchPad tapping, buttons, scrolling, pointer motion and sensitivity options to your preferences. You will find further information at www.synaptics.com.

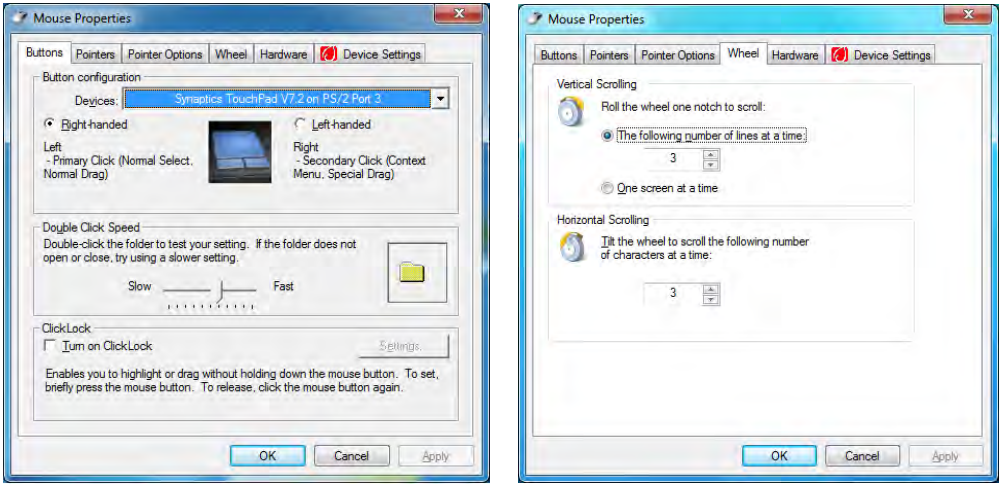

Figure 2 - 12
Mouse Properties

TouchPad Scrolling

This computer model series may feature different TouchPad versions.

These TouchPads may differ in their vertical scrolling function in most scrollable windows.

Some TouchPads require sliding the finger up and down on the right of the TouchPad to scroll the window. Other versions require tapping/holding down the finger at the top right or bottom right of the TouchPad to scroll the window.

Downloaded from LpManual.com Manuals

Show Video

You can get a clearer view of the gestures involved by clicking the **Show Video** option for each gesture item.

Select the gesture (**Pinch Zoom, Rotating, Three Fingers Down and Three Finger Flick**) in the **Device Settings > Settings** left tree menu and click the **Show Video** button to see the demonstration video.

For more details on any of the gestures see the **help** in the lower part of the right menu window.

Gestures and Device Settings

The Synaptics Gestures Suite application allows you to use a specific gesture (action) on the surface of the TouchPad to perform specific actions to manipulate documents, objects and applications.

You can configure the settings from the Device Settings tab in **Mouse Properties**:

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Click **Mouse** (**Hardware and Sound**).
3. Click **Device Settings** (tab) and click **Settings**.
4. Use the menu tree on the left to access the user configurable settings.

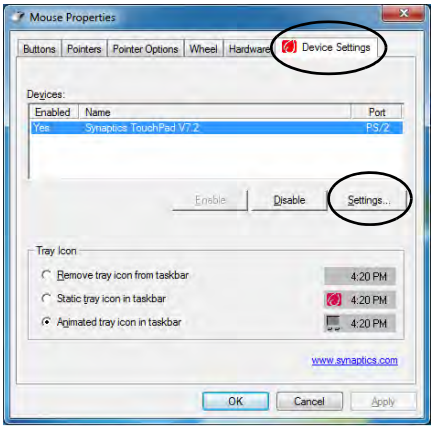

Properties for Synaptics TouchPad V7.2 on PS/2 Port 3
Select an item
Overview
Scrolling
Pinch Zoom
Rotating
Pointing
Buttons
Tapping
Application Gestures
Synaptics
This Properties window allows you to personalize your pointing device settings. Use the menu tree to the left to access the customizable features. These include single-finger pointing and scrolling options, plus multi-finger gestures to manipulate documents, objects, and applications.
Using the Properties Window
Click on a feature in the menu tree to see a page of descriptions and settings for that feature. Some features have several pages of settings. Click on the + (plus sign) next to a feature to see all its related pages. The settings will appear in the window to the right of the menu tree. Information about these options and instructions on how to change them will appear here in this information box. You can use the scroll bar to view the
Defaults
www.synaptics.com
OK
Cancel
Apply

Figure 2 - 13
Mouse Properties - Device Settings

Download from Upload Manuals

Scrolling

The Two-Finger scrolling feature works in most scrollable windows and allows you to scroll horizontally and vertically. Place two fingers, slightly separated, on the TouchPad surface and slide both fingers in the direction required (in a straight continuous motion).

Figure 2 - 14
Scrolling Gesture

Zooming

The Pinch Zoom gesture can be used to perform the same function as a scroll wheel in ***Windows*** applications that support CTRL + scroll wheel zoom functionality. Place two fingers on the TouchPad (for best results use the tips of the fingers) and slide them apart to zoom in, or closer together to zoom out.

Figure 2 - 15
Zooming Gesture

Downloaded from LpManual.com Manuals

Rotating

Use the Pivot Rotate gesture to rotate objects (e.g. photos) in 90 degree increments. Place a finger down on the left “target” zone and keep it stationary. Place another finger near the middle of the TouchPad and slide it in a circular motion around the stationary finger (clockwise or counterclockwise) to rotate the object.

Figure 2 - 16
Rotating Gesture

Three Finger-Flick/Three Fingers Down (Press)

The Three Finger-Flick gesture may be used to enhance navigation with a variety of applications such as browsing the Internet or scrolling through a photo viewer. The Three Fingers Down gesture may be used to launch user-selectable applications.

Figure 2 - 17
Flick/Press Gesture

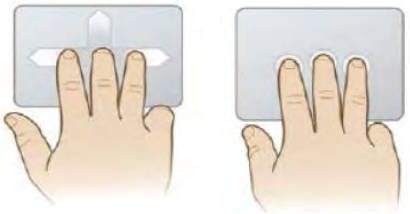

Downloaded from Spiritual Laptops Manuals

Adding a Printer

The most commonly used peripheral is a printer. The following conventions will help you to add a printer; however it is always best to refer to the printer manual for specific instructions and configuration options.

USB Printer

Most new printers have a USB interface connection. You may use any one of the ports to connect the printer.

Install Instructions:

1. Set up the printer according to its instructions (unpacking, paper tray, toner/ink cartridge etc.).
2. Turn ON the computer.
3. Turn ON the printer.
4. Connect the printer's USB cable to one of the USB ports on the computer.
5. ***Windows*** will identify the printer and either load one of its own drivers or ask you to supply one. Follow the on-screen instructions.

Parallel Printer

This is still a very common type of printer. The install instructions are in the sidebar (you will need to purchase a parallel to USB converter).

Parallel Printer

After setting up the printer attach the parallel cable to the printer.

Connect the printer's parallel cable to the Parallel to USB converter, and then plug the converter into the USB port.

Turn ON the printer, then turn ON the computer.

Windows will identify the printer and either load one of its own drivers or ask you to supply one. Follow the on-screen instructions.

Downloaded from LpManual.com Manuals

Downloaded from LpManual.com Manuals

Chapter 3: Power Management

Overview

To conserve power, especially when using the battery, your computer power management conserves power by controlling individual components of the computer (the monitor and hard disk drive) or the whole system.

This chapter covers:

- The Power Sources
- Turning On the Computer
- Power Plans
- Power-Saving States
- Configuring the Power Buttons
- Battery Information

The computer uses enhanced power saving techniques to give the operating system (OS) direct control over the power and thermal states of devices and processors. For example, this enables the OS to set devices into low-power states based on user settings and information from applications.

OS Note

Power management functions will vary slightly depending on your operating system. For more information it is best to refer to the user's manual of your operating system.

(**Note**: All pictures used on the following pages are from the ***Windows 7*** OS.)

Downloaded from LpManual.com Manuals

The Power Sources

The computer can be powered by either an AC/DC adapter or a battery pack.

AC/DC Adapter

Use only the AC/DC adapter that comes with your computer. The wrong type of AC/DC adapter will damage the computer and its components (see page ***D - 5***).

1. Attach the AC/DC adapter to the DC-In jack at the rear of the computer.
2. Plug the AC power cord into an outlet, and then connect the AC power cord to the AC/DC adapter.
3. Raise the lid/LCD to a comfortable viewing angle.
4. Press the power button to turn “On”.

Battery

The battery allows you to use your computer while you are on the road or when an electrical outlet is unavailable. Battery life varies depending on the applications and the configuration you're using. **To increase battery life, let the battery discharge completely before recharging** (see ***“How do I completely discharge the battery?” on page 3 - 14***).

We recommend that you do not remove the battery. For more information on the battery, please refer to ***“Battery Information” on page 3 - 10***.

Downloaded from Laptop Manuals - Manuals

Turning On the Computer

Now you are ready to begin using your computer. To turn it on simply press the power button on the front panel.

When the computer is on, you can use the power button as a Stand by/Hibernate/Shutdown hot-key button when it is pressed for less than **4 seconds** (pressing and holding the power button for longer than this will shut the computer down). Use **Power Options** in the ***Windows*** control panel to configure this feature.

Shut Down

Note that you should always shut your computer down by choosing the **Shut Down** command from the bottom right of the **Start** menu in ***Windows***. This will help prevent hard disk or system problems.

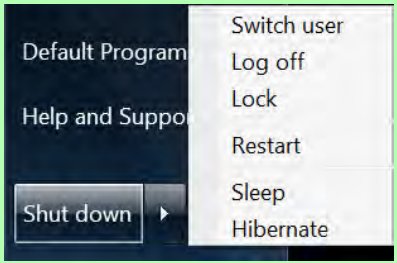

Forced Off

If the system "hangs", and the **Ctrl + Alt + Del** key combination doesn't work, press the power button for **4 seconds**, or longer, to force the system to turn itself off.

Power Button as Stand by or Hibernate Button

You can use the OS's **Power Options** control panel to set the power button to send the system into Stand by or Hibernate mode (see your OS's documentation, or ***"Configuring the Power Buttons" on page 3 - 8*** for details).

Downloaded from LpManual.com Manuals

Resuming Operation

See *Table 3 - 1, on page 3 - 9* for information on how to resume from a power-saving state.

Password

It is recommended that you enable a password on system resume in order to protect your data.

Power Plans

The computer can be configured to conserve power by means of **power plans**. You can use (or modify) an existing **power plan**, or create a new one.

The settings may be adjusted to set the **display** to turn off after a specified time, and to send the computer into **Sleep** after a period of inactivity.

Click ***Change plan settings*** and then click ***Change advanced power settings*** to access further configuration options in **Advanced Settings**.

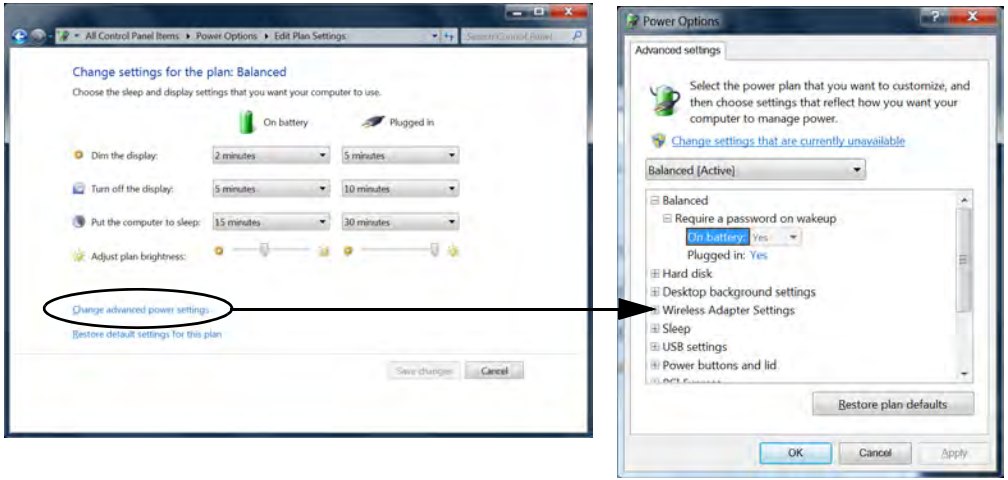

Figure 3 - 1
Power Plan Advanced Settings (Win 7)

Downloaded from ServiceManuals.com Manuals

Each ***Windows* power plan** will also adjust the processor performance of your machine in order to save power. This is worth bearing in mind if you are experiencing any reduced performance (especially under DC/battery power).

Choose **High performance** (you may need to click **Show additional plans** to view the High performance plan) for maximum performance when the computer is powered from an AC power source. Choose the **Power saver** (bear in mind that this scheme may slow down the overall performance of the computer in order to save power) for maximum power saving when the computer is battery (DC power) powered.

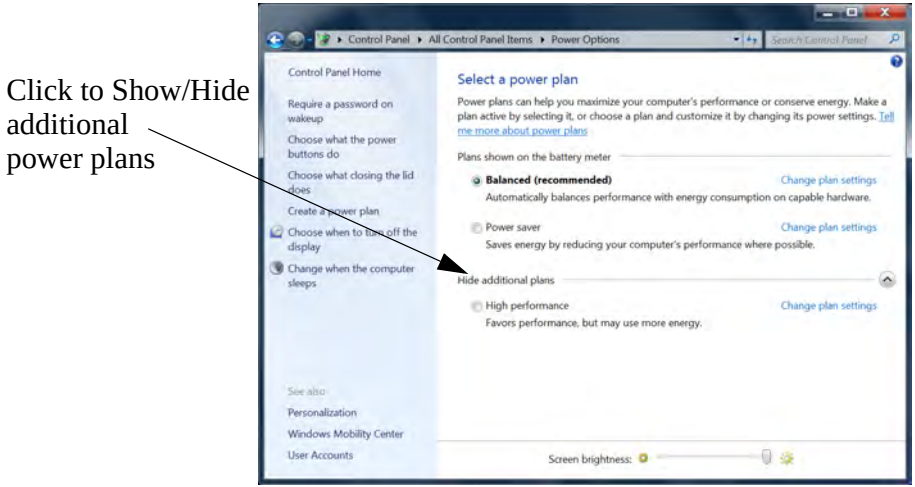
Click to Show/Hide additional power plans
Control Panel ▸ All Control Panel Items ▸ Power Options
Control Panel Home
Require a password on wakeup
Choose what the power buttons do
Choose what closing the lid does
Create a power plan
Choose when to turn off the display
Change when the computer sleeps
Select a power plan
Power plans can help you maximize your computer's performance or conserve energy. Make a plan active by selecting it, or choose a plan and customize it by changing its power settings. Tell me more about power plans
Plans shown on the battery meter
Balanced (recommended)
Change plan settings
Automatically balances performance with energy consumption on capable hardware.
Power saver
Change plan settings
Saves energy by reducing your computer's performance where possible.
Hide additional plans
High performance
Change plan settings
Favors performance, but may use more energy.
See also
Personalization
Windows Mobility Center
User Accounts
Screen brightness:

Figure 3 - 2
Power Plans (Win 7)

Downloaded from LpManual.com Manuals

Power-Saving States

You can use power-saving states to stop the computer's operation and restart where you left off. ***Win 7*** uses the **Sleep, Hibernate** and **Shut Down** power-saving states.

Sleep

In **Sleep** all of your work, settings and preferences are saved to memory before the system sleeps. When you are not using your computer for a certain length of time, which you specify in the operating system, it will enter **Sleep** to save power.

The PC wakes from **Sleep within seconds** and will return you to where you last left off (what was on your desktop) without reopening the application(s) and file(s) you last used.

If your mobile PC in **Sleep** is running on battery power the system will use only a minimum amount of power. After an extended period the system will save all the information to the hard disk and shut the computer down before the battery becomes depleted.

Downloaded from Laptop-Driver-Manuals

Hibernate

Hibernate uses the least amount of power of all the power-saving states and saves all of your information on a part of the hard disk before it turns the system off. If a power failure occurs the system can restore your work from the hard disk; if a power failure occurs when work is saved only to memory, then the work will be lost. **Hibernate** will also return you to where you last left off within seconds. You should put your mobile PC into **Hibernate** if you will not use the computer for a period of time, and will not have the chance to charge the battery.

Shut down

You should **Shut down** the computer if you plan to install new hardware (don't forget to remove the battery and follow all the safety instructions in **Chapter 6**), plan to be away from the computer for several days, or you do not need it to wake up and run a scheduled task. Returning to full operation from **Shut down** takes longer than from **Sleep** or **Hibernate**.

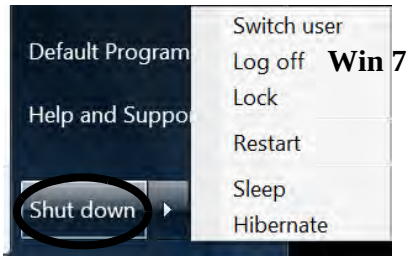

Figure 3 - 3
Start Menu Power

Downloaded from LpManual.com Manuals

Password Protection

It is recommended that you enable a password on wake up in order to protect your data.

However you can disable this setting from the **Power Options** menu by clicking ***Require a password on wakeup*** in the left menu, and selecting the options (click ***Change settings that are currently unavailable***).

Configuring the Power Buttons

The power/sleep button (**Fn + F4** key combo) and closed lid may be set to send the computer in to a power-saving state. Click **Choose what the power buttons do** on the left menu in **Power Options** to bring up the menu.

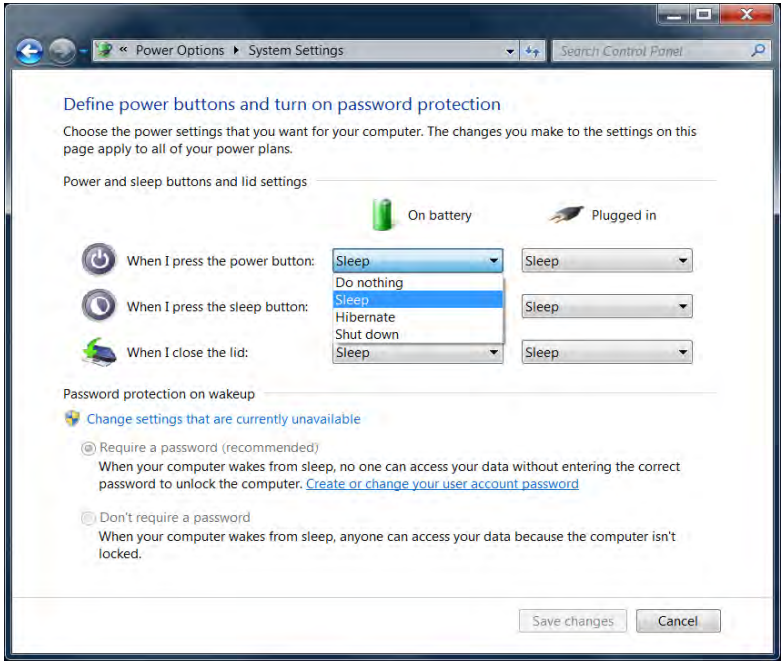
Power Options ▸ System Settings
Search Control Panel
Define power buttons and turn on password protection
Choose the power settings that you want for your computer. The changes you make to the settings on this page apply to all of your power plans.
Power and sleep buttons and lid settings
On battery
Plugged in
When I press the power button:
Sleep
Sleep
Do nothing
Sleep
Hibernate
Shut down
When I press the sleep button:
Sleep
When I close the lid:
Sleep
Sleep
Password protection on wakeup
Change settings that are currently unavailable
Require a password (recommended)
When your computer wakes from sleep, no one can access your data without entering the correct password to unlock the computer. Create or change your user account password
Don't require a password
When your computer wakes from sleep, anyone can access your data because the computer isn't locked.
Save changes
Cancel

Figure 3 - 4
Power Options Define Power Buttons

Downloaded from manualslib.com manuals

Resuming Operation

You can resume operation from power-saving states by pressing the power button, or in some cases pressing the sleep button (**Fn + F4** key combo).

Power Status	Icon Color	To Resume
Power Off	Off	Press the Power Button
Sleep	Blinking Green	Press the Power Button Press the Sleep Button (Fn + F4 Key Combo)
Hibernate	Off (battery) Orange (AC/DC adapter)	Press the Power Button
Display Turned Off	Green	Press a Key or Move the Mouse/Touchpad

Power Button

When the computer is on, you can use the power button as a Sleep/Hibernate/Shut Down hot key button when it is pressed for less than **4 seconds** (pressing and holding the power button for longer than this will force the computer to shut down).

Closing the Lid

If you have chosen to send the computer to **Sleep** when the lid is closed, raising the lid will wake the system up.

Table 3 - 1 **Resuming Operation**

Downloaded from LpManual.com Manuals

Low Battery Warning

When the battery is critically low, immediately connect the AC/DC adapter to the computer or save your work, otherwise, the unsaved data will be lost when the power is depleted.

Battery Information

Follow these simple guidelines to get the best use out of your battery.

Battery Power

Your computer's battery power is dependent upon many factors, including the programs you are running, and peripheral devices attached. You can set actions to be taken (e.g. Shut down, Hibernate etc.), and set critical and low battery levels from power plan **Change plan settings > Change advanced power settings** (see *Figure 3 - 1 on page 3 - 4*).

Click the battery icon in the taskbar to see the current battery level and charge status.

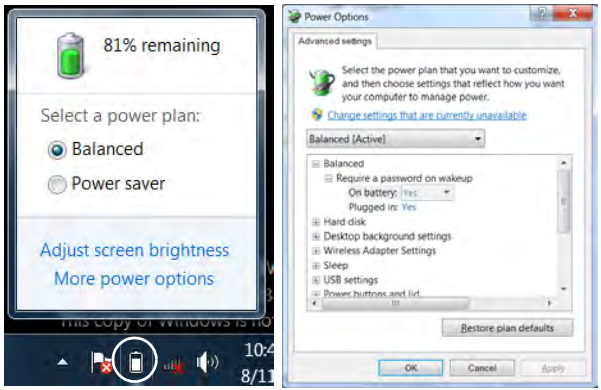

Figure 3 - 5
Battery Icon (Taskbar) & Battery Advanced Settings

Download from Service Manuals

Conserving Battery Power

- Use a **power plan** that conserves power (e.g **Power saver**), however note that this may have an affect on computer performance.
- Lower the brightness level of the LCD display. The system will decrease LCD brightness slightly to save power when it is not powered by the AC/DC adapter.
- Reduce the amount of time before the display is turned off.
- Close wireless, Bluetooth, modem or communication applications when they are not being used.
- Disconnect/remove any unnecessary external devices e.g. USB devices, ExpressCards etc.

Windows Mobility Center

The **Windows Mobility Center** control panel provides an easy point of access for information on battery status, power plans used and wireless device status etc.

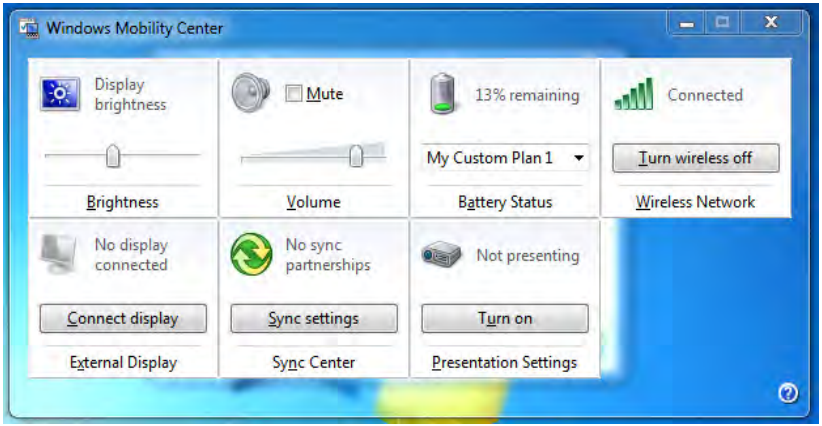

Figure 3 - 6
Windows Mobility Center

Downloaded from LpManual.com Manuals

Battery Life

Battery life may be shortened through improper maintenance. **To optimize the life and improve its performance, fully discharge and recharge the battery at least once every 30 days**.

We recommend that you do not remove the battery yourself. If you do need to remove the battery for any reason (e.g. long term storage) see ***"Removing the Battery" on page 6 - 3***.

New Battery

Always completely discharge, then fully charge, a new battery (see ***"Battery FAQ" on page 3 - 14*** for instructions on how to do this).

Recharging the Battery with the AC/DC Adapter

The battery pack automatically recharges when the AC/DC adapter is attached and plugged into an electrical outlet. If the computer is powered on, and in use, it will take several hours to fully recharge the battery. When the computer is turned off but plugged into an electrical outlet, battery charge time is less. (Refer to ***"LED Indicators" on page 1 - 7*** for information on the battery charge status, and to ***"Battery Information" on page 3 - 10*** for more information on how to maintain and properly recharge the battery pack.)

Download from Service Manuals

Proper handling of the Battery Pack

- DO NOT disassemble the battery pack under any circumstances.
- DO NOT expose the battery to fire or high temperatures, it may explode.
- DO NOT connect the metal terminals (+, -) to each other.

Damaged Battery Warning

Should you notice any physical defects (e.g. the battery is bent out of shape after being dropped), or any unusual smells emanating from the notebook battery, shut your computer down immediately and contact your service center. If the battery has been dropped we do not recommend using it any further, as even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire. It is recommended that you replace your computer battery every two years.

Caution

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Downloaded from LpManual.com Manuals

Battery FAQ

How do I completely discharge the battery?

Use the computer with battery power until it shuts down due to a low battery. Don't turn off the computer even if a message indicates the battery is critically low, just let the computer use up all of the battery power and shut down on its own.

1. Save and close all files and applications.
2. **Create** a **power plan** for discharging the battery and set all the options to **Never**.

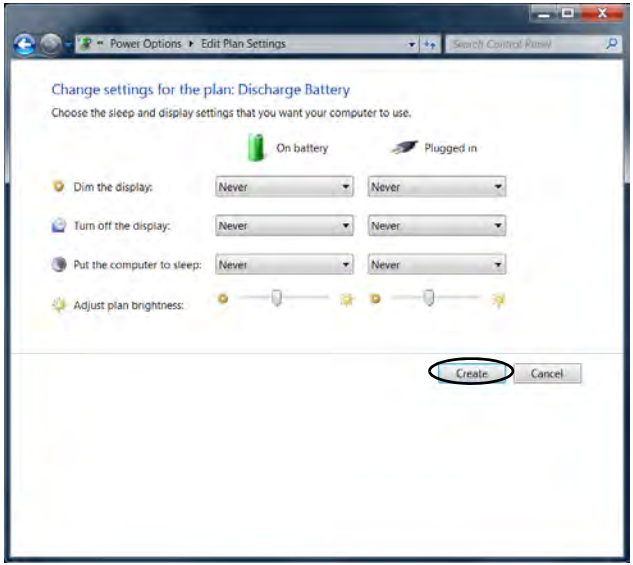

Figure 3 - 7
Power Plan Create

Downloaded from manuals.clubic.com

3. Click ***Change plan settings*** (after creating it) and click ***Change plan settings > Change advanced power settings***.

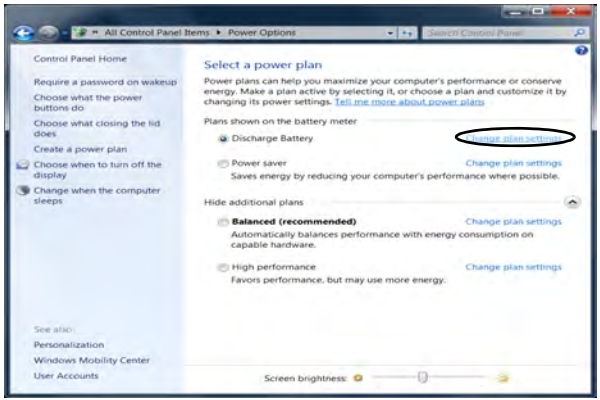
All Control Panel Items ▸ Power Options
Control Panel Home
Require a password on wakeup
Choose what the power buttons do
Choose what closing the lid does
Create a power plan
Choose when to turn off the display
Change when the computer sleeps
Select a power plan
Power plans can help you maximize your computer's performance or conserve energy. Make a plan active by selecting it, or choose a plan and customize it by changing its power settings. Tell me more about power plans
Plans shown on the battery meter
Discharge Battery
Change plan settings
Power saver
Change plan settings
Saves energy by reducing your computer's performance where possible.
Hide additional plans
Balanced (recommended)
Change plan settings
Automatically balances performance with energy consumption on capable hardware.
High performance
Change plan settings
Favors performance, but may use more energy.
See also
Personalization
Windows Mobility Center
User Accounts
Screen brightness:

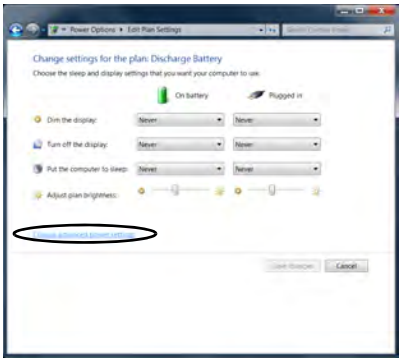
Power Options ▸ Edit Plan Settings
Change settings for the plan: Discharge Battery
Choose the sleep and display settings that you want your computer to use.
On battery
Plugged in
Dim the display:
Turn off the display:
Put the computer to sleep:
Adjust plan brightness:
Change advanced power settings
Save changes
Cancel

Figure 3 - 8
Change Plan Settings / Change Advanced Power Settings

Downloaded from LpManual.com Manuals

4. Scroll down to **Battery** and click **+** to expand the battery options.
5. Choose the options below (click **Yes** if a warning appears):

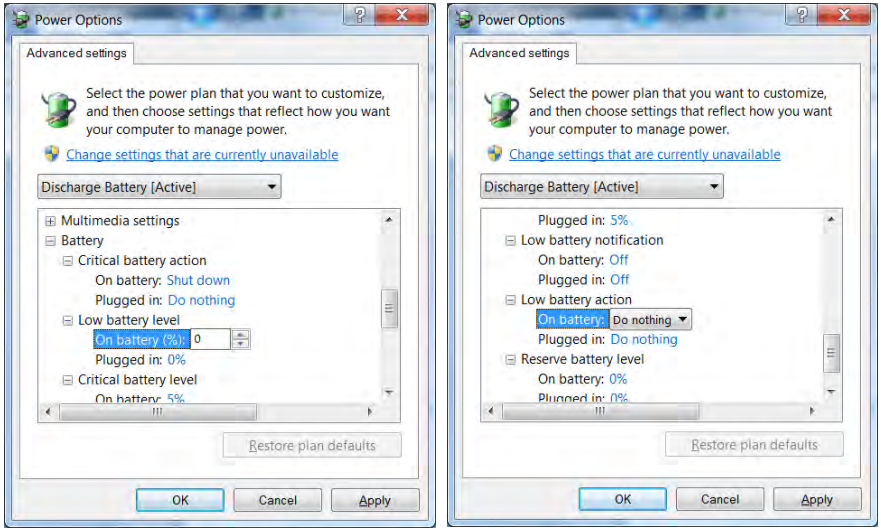

Figure 3 - 9
Power Options Advanced Settings - Battery

- Low battery levels = 0%
- Critical battery Levels = 1%
- Low battery action = Do Nothing
- Critical battery action (On battery) = Shut Down
- Critical battery action (Plugged in) = Do Nothing

Download from Service Manuals

How do I fully charge the battery?

When charging the battery, don't stop until the LED charging indicator light changes from orange to green.

How do I maintain the battery?

Completely discharge and charge the battery at least once every 30 days or after about 20 partial discharges.

SLI Multi GPU Configuration & Battery Power

Note that due to the high power and system demands created by enabling SLI Configuration, **you should not enable SLI configuration if your computer is powered by battery only**. If you attempt to run an SLI configuration when the computer is powered by the battery only, then system problems may occur.

If the computer is currently powered by battery only **do not enable SLI configuration**.

If you have currently enabled SLI configuration, and the computer is powered by the AC/DC adapter, **do not switch to battery power only** (or go to the NVIDIA Control Panel and disable SLI configuration before switching to battery power only).

Downloaded from LpManual.com Manuals

Downloaded from LpManual.com Manuals

Chapter 4: Drivers & Utilities

This chapter deals with installing the drivers and utilities essential to the operation or improvement of some of the computer's subsystems. The system takes advantage of some newer hardware components for which the latest versions of most available operating systems haven't built in drivers and utilities. Thus, some of the system components won't be auto-configured with an appropriate driver or utility during operating system installation. Instead, you need to manually install some system-required drivers and utilities.

RAID & AHCI Setup

Note that setting up a RAID, or AHCI mode, needs to be done prior to installing the *Windows OS*, and therefore before installing the other drivers listed here (see ***"Setting Up SATA RAID Mode" on page 7 - 2***).

What to Install

The ***Device Drivers & Utilities + User's Manual*** disc contains the drivers and utilities necessary for the proper operation of the computer.

Table 4 - 1, on page 4 - 3 lists what you need to install and **it is very important that the drivers are installed in the order indicated**.

Module Driver Installation

The procedures for installing drivers for the **WLAN**, **PC Camera**, **Consumer Infrared** (for TV tuner remote), **Bluetooth & WLAN Combo** and **Security** (**Fingerprint** & **TPM** modules) are provided in ***"Modules" on page 7 - 1***.

Downloaded from LpManual.com Manuals

Driver Installation

Insert the *Device Drivers & Utilities + User's Manual* disc and click ***Install Drivers*** (button), or ***Option Drivers*** (button) to access the **Optional** driver menu.

Figure 4 - 1 **- Drivers Installer Screen 1**

1. Check the driver installation order from ***Table 4 - 1, on page 4 - 3*** (**the drivers must be installed in this order**) which is the same as that listed in the ***Drivers Installer*** menu below.
2. Click to select the driver you wish to install, (you should note down the drivers as you install them).
3. Follow the instructions for each individual driver installation procedure as listed on the following pages.

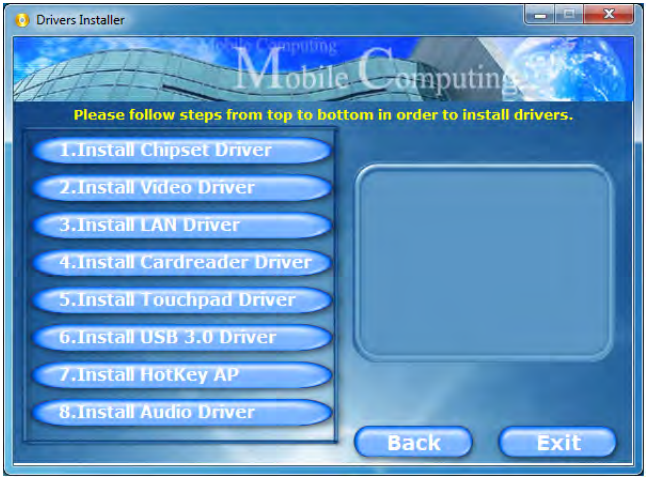

Figure 4 - 2 **- Drivers Installer Screen 2**

4 - 2 Driver Installation

Downloaded from Laptop Installation Manuals

Windows 7 Driver	Page	Windows 7 Driver	Page
Chipset	*Page 4 - 7*	*Intel Rapid Storage Technology* (for RAID)	*Page 7 - 8*
Video (NVIDIA) *Video (AMD)*	*Page 4 - 7*	*Wireless LAN Module*	*Page 7 - 15*
LAN	*Page 4 - 7*	*PC Camera Module*	*Page 7 - 33*
Card Reader	*Page 4 - 7*	*TV Tuner Module*	*Page 7 - 41*
TouchPad	*Page 4 - 8*	*Bluetooth Module* (note that you need to install both the WLAN & Bluetooth drivers for the WLAN & Bluetooth Combo module)	*Page 7 - 44*
USB 3.0	*Page 4 - 8*	*Fingerprint Reader Module*	*Page 7 - 60*
Hot Key	*Page 4 - 8*	*Trusted Platform Module*	*Page 7 - 67*
Audio	*Page 4 - 8*		

Table 4 - 1 **- Driver Installation**

Note that you need to install both the WLAN & Bluetooth drivers for Intel and 3rd party WLAN & Bluetooth Combo modules.

Downloaded from LpManual.com Manuals

Manual Driver Installation

Click the **Browse CD/DVD** button in the *Drivers Installer* application and browse to the executable file in the appropriate driver folder.

Windows Update

After installing all the drivers make sure you enable **Windows Update** in order to get all the latest security updates etc. (all updates will include the latest **hotfixes** from Microsoft). See ***"Windows Update" on page 4 - 9*** for instructions.

Updating/Reinstalling Individual Drivers

If you wish to update/reinstall individual drivers it may be necessary to uninstall the original driver.To do this go to the **Control Panel** in the ***Windows OS*** and double-click the **Programs and Features** icon (**Programs > Uninstall a program**). Click to select the driver (if it is not listed see below) and click **Uninstall**, and then follow the on screen prompts (it may be necessary to restart the computer). Reinstall the driver as outlined in this chapter.

If the driver is not listed in the **Programs and Features** menu:

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Double-click **Device Manager** (**Hardware and Sound > Device Manager**).
3. Double-click the **device** you wish to update/reinstall the driver for (you may need to click "+" to expand the selection).
4. Click **Driver** (tab) and click the **Update Driver** or **Uninstall** button and follow the on screen prompts.

Downloaded from Laptop Installation Manuals

User Account Control

If a **User Account Control** prompt appears as part of the driver installation procedure, click **Continue**/**Allow**, and follow the installation procedure as directed.

Windows Security Message

If you receive a ***Windows*** security message as part of the driver installation process. Just click ***"Install this driver software anyway"*** or **Install** to continue the installation procedure.

You will receive this message in cases where the driver has been released after the version of ***Windows*** you are currently using. All the drivers provided will have already received certification for ***Windows***.

New Hardware Found

If you see the message "**New Hardware Found**" during the installation procedure (**other than when outlined in the driver install procedure**), click **Cancel** to close the window, and follow the installation procedure.

Downloaded from LpManual.com Manuals

Driver Installation Procedure

Insert the *Device Drivers & Utilities + User's Manual* disc and click ***Install Drivers*** (button), or ***Option Drivers*** (button) to access the **Optional** driver menu.

Driver Installation General Guidelines

The driver installation procedure outlined in this Chapter (and in **Chapter 7 Options & Modules**), are accurate at the time of going to press.

Drivers are always subject to upgrade and revision so the exact procedure for certain drivers may differ slightly. As a general guide follow the default on screen instructions for each driver (e.g. **Next > Next > Finish**) unless you are an advanced user. In many cases a restart is required to install the driver.

RAID Note: Setting up a **RAID**, or **AHCI** mode, needs to be done prior to installing the ***Windows*** *OS*, and therefore before installing the other drivers listed here.

Downloaded from Laptop Manuals

Chipset

1. Click **1.Install Chipset Driver > Yes**.
2. Click **Next > Yes > Next > Next**.
3. Click **Finish** to restart the computer.

The video driver installation procedure will depend upon which video adapter is included in your purchase option (**NVIDIA** or **AMD**).

Video (NVIDIA)

1. Click **2.Install Video Driver > Yes**.
2. Click **AGREE AND CONTINUE** (button) to accept the terms of the license agreement.
3. Click **NEXT**.
4. Click the **RESTART NOW** button to restart the computer.

After the video driver has been installed, and the system restarted, the OS will automatically run the "Winsat.exe" to rate the performance. Allow time for this process to finish and do not restart during this process (if you have restarted the system see ***"Windows Update" on page 4 - 9***).

Video (AMD)

1. Click **2.Install Video Driver > Yes**.
2. Click **Next > Install** (button).
3. Click the **Express** (or **Custom** if you prefer to manually configure the driver installation settings) button and click **Next**.
4. Click **Accept** (button) and click **Yes**.
5. Click **Finish** > **Yes** to restart the computer.
6. After the computer has restarted, click **Restart Now** to restart again to refresh the video driver.

LAN

1. Click **3.Install LAN Driver > Yes**.
2. Click **Install.**
3. Click **Finish** to complete the installation.

Card Reader

1. Click **4.Install Cardreader Driver > Yes**.
2. Click **Install > Finish**.

Downloaded from LpManual.com Manuals

TouchPad

1. Click **5.Install Touchpad Driver > Yes**.
2. Click **Next**.
3. Click the button to accept the license, and then click **Next**.
4. Click **Finish > Restart Now** to restart the computer.

USB 3.0

1. Click **6.Install USB 3.0 Driver > Yes**.
2. Click **Next**.
3. Click the button to accept the license and then click **Next**.
4. Click **Next > Install**.
5. Click **Finish**.

Hot Key

1. Click **7.Install Hotkey AP > Yes**.
2. Click **Next > Next**.
3. Click **Finish > Finish** to restart your computer.

Audio

1. Click **8. Install Audio Driver > Yes**.
2. Click **Next**.
3. Click **Finish** to restart the computer.

It is recommended that you install the **Intel Rapid Storage Technology** driver (see ***"Intel Rapid Storage Technology" on page 7 - 8*** - required for AHCI & RAID mode).

(see over)

Downloaded From Laptop-Manuals.com Manuals

Windows Update

After installing all the drivers make sure you enable **Windows Update** in order to get all the latest security updates etc. (all updates will include the latest **hotfixes** from Microsoft).

To enable **Windows Update make sure you are connected to the internet**:

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Click **Windows Update** (System and Security/ Security).
3. Click **Check for updates** (button).
4. The computer will now check for updates (you need to be connected to the internet).
5. Click **Install now** (button) to begin checking for the updates.
6. Click **Install updates** (button) to install the updates.

Windows Experience Index

After the drivers are installed follow this procedure to ensure an accurate rating from the ***Windows Experience Index*** (make sure the AC/DC adapter is plugged in):

1. Click **Start**, and click **Control Panel**.
2. Click **Performance Information and Tools** (**System and Security > System > Check the Windows Experience Index**).
3. Click "**Rate this computer/Refresh Now/Re-run the assessment**".
4. The computer will take a few minutes to assess the system performance.
5. Close the control panel.

Downloaded from LpManual.com Manuals

Optional Drivers

See the pages indicated for the driver installation procedures for any modules included in your purchase option.

Figure 4 - 3 **- Optional Drivers Installer Screen**

RAID Setup

Note: Prior to setting up the RAID you will need to use an operable computer to copy the RAID driver to a USB flash drive before installing the ***Windows*** operating system. See ***"Setting Up SATA RAID Mode" on page 7 - 2*** for configuration instructions.

Bluetooth Module

If your purchase option includes the standalone **V2.1 Bluetooth module** then no driver is required. If your purchase option includes the **Combination Wireless LAN & V3.0 Bluetooth module** then install the driver as instructed in ***"3rd Party Bluetooth Combo Driver Installation" on page 7 - 46*** or ***"Intel Bluetooth Combo Driver Installation" on page 7 - 54***.

Wireless LAN

See the appropriate install procedure for your WLAN module in ***"Click Advanced and click Verify, then click Verify (button) to begin the process." on page 7 - 13***.

Download from Service Manuals4u.com

PC Camera

See the install procedure in *"PC Camera Module" on page 7 - 32*.

Consumer Infrared (for TV Tuner Remote)

See the install procedure in *"TV Tuner Module" on page 7 - 40*.

Security Modules (Fingerprint & TPM)

See the install procedures in *"Fingerprint Reader Module" on page 7 - 60* and *"Trusted Platform Module" on page 7 - 65*.

Downloaded from LpManual.com Manuals

Downloaded from LpManual.com Manuals

Chapter 5: BIOS Utilities

Overview

This chapter gives a brief introduction to the computer's built-in software:

Diagnostics: The **POST** (Power-On Self Test)

Configuration: The ***Setup*** utility
If your computer has never been set up, or you are making important changes to the system (e.g. hard disk setup), then you should review this chapter first and note the original settings found in ***Setup***. Even if you are a beginner, keep a record of the settings you find and any changes you make. This information could be useful if your system ever needs servicing.

There is one general rule: *Don't make any changes unless you are sure of what you are doing*. Many of the settings are required by the system, and changing them could cause it to become unstable or worse. If you have any doubts, consult your service representative.

BIOS Screens

Note that the BIOS screens pictured on these pages are intended for guidance in setting up your system's BIOS.

BIOS versions are subject to constant change and revision, therefore your computer's actual screens may appear slightly different from those pictured on these pages.

Downloaded from LpManual.com Manuals

POST Screen

1. **BIOS** information
2. CPU type
3. Memory status
4. Enter **Setup** prompt appears only during **POST**

Note: The **POST** screen as pictured right is for guideline purposes only. The **POST** screen on your computer may appear slightly different. If the **Boot-time Diagnostic Screen is disabled** (see page *5 - 9* as per the default setting), the POST screen will not appear.

The Power-On Self Test (POST)

If you enable the **Boot-time Diagnostic Screen** in the Setup Utility, each time you turn on the computer the system takes a few seconds to conduct a **POST**, including a quick test of the on-board RAM (memory).

As the **POST** proceeds, the computer will tell you if there is anything wrong. If there is a problem that prevents the system from booting, it will display a system summary and prompt you to run ***Setup***.

If there are no problems, the ***Setup*** prompt will disappear and the system will load the operating system. Once that starts, you can't get into ***Setup*** without rebooting.

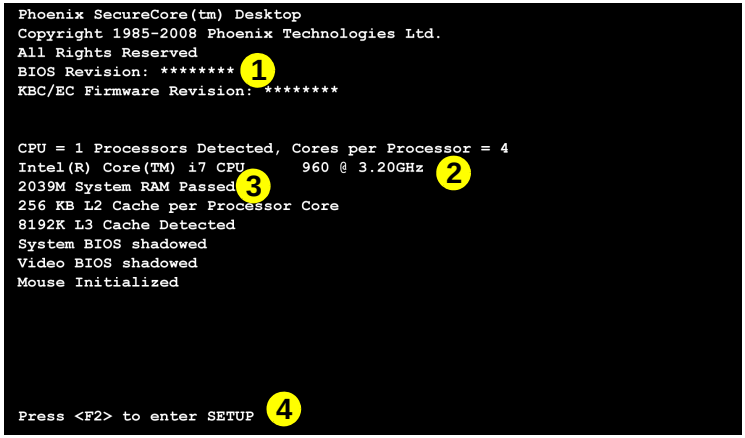

Figure 5 - 1
POST Screen

Downloaded from Laptop-Manuals.com

Failing the POST

Errors can be detected during the **POST**. There are two categories, “fatal” and “non-fatal”.

Fatal Errors

These stop the boot process and usually indicate there is something seriously wrong with your system. Take the computer to your service representative or authorized service center as soon as possible.

Non-Fatal Errors

This kind of error still allows you to boot. You will get a message identifying the problem (make a note of this message!) followed by the prompt:

- Press <F1> to resume
- <F2> to enter Setup

Press **F1** to see if the boot process can continue. It may work, without the correct configuration.

Press **F2** to run the **Setup** program and try to correct the problem. If you still get an error message after you change the setting, or if the “cure” seems even worse, call for help.

Downloaded from LpManual.com Manuals

BIOS Settings Warning

Incorrect settings can cause your system to malfunction. To correct mistakes, return to *Set-up* and restore the ***Set-up Defaults*** with <**F9**>.

The Setup Utility

The **Phoenix Setup** utility tells the system how to configure itself and manage basic features and subsystems (e.g. port configuration).

Entering Setup

To enter ***Setup***, turn on the computer and press **F2** during the **POST**. The prompt (***Press F2 to Enter Setup***) seen in **Figure 5 - 1** on page *5 - 2* is usually present for a few seconds after you turn on the system. If you get a “Keyboard Error”, (usually because you pressed **F2** too quickly) just press **F2** again.

If the computer is already on, reboot using the **Ctrl + Alt + Delete** combination and then hold down **F2** when prompted. The ***Setup*** main menu will appear.

Downloaded from Specialized Service Manuals

Setup Screens

The following pages contain additional advice on **portions** of the ***Setup***.

Along the top of the screen is a menu bar with menu headings. When you select a heading, a new screen appears. Scroll through the features listed on each screen to make changes to ***Setup***.

Instructions on how to navigate each screen are in the box along the bottom of the screen. If these tools are confusing, press **F1** to call up a **General Help** screen, and then use the arrow keys to scroll up or down the page.

The **Item Specific Help** on the right side of each screen explains the highlighted item and has useful messages about its options.

If you see an arrow ▶ next to an item, press **Enter** to go to a sub-menu on that subject. The sub-menu screen that appears has a similar layout, but the **Enter** key may execute a command.

Setup Menus

The **Setup** menus shown in this section are for **reference** only. Your computer's menus will indicate the configuration appropriate for your model and options.

Downloaded from LpManual.com Manuals

Main Menu

Figure 5 - 2
Main Menu

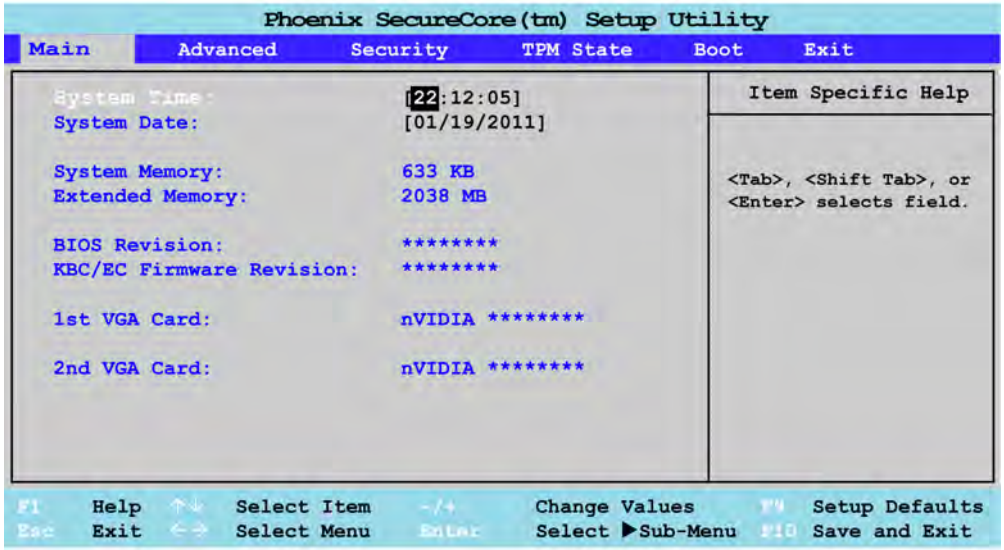

System Time & Date (Main Menu)
The hour setting uses the 24-hour system (i.e., ØØ = midnight; 13 = 1 pm). If you can change the date and time settings in your operating system, you will also change these settings. Some applications may also alter data files to reflect these changes.

Downloaded from Laptopmanual.com Manuals

System/Extended Memory: (Main Menu)
This item contains information on the system memory, and is not user configurable. The system will auto detect the amount of memory installed.

BIOS Revision/VGA Card etc. (Main Menu)
This item contains information on the BIOS version and video card etc., and is not user configurable.

Downloaded from LpManual.com Manuals

Advanced Menu

Figure 5 - 3
Advanced Menu

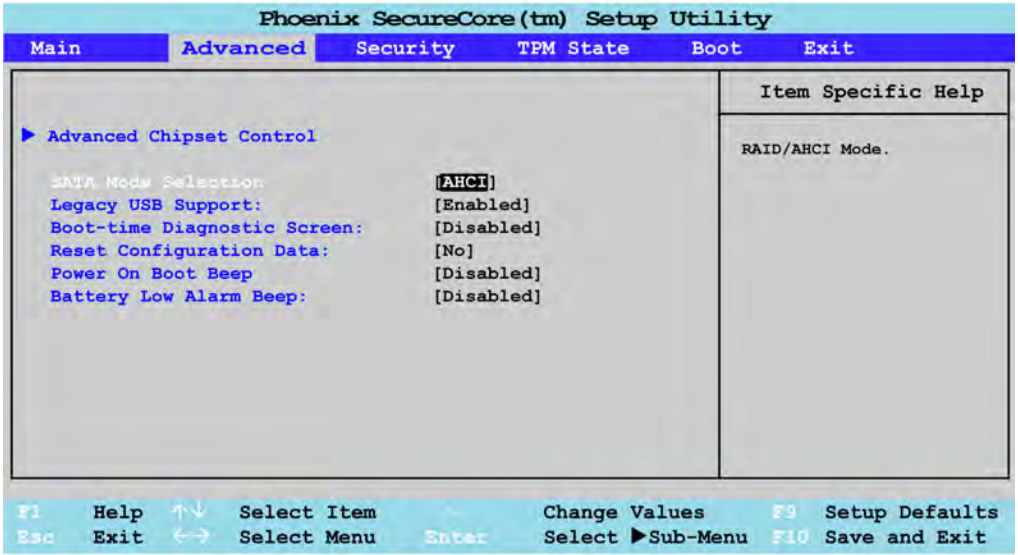

Advanced Chipset Control (Advanced Menu)
The sub-menu here allows you to enable/disable some advanced system features.

Downloaded from Clevo Laptop Manuals

SATA Mode Selection (Advanced Menu)
You may **enable/disable SATA RAID or AHCI** mode for your hard disks, however **you should only enable/disable SATA RAID or AHCI BEFORE installing an operating system**, and after you have backed up all necessary files and data (see sidebar). See ***"Setting Up SATA RAID Mode" on page 7 - 2*** for details.

Legacy USB Support: (Advanced Menu)
Choose "**Enabled**" if you intend to use **USB** devices in systems which do not normally support USB functionality (e.g. DOS). The default setting is "**Enabled**" and does not need to be changed if you intend to use your USB devices in **Windows**.

Boot-time Diagnostic Screen: (Advanced Menu)
Use this menu item to enable/disable the Boot-time Diagnostic Screen. Enable this item to display the POST screen (see ***"The Power-On Self Test (POST)" on page 5 - 2***).

Reset Configuration Data (Advanced Menu)
This item is set to **No** as default. You can change the setting to **Yes** if you have installed a new add-on which has reconfigured the system, resulting in such a serious system conflict that the operating system is unable to boot.

SATA Mode

If you have installed the ***Windows 7*** operating system with either **AHCI or RAID** mode enabled, **DO NOT** disable the set mode (if you wish to disable the set mode you will need to reinstall the ***Windows 7*** OS).

Downloaded from LpManual.com Manuals

Power On Boot Beep (Advanced Menu)
Use this menu item to enable/disable the beep as the computer starts up.

Battery Low Alarm Beep: (Advanced Menu)
Use this menu item to enable/disable the battery low alarm beep.

Download from Service Manuals

Advanced Chipset Control Menu

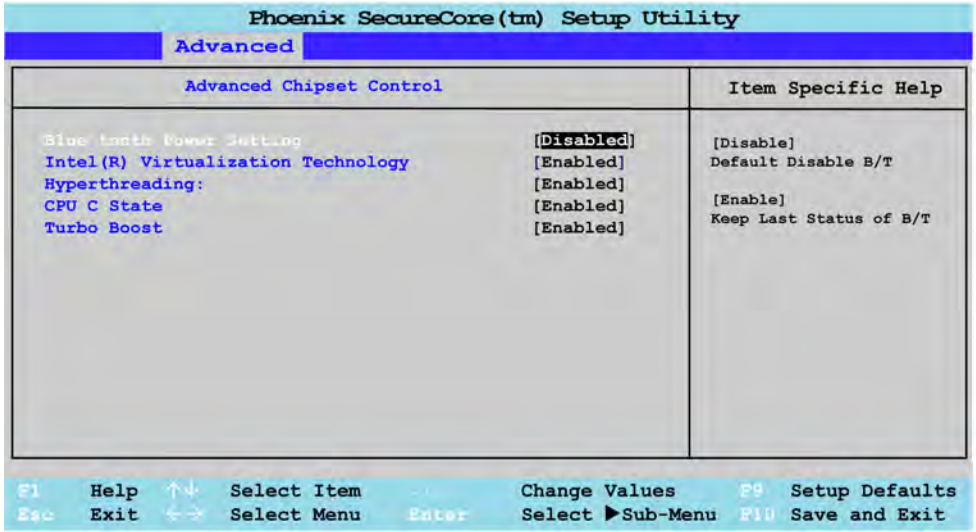
Phoenix SecureCore(tm) Setup Utility
Advanced
Advanced Chipset Control
Item Specific Help
Blue tooth Power Setting [Disabled]
Intel(R) Virtualization Technology [Enabled]
Hyperthreading: [Enabled]
CPU C State [Enabled]
Turbo Boost [Enabled]
[Disable]
Default Disable B/T
[Enable]
Keep Last Status of B/T
F1 Help ↑↓ Select Item Change Values F9 Setup Defaults
Esc Exit ←→ Select Menu Enter Select ▶Sub-Menu F10 Save and Exit

Figure 5 - 4
Advanced Chipset Control Menu

Bluetooth Power Setting > Advanced Chipset Control
You can adjust the Bluetooth module power setting to your preference. The default setting (**Disabled**) will see the Bluetooth module powered off when the system is started up or restarted. Enabling the power setting will have the module retain the last power status (on or off) before any restart or shut down.

Downloaded from LpManual.com Manuals

Intel Virtualization Technology > Advanced Chipset Control

Intel(R) Virtualization Technology enables a CPU to act as if it were several CPUs working in parallel in order to allow several operating systems to run at the same time in the same machine.

Hyperthreading > Advanced Chipset Control

Hyperthreading activates additional CPU threads that may appear as additional processors and is used to improve CPU multi-tasking. The operating system will view a processor with ***Hyperthreading*** enabled as two virtual processors and will spread any tasks between them (make sure your installed operating system supports multiple processors, and preferably, is optimized for this technology). After enabling/disabling ***Hyperthreading***, and saving and exiting the BIOS, the system will shut down (press the power button to turn the system on again).

CPU C State > Advanced Chipset Control

Enable/Disable CPU C States (operating states) here.

Turbo Boost > Advanced Chipset Control

You can enable Turbo Boost to automatically run the processor core faster than the stated frequency (within specification limits of the Thermal Design Power) for increased performance.

Download from Service Manual-Free.com

Security Menu

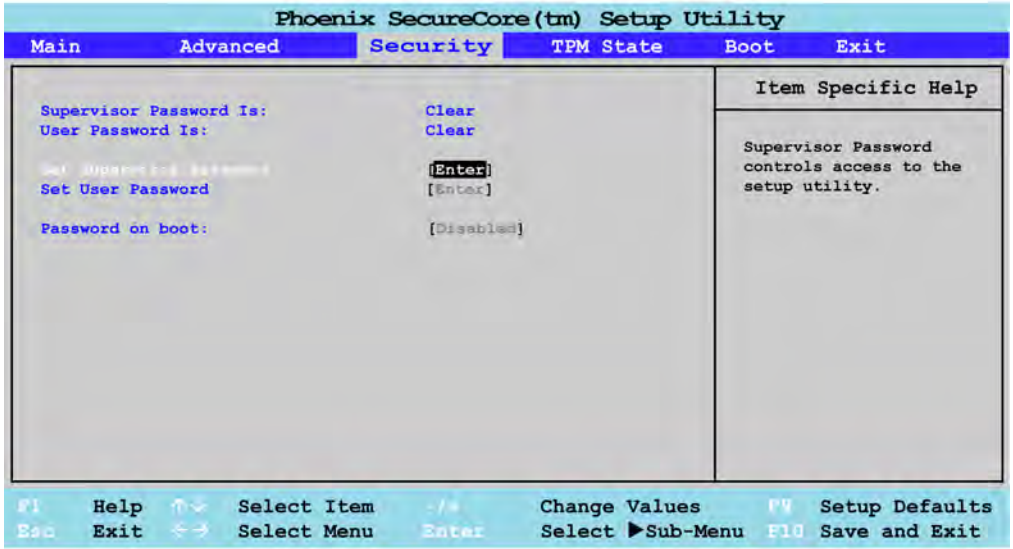

Set Supervisor Password (Security Menu)

You can set a password for access to the **Phoenix SecureCore Setup Utility**. This will not affect access to the computer OS (only the **Phoenix SecureCore Setup Utility**).

Security Menu

The changes you make here affect the access to the **Setup** utility itself, and also access to your machine as it boots up after you turn it on. These settings do not affect your machine or network passwords which will be set in your software OS.

Figure 5 - 5
Security Menu

5

Downloaded from LpManual.com Manuals

Password Warning

If you set a boot password (Password on boot is "Enabled"), **NEVER** forget your password.

The consequences of this could be serious. If you cannot remember your boot password you must contact your vendor and you may lose all of the information on your hard disk.

Set User Password (Security Menu)

You can set a password for user mode access to the **Phoenix SecureCore Setup Utility**. This will not affect access to the computer OS, (only the ***Setup*** utility) unless you choose to set a ***Password on Boot*** (see below). Many menu items in the **Phoenix SecureCore Setup Utility** cannot be modified in user mode. You can only set the user password after you have set the supervisor password.

Password on boot (Security Menu)

Specify whether or not a password should be entered to boot the computer (**you may only set a password on boot if a supervisor password is enabled**). If "***Enabled***" is selected, only users who enter a correct password can boot the system (**see the warning in the sidebar**). The default setting is "***Disabled***".

Note: To clear existing passwords press **Enter** and type the existing password, then press **Enter** for the new password (without typing any password entry) and **Enter** again to confirm the password clearance.

Downloaded from Laptopmanuals.com Manuals

TPM State

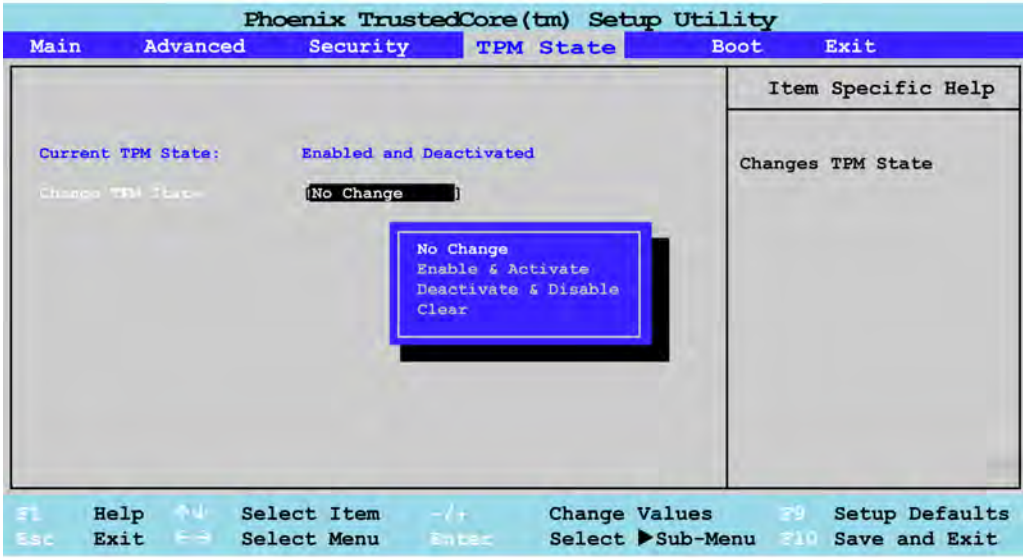

Figure 5 - 6
TPM State

Password Protection

Note that you should set a supervisor password in the BIOS to protect the TPM information from being tampered with by unauthorized users.

Change TPM State (TPM State)
This menu allows you to set the level of TPM functionality. You can enable/disable the TPM function altogether, or clear all existing TPM information.

Note: If you clear all TPM information it will be erased altogether and the information will need to be reconfigured.

Downloaded from LpManual.com Manuals

If you have made any changes to the TPM State you will be asked to execute or reject the changes made after you have saved and exited the BIOS. Highlight the required option (it will be white), and then press Enter to save it.

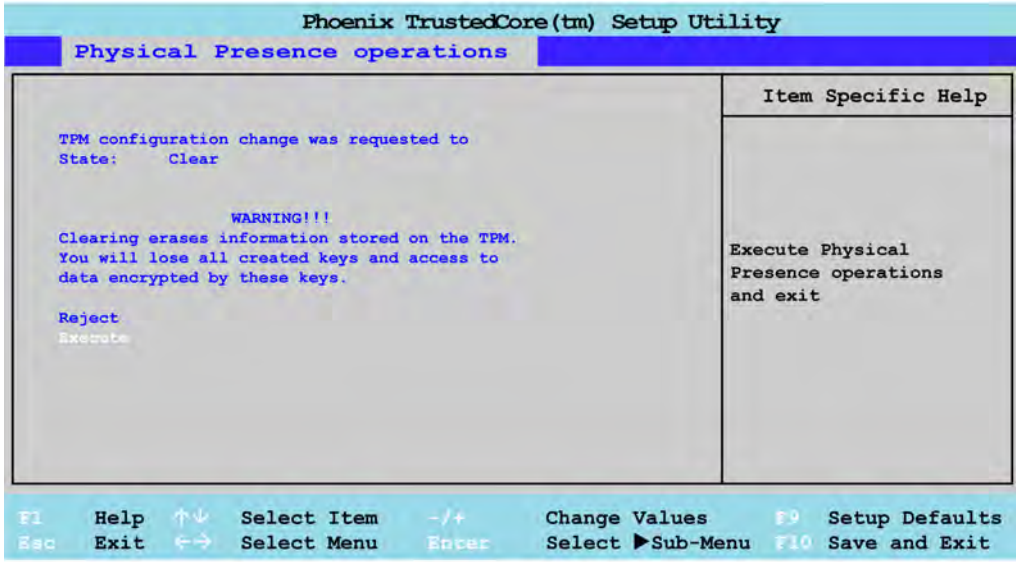
Phoenix TrustedCore(tm) Setup Utility
Physical Presence operations
Item Specific Help
TPM configuration change was requested to
State: Clear
WARNING!!!
Clearing erases information stored on the TPM.
You will lose all created keys and access to
data encrypted by these keys.
Reject
Execute
Execute Physical Presence operations and exit
F1 Help ↑↓ Select Item -/+ Change Values F9 Setup Defaults
Esc Exit ←→ Select Menu Enter Select ▶Sub-Menu F10 Save and Exit

Figure 5 - 7
Physical Presence Operations

Download from Upsocial.com Manuals

Boot Menu

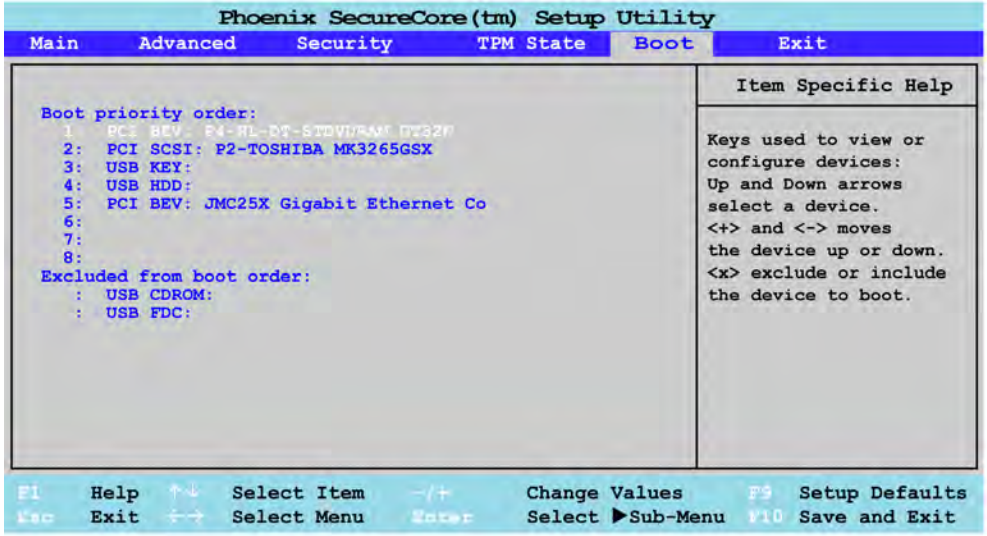
Phoenix SecureCore(tm) Setup Utility
Main
Advanced
Security
TPM State
Boot
Exit
Item Specific Help
Boot priority order:
1: PCI BEV: P4-HL-DT-STDVDRAM DT32F
2: PCI SCSI: P2-TOSHIBA MK3265GSX
3: USB KEY:
4: USB HDD:
5: PCI BEV: JMC25X Gigabit Ethernet Co
6:
7:
8:
Excluded from boot order:
: USB CDROM:
: USB FDC:
Keys used to view or configure devices:
Up and Down arrows select a device.
<+> and <-> moves the device up or down.
<x> exclude or include the device to boot.
F1 Help ↑↓ Select Item -/+ Change Values F9 Setup Defaults
Esc Exit ←→ Select Menu Enter Select ▶Sub-Menu F10 Save and Exit

Figure 5 - 8
Boot Menu

When you turn the computer on it will look for an operating system (e.g. ***Windows 7***) from the devices listed in this menu, and **in this priority order**. If it cannot find the operating system on that device, it will try to load it from the next device in the order specified in the **Boot priority order**. Item specific help on the right is available to help you move devices up and down the order.

BIOS Screens

Note that the BIOS screens pictured on these pages are intended for guidance in setting up your system's BIOS.

BIOS versions are subject to constant change and revision, therefore your computer's actual screens may appear slightly different from those pictured on these pages.

Downloaded from LpManual.com Manuals

Exit Menu

Figure 5 - 9
Exit Menu

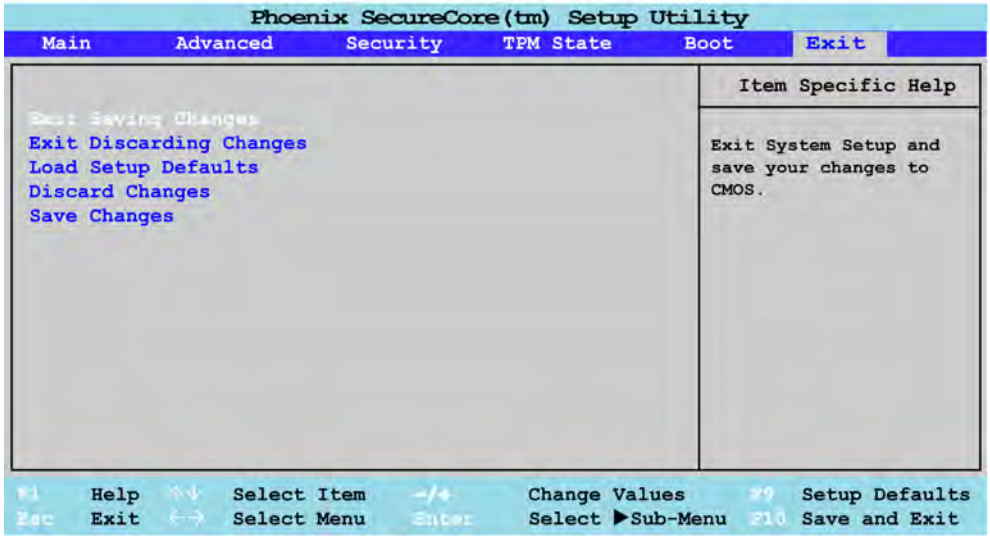

Choosing to ***Discard Changes***, or ***Exit Discarding Changes***, will wipe out any changes you have made to the ***Setup***. You can also choose to restore the original ***Setup*** defaults that will return the ***Setup*** to its original state, and erase any previous changes you have made in a previous session.

Download from Itmanual.com Manuals

Chapter 6: Upgrading The Computer

Overview

This chapter contains information on upgrading the computer. Follow the steps outlined to make the desired upgrades. If you have any trouble or problems you can contact your service representative for further help. Before you begin you will need:

- A small crosshead or Phillips screwdriver
- A small regular slotted (flathead) screwdriver
- An antistatic wrist strap

Before working with the internal components you will need to wear an antistatic wrist strap to ground yourself because static electricity may damage the components.

The chapter includes:

- Removing the Battery
- Upgrading the Hard Disk Drive(s)
- Upgrading the Optical (CD/DVD) Device
- Upgrading the System Memory (RAM)

Please make sure that you review each procedure before you perform it.

Warranty Warning

Please check with your service representative before undertaking any upgrade procedures to find out if this will VOID your warranty.

Downloaded from LpManual.com Manuals

Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines).

It is advisable to also remove your battery in order to prevent accidentally turning the machine on. **Before removing the battery disconnect the AC/DC adapter from the computer first.**

When Not to Upgrade

These procedures involve opening the system's case, adding and sometimes replacing parts.You should **not** perform any of these upgrades if:

- Your system is still under warranty or a service contract
- You don't have all the necessary equipment
- You're not in the correct environment
- You doubt your abilities

Under any of these conditions, contact your service representative to purchase or replace the component(s).

Removal Warning

When removing any cover(s) and screw(s) for the purposes of device upgrade, remember to replace the cover(s) and screw(s) before turning the computer on.

Upgrading the Processor

If you want to upgrade your computer by replacing the existing processor with a faster/new one you will need to contact your customer service representative. We recommend that you do not do this yourself, since if it is done incorrectly you may damage the processor or mainboard.

Downloaded from Service Manual.com Manuals

Removing the Battery

If you are confident in undertaking upgrade procedures yourself, for safety reasons it is best to remove the battery. **Before removing the battery disconnect the AC/DC adapter from the computer first**.

1. Turn the computer off, remove the AC/DC adapter and turn it over.
2. Loosen screws 1 - 3 and carefully lift the battery 4 up.
3. Remove the battery from the battery bay.

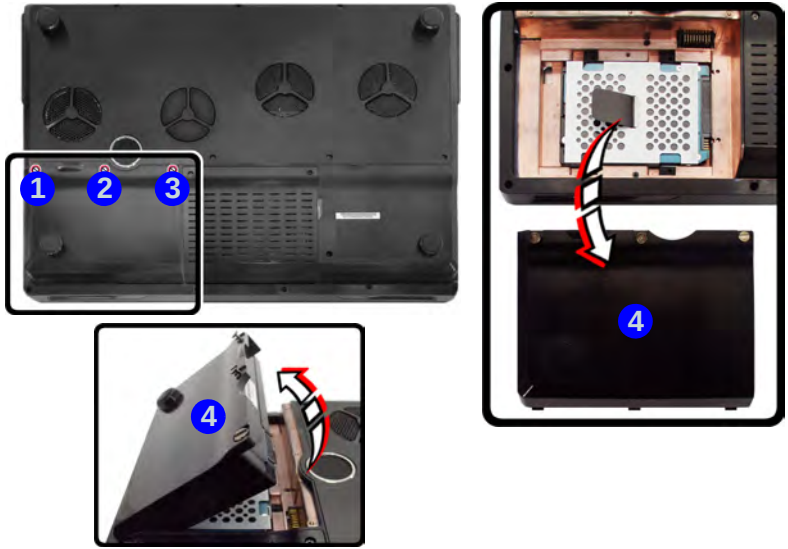

Warranty Warning

Please check with your service representative before undertaking any upgrade procedures to find out if this will VOID your warranty.

Figure 6 - 1
Battery Removal

Downloaded from LpManual.com Manuals

Upgrading the Hard Disk Drive(s)

The hard disk drive(s) can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 9.5mm (h) (see *"Storage" on page D - 3*). Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in *"Drivers & Utilities" on page 4 - 1*), when setting up a new hard disk.

HDD System Warning

New HDD's are blank. Before you begin make sure:
You have backed up any data you want to keep from your old HDD.
You have all the CD-ROMs and FDDs required to install your operating system and programs.
If you have access to the internet, download the latest application and hardware driver updates for the operating system you plan to install. Copy these to a removable medium.

Downloaded from vinafix.com

Removing the Hard Disk(s) from the Primary HDD Bay

1. Turn the computer off, remove the AC/DC adapter, turn it over and remove the battery.
2. Locate the hard disk bay cover and remove screws 1 & 2.
3. Remove the hard disk bay cover 3.

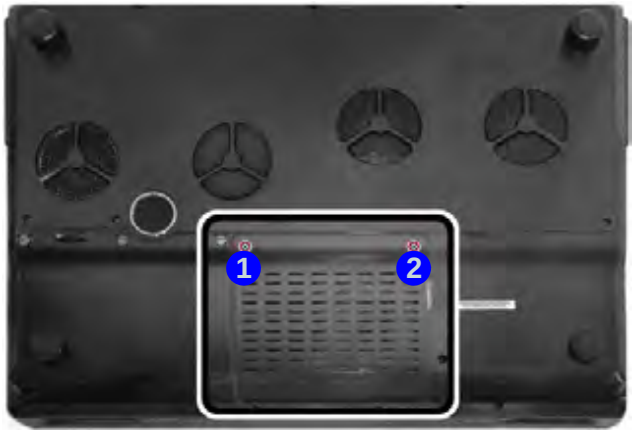

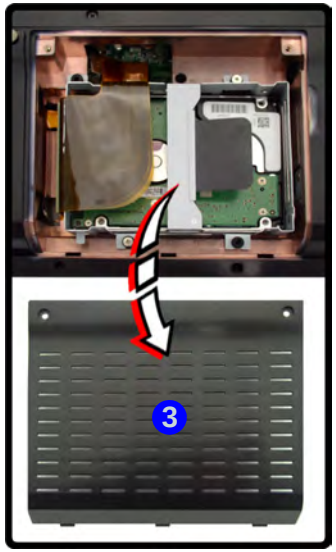

RAID Hard Disks

All hard disks in a RAID should be identical (the same size and brand) in order to prevent unexpected system behavior.

Figure 6 - 2
Primary HDD Bay Cover Screws & Cover Removal

Downloaded from LpManual.com Manuals

4. Disconnect the HDD cable 4.
5. Remove screws 5 - 8 from the hard disk assembly.
6. Pull the tab 9 to disconnect the hard disk assembly from the connector.
7. Remove the hard disk assembly 10.
8. Remove the HDD board & cable 11.

Figure 6 - 3
Hard Disk Assembly Screws & Removal

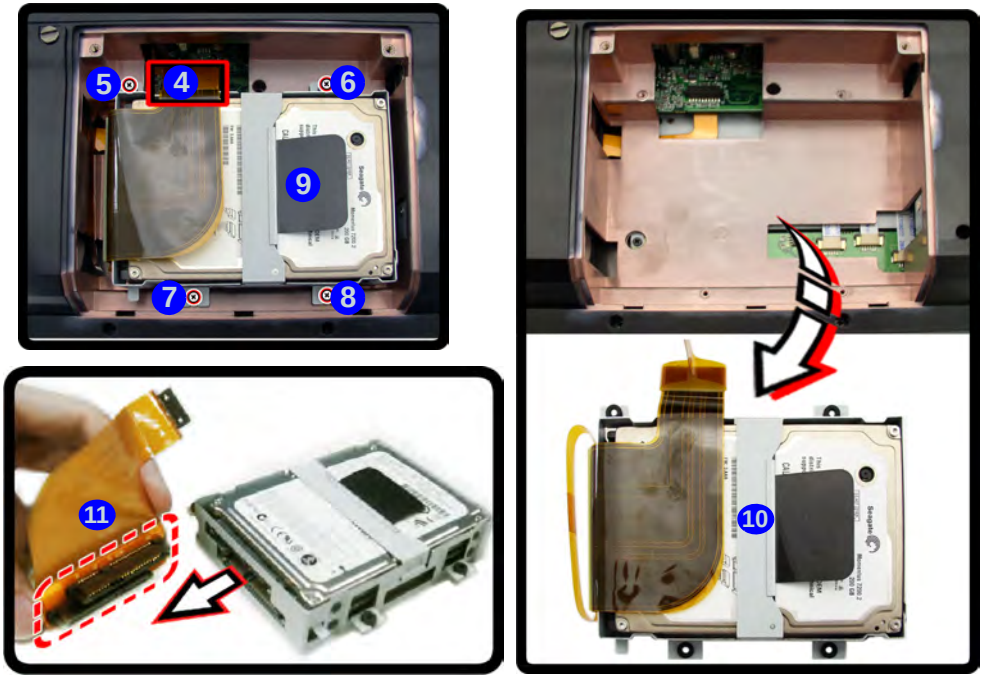

Downloaded from Laptopmanuals.com

9. Remove screws 12 - 15 (depending on how many hard disks you have installed in the assembly).
10. Remove the hard disk(s) 16 from the case.

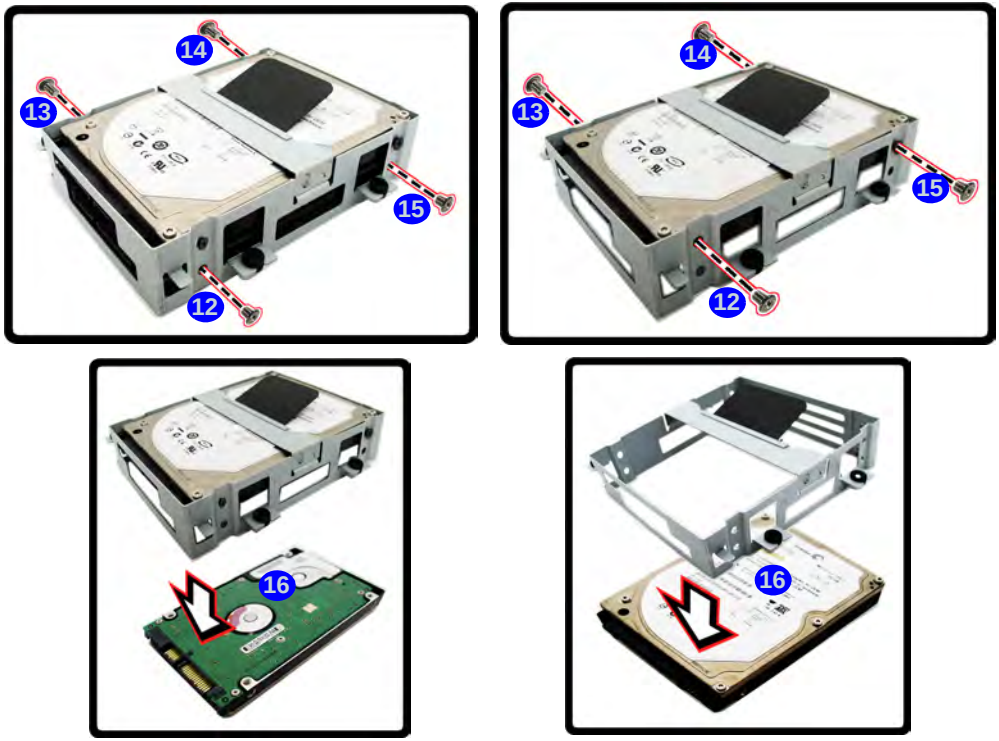

Figure 6 - 4
Hard Disk(s) Removal

Downloaded from LpManual.com Manuals

11. If two hard disks are installed then an insulation plate will be installed on the upper hard disk.
12. Remove screws 17 - 20 and the insulation plate 21.
13. Reverse the process to install any new disk(s) and do not forget to install the insulation plate (onto the upper hard disk in the orientation illustrated below), screws, cables and covers (pay careful attention to the orientation of the hard disks in the case).

Figure 6 - 5
Upper HDD Insulation Plate Removal

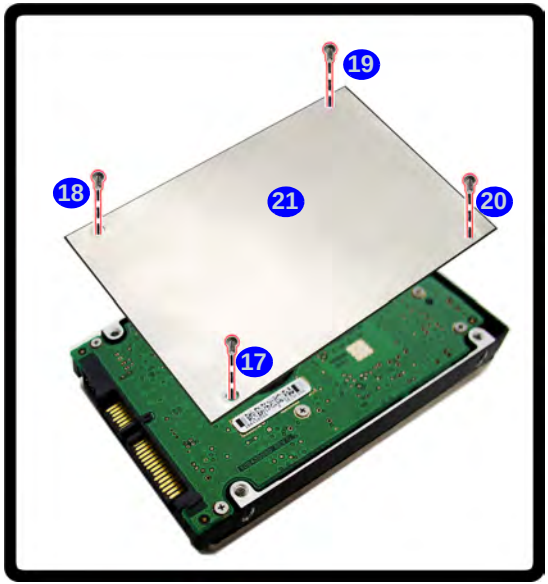

Downloaded from servicemanuals.net

Inserting the Primary Hard Disk(s)

1. Insert the HDD(s) 1 into the case as illustrated (**make sure the cable connectors are facing towards the gap at the rear of the case,** and that the upper HDD insulation plate is installed).
2. Insert screws 2 - 5 to secure the hard disk(s) in the case.

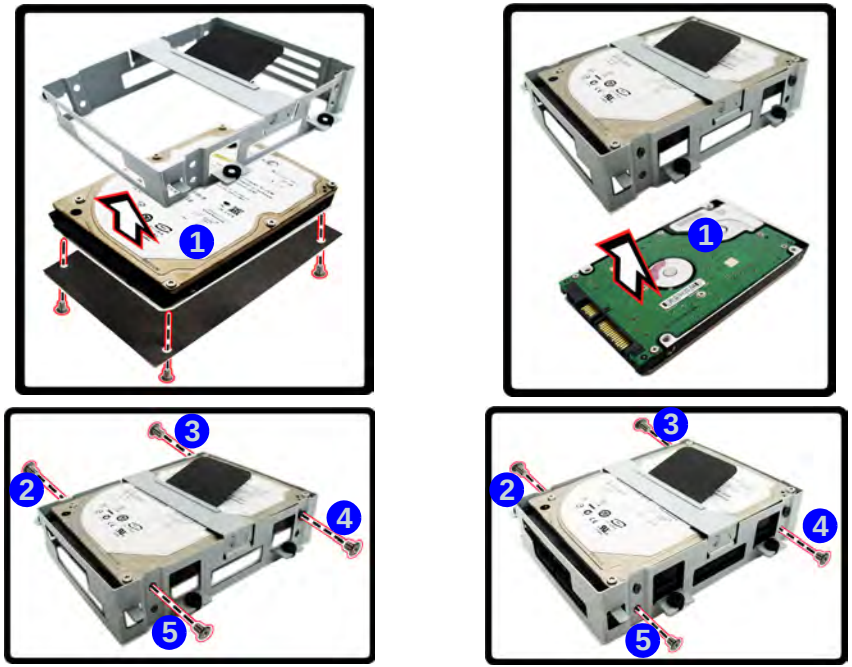

Figure 6 - 6
HDD Insertion & Screws

Downloaded from LpManual.com Manuals

3. Firmly insert the HDD cable 6 into the hard disk case 7 as indicated below.
4. Insert the HDD assembly into the bay by pushing it straight down (do not insert the assembly at an angle).
5. Firmly connect cable 8 and then secure the assembly with screws 9 - 12.

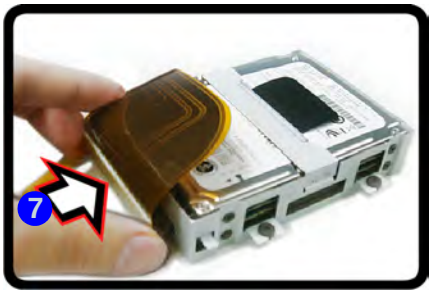

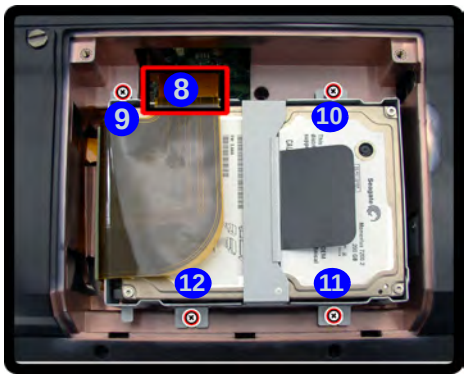

Figure 6 - 7
HDD Cable Insertion & Bay Screws/Cable Connection

Download from Service Manual

Removing the Hard Disk from the Secondary HDD Bay

1. Remove the battery (the Secondary hard disk bay is located under the battery).
2. Remove screws 1 - 4 from the hard disk assembly.
3. Grip the tab and slide the hard disk assembly in the direction of the arrow 5.
4. Lift the hard disk assembly out of the compartment.

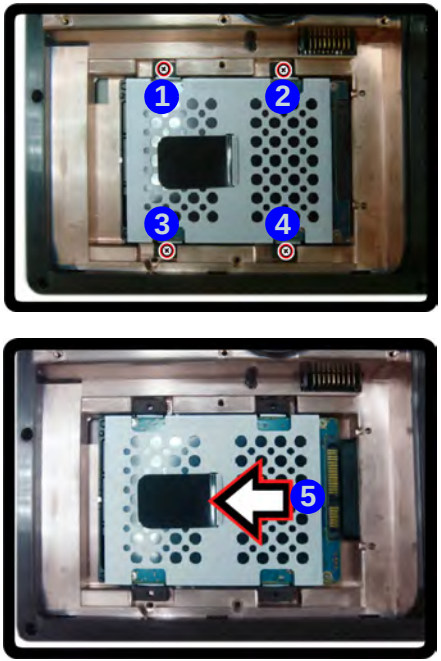

Figure 6 - 8
Secondary HDD Assembly Removal

Downloaded from LpManual.com Manuals

5. Remove screws 6 - 9 from the hard disk assembly.
6. Separate the HDD 10 from the case 11.
7. Insert the replacement HDD into the case (**make sure the cable connector is facing towards the rear of the case as illustrated below**).
8. Replace screws 6 - 9.
9. Insert the HDD assembly into the bay by pushing it straight down (do not insert the assembly at an angle) and then slide it in the direction of arrow 12 to lock in place.

Figure 6 - 9
Secondary HDD Assembly Removal

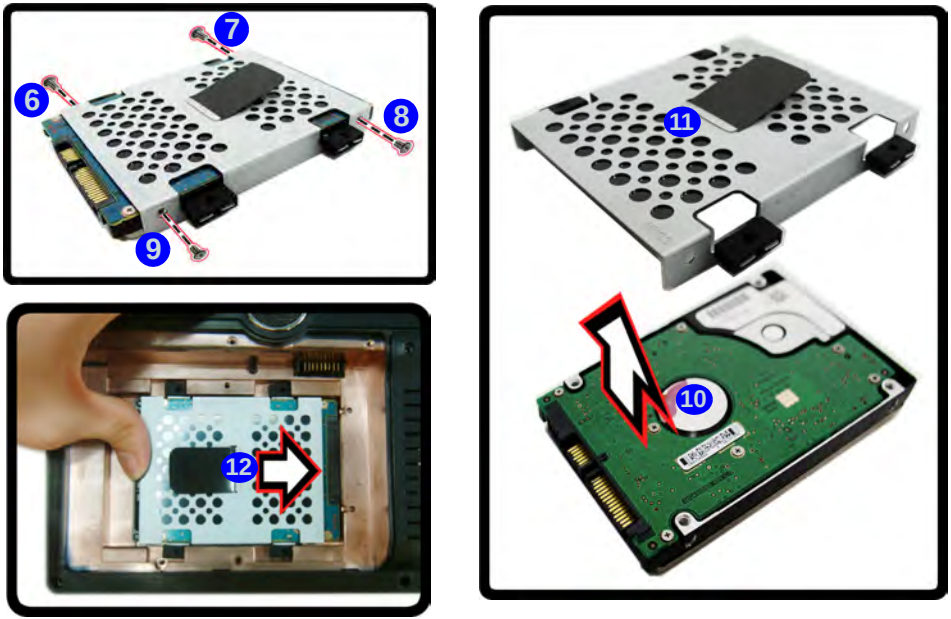

Download from Service Manuals

Upgrading the Optical (CD/DVD) Device

1. Locate the hard disk bay cover and remove screws 1 & 2.
2. Remove the hard disk bay cover 3.
3. Remove the screw at point 4, and use a screwdriver to carefully push out the optical device at point 5.
4. Reverse the process to install any new optical device.

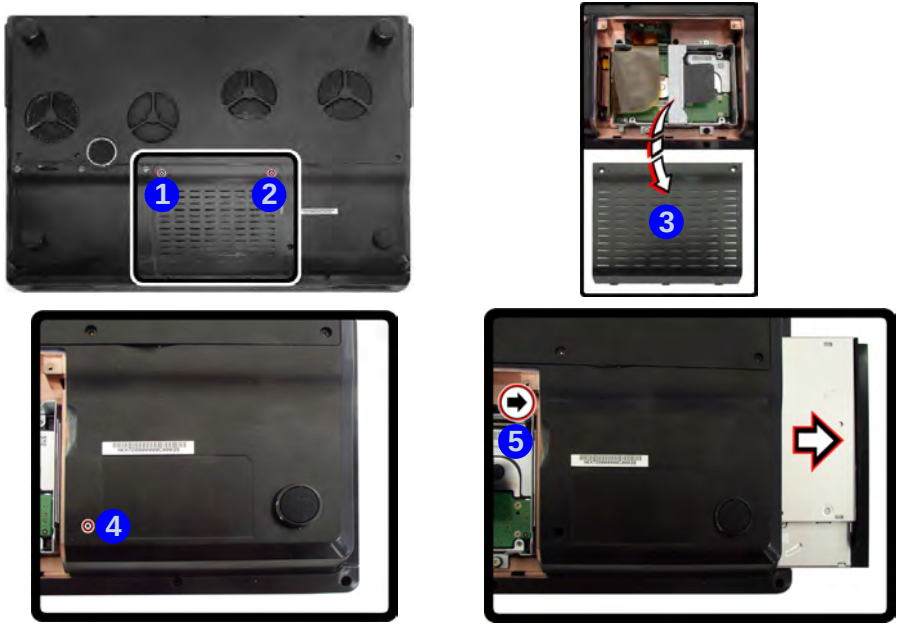

Figure 6 - 10
Removing the CD/ DVD Device

Downloaded from LpManual.com Manuals

Upgrading the System Memory (RAM)

The computer has **three** memory sockets for 204 pin Small Outline Dual In-line (SO-DIMM) **DDR III (DDR3)** type memory modules (see *"Memory" on page D - 2*). The total memory size is automatically detected by the POST routine once you turn on your computer.

1. Turn **off** the computer, and turn it over and remove the battery.
2. Remove screws 1 & 2 from the bottom of the computer

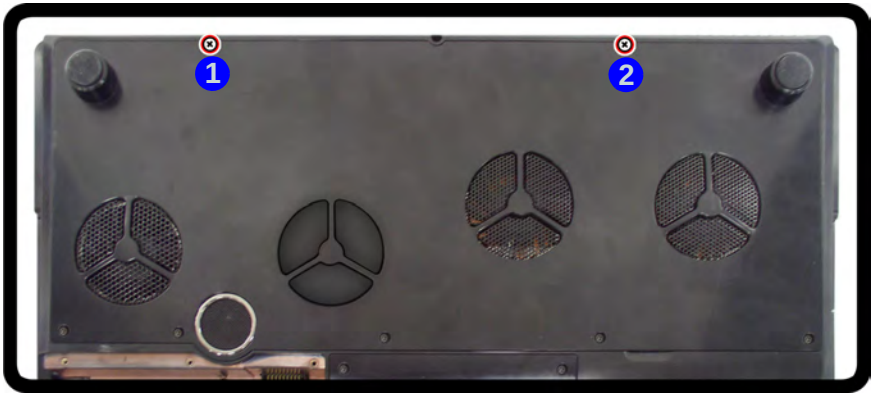

Figure 6 - 11
LED Module Screws

Download Upgrading From Manuals

3. Turn the computer over, open the Lid/LCD, and carefully (a cable is connected to the underside of the LED cover module) unsnap up the LED cover module from point 3 on the right.

Figure 6 - 12
LED Cover Module Removal

4. Disconnect cable 4 and remove the LED cover module 5.

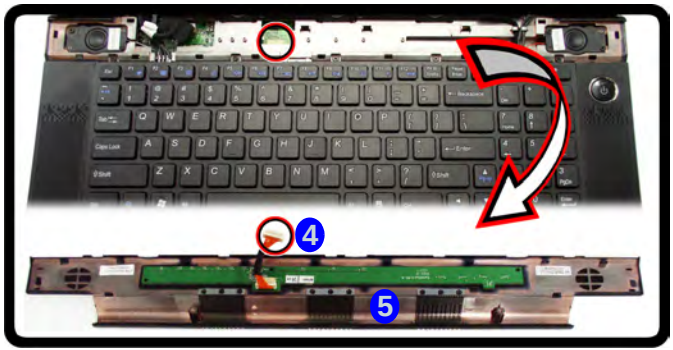

Figure 6 - 13
LED Cover Module Cable Disconnect

Downloaded from LpManual.com Manuals

5. Remove screws 6 - 10 from the keyboard.

Figure 6 - 14
Keyboard Screws

6. Carefully lift the keyboard up, being careful not to bend the keyboard ribbon cable.
7. Disconnect the keyboard ribbon cable 11 from the locking collar socket 12.

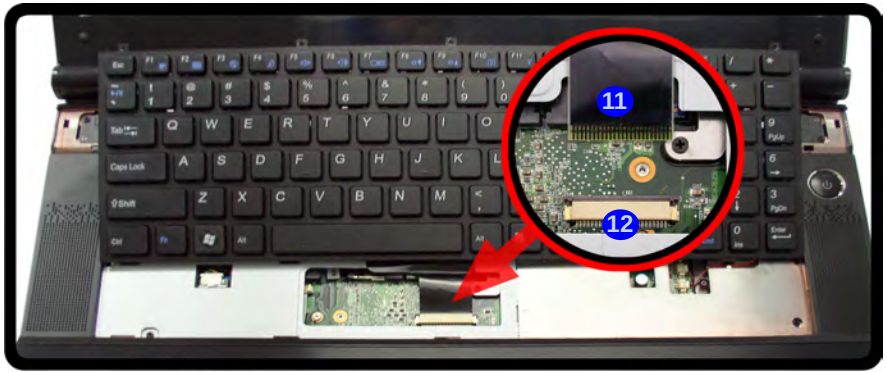

Figure 6 - 15
Disconnect the Keyboard Locking Collar

Download Upgrading From Systems

8. Remove the keyboard 13.
9. Remove screws 14 - 16 from the keyboard shielding plate.

Figure 6 - 16
Keyboard Removal

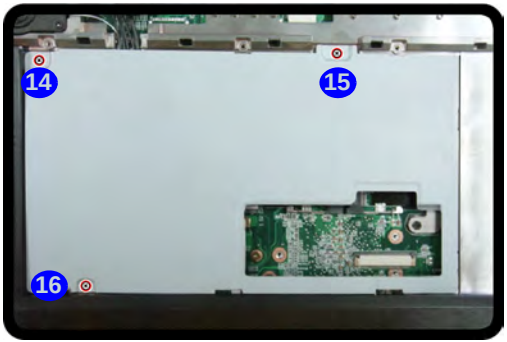

Figure 6 - 17
Keyboard Shielding Plate Screws

Downloaded from LpManual.com Manuals

10. Lift the keyboard shielding plate up in the direction of the arrow 17.
11. Remove the keyboard shielding plate 18.

Figure 6 - 18
Keyboard Shielding Plate Up

Figure 6 - 19
Keyboard Shielding Plate Remove

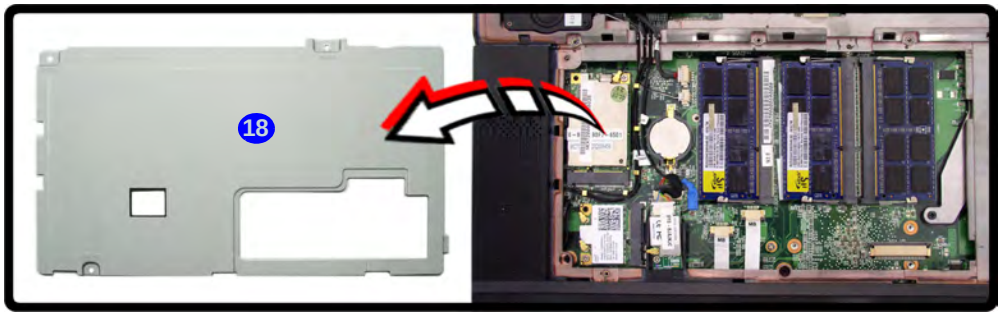

Download Upgrading From Systems

12. Gently pull the two release latches (19 & 20) on the sides of the memory socket(s) in the direction indicated below.
13. The RAM module 21 will pop-up, and you can remove it.

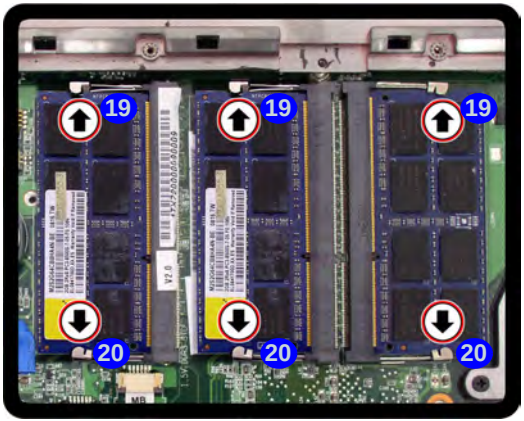

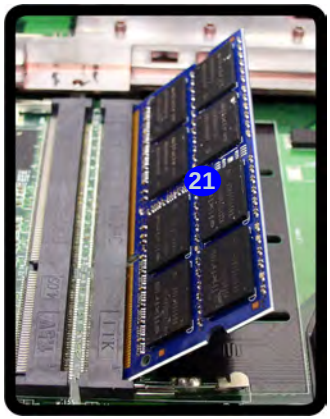

Figure 6 - 20
RAM Module Removal

14. Pull the latches to release the second module if necessary.
15. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory socket.
16. The module's pin alignment will allow it to only fit one way. Make sure the module is seated as far into the socket as it will go. DO NOT FORCE the module; it should fit without much pressure.
17. Press the module in and down towards the mainboard until the socket levers click into place to secure the module.
18. Replace the shielding plate (see over) screws, keyboard (reconnect the keyboard cable) and LED cover module (see the preceding pages).

Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.

LED Module Cable

Make sure you reconnect the keyboard cable (11 ***Figure 6 - 15***). and LED cover module cable 4 (see ***Figure 6 - 12***).

Downloaded from LpManual.com Manuals

Keyboard Shielding Plate Insertion

1. When re-inserting the keyboard shielding plate 1 make sure you insert it by sliding it into position at an angle as illustrated by arrow 2 below, and press it down into position.
2. Secure the plate with screws 3 - 5.

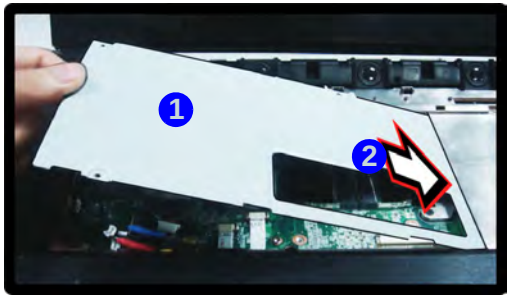

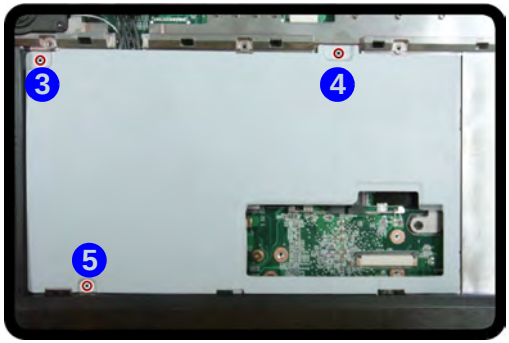

Figure 6 - 21
Keyboard Shielding Plate Insertion

Download Upgrading Your Laptop Systems

Chapter 7: Modules

Overview

This chapter contains the information on the various modules (some of which are **optional**) which may come with your computer, depending on the configuration purchased. If you are unsure please contact your service representative.

The chapter includes information on the following:

- Setting Up SATA RAID Mode
- Wireless LAN Module
- PC Camera Module
- TV Tuner Module
- Bluetooth Module
- Security Modules (Fingerprint & TPM)

Downloaded from LpManual.com Manuals

RAID Hard Disks

All hard disks in a RAID should be identical (the same size and brand) in order to prevent unexpected system behavior.

Setting Up SATA RAID Mode

AHCI Mode

Advanced Host Controller Interface (AHCI) is an interface specification that allows the storage driver to enable advanced serial ATA features such as Native Command Queuing (for maximum hard disk efficiency and performance). AHCI mode can be supported by one, two or three hard disks.

RAID

To configure your system in Striping (RAID 0) or Mirroring (RAID 1) modes (see *Table 7 - 1, on page 7 - 3*) you will require **at least two identical** (see sidebar) hard disks; to configure your system in Intel® Rapid Recover Technology (Recovery) mode you will require **two hard disks** installed; to configure your system in Parity Across Disks (RAID 5) mode you will require **three hard disks** installed.

Intel® Rapid Storage Technology Application

Make sure you install the **Intel® Rapid Storage Technology** application if you have set up your hard disk(s) in **RAID** mode (see *"Intel Rapid Storage Technology" on page 7 - 8*).

Downloaded from ManualsNet.com manuals

RAID Level	Description
RAID 0	Identical drives reading and writing data in parallel to **increase performance**. RAID 0 implements a striped disk array and the data is broken into blocks and each block is written to a separate disk drive.
RAID 1	Identical drives in a mirrored configuration used to **protect data**. Should a drive that is part of a mirrored array fail, the mirrored drive (which contains identical data) will handle all the data. When a new replacement drive is installed, data to the new drive is rebuilt from the mirrored drive to restore fault tolerance.
Recovery	Two Identical drives copying data between a master and a recovery disk. This provides more control over how data is copied between the master and recovery drives, fast volume updates and the ability to view the data in *Windows Explorer*.

Table 7 - 1
RAID Levels

Prepare the following before setting up your serial ATA hard disks in **RAID** mode:

1. The ***Microsoft Windows 7 OS DVD***.
2. A **second** (identical) hard disk installed in the Primary HDD bay.
   OR
   A **second** (identical) hard disk installed in the Primary HDD bay, and a **third** (identical) hard disk in the Secondary HDD bay if required.
3. The ***Device Drivers & Utilities + User's Manual*** disc.

Array Types

A **Mirrored Array** (**RAID 1**) provides full data protection, as data can simply be copied from a healthy disk to a replacement for any failed disk.

A **Striped Array** (**RAID 0**) is **NOT** fault-tolerant. The failure of one drive will result in the loss of all data in the array. It is de-signed to increase disk performance by spreading the I/O load across the channels and drives.

Downloaded from LpManual.com Manuals

SATA RAID Setup Procedure (BIOS)

1. Start-up your notebook computer and press <**F2**> to enter the **BIOS**.
2. Go to the **Advanced** menu, select "**SATA Mode Selection**" and press Enter (see page ***5 - 8***).

- Select "**RAID**".

3. Press **Esc** and go to the **Boot** menu.
4. Set the ***DVD-ROM Drive*** (make sure the ***Microsoft Windows 7 OS DVD*** is inserted) as the first device in the boot order from the **Boot** menu (see ***"Boot Menu" on page 5 - 15***).
5. Select ***Exit Saving Changes*** from the **Exit** menu (or press **F10** and Enter) and press Enter to exit the BIOS and reboot the computer.
6. See the instructions in ***"RAID Setup (Intel Matrix)" on page 7 - 5***.

Downloaded Setting Manuals from Mavalls

RAID Setup (Intel Matrix)

1. As the computer starts up press **Ctrl + i** to enter RAID configuration menu.

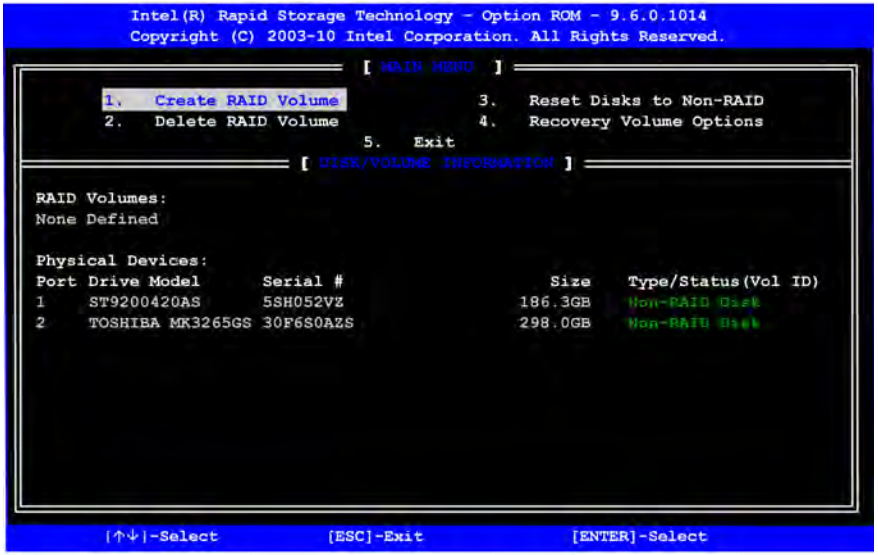
Intel(R) Rapid Storage Technology - Option ROM - 9.6.0.1014
Copyright (C) 2003-10 Intel Corporation. All Rights Reserved.
[MAIN MENU]
1. Create RAID Volume
2. Delete RAID Volume
3. Reset Disks to Non-RAID
4. Recovery Volume Options
5. Exit
[DISK/VOLUME INFORMATION]
RAID Volumes:
None Defined
Physical Devices:
Port Drive Model Serial # Size Type/Status(Vol ID)
1 ST9200420AS 5SH052VZ 186.3GB Non-RAID Disk
2 TOSHIBA MK3265GS 30F6S0AZS 298.0GB Non-RAID Disk
[↑↓]-Select
[ESC]-Exit
[ENTER]-Select

Figure 7 - 1
Intel(R) Rapid Storage Technology Option ROM

2. Select **1.Create RAID Volume** and press Enter.
3. Type the **RAID volume name** and then press Tab or Enter to advance to the next field.
4. Specify (use the up and down arrow keys) the **RAID level** (**RAID 0, RAID 1, RAID 5 or Recovery** - see ***Table 7 - 1, on page 7 - 3***) and then press Tab or Enter to advance to the next field.

Recovery Level

When selecting disks for the Recovery RAID level you will need to use the **Tab** key to select a **Master** disk, and the **Space** key to select a **Recovery** disk.

You can select the synchronization between the disks to be **Continuous** (automatic) or **On Request** (manually).

Downloaded from LpManual.com Manuals

Recovery Level

When selecting disks for the Recovery RAID level you will need to use the **Tab** key to select a **Master** disk, and the **Space** key to select a **Recovery** disk.

You can select the synchronization between the disks to be **Continuous** (automatic) or **On Request** (manually).

5. Press Enter and the system will select the physical disks to use.
6. Press Enter and select (if applicable) the Strip Size (best set to default).
7. Press Enter and select the Capacity size (best set to default).
8. Press Enter to select **Create Volume**.
9. Press Enter to create the volume, and confirm the selection by pressing **Y**.
10. This will now return to the main menu.

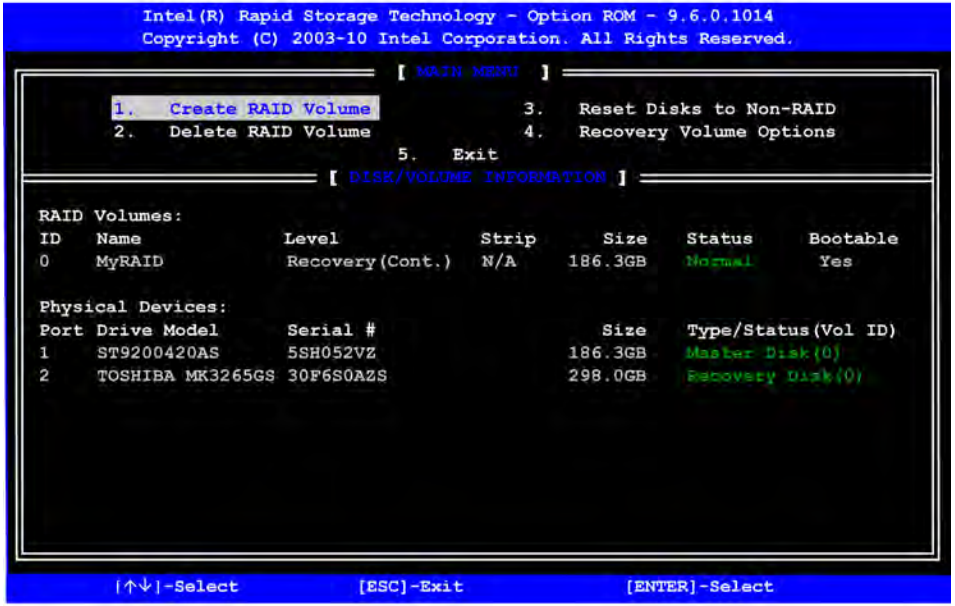
Intel(R) Rapid Storage Technology - Option ROM - 9.6.0.1014
Copyright (C) 2003-10 Intel Corporation. All Rights Reserved.
[MAIN MENU]
1. Create RAID Volume
2. Delete RAID Volume
3. Reset Disks to Non-RAID
4. Recovery Volume Options
5. Exit
[DISK/VOLUME INFORMATION]
RAID Volumes:
ID Name Level Strip Size Status Bootable
0 MyRAID Recovery(Cont.) N/A 186.3GB Normal Yes
Physical Devices:
Port Drive Model Serial # Size Type/Status(Vol ID)
1 ST9200420AS 5SH052VZ 186.3GB Master Disk(0)
2 TOSHIBA MK3265GS 30F6S0AZS 298.0GB Recovery Disk(0)
[↑↓]-Select
[ESC]-Exit
[ENTER]-Select

Figure 7 - 2
RAID Created

11. Select **5.Exit** and press Enter, then press **Y** to exit the RAID configuration menu.

Downloaded Setting Manuals from Mediafire

12. Make sure the ***Windows 7*** OS DVD is in the DVD drive. and as the computer starts up it will automatically boot from the ***Windows 7*** OS DVD.
13. Press **Enter** to continue installing the operating system as normal (see your ***Windows*** documentation if you need help on installing the ***Windows*** OS).
14. Install the ***Windows*** drivers from the ***Device Drivers & Utilities + User's Manual*** disc as per ***Table 4 - 1, on page 4 - 3*** (make sure you install the Intel Rapid Storage Technology driver - see ***"IRST Driver Installation" on page 7 - 8***).

Downloaded from LpManual.com Manuals

Intel Rapid Storage Technology

The **Intel Rapid Storage Technology application** provides high-performance SATA and SATA RAID capabilities. Install the **Intel Rapid Storage Technology application** to support your **RAID** system or SATA drive if set up in **AHCI mode** in the BIOS (see ***"SATA Mode (Advanced Menu)" on page 5 - 9***).

IRST Driver Installation

1. Insert the ***Device Drivers & Utilities + User's Manual*** disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **4.Install IRST Driver > Yes**.
4. Click **Next > Next > Yes > Next > Next**.
5. Click **Finish** to restart the computer (you will need to restart the system again after the computer has rebooted).

See the following pages for more information if you have set your hard disks up in a RAID configuration.

Downloaded from Laptopmanuals.com

Intel® Rapid Storage Technology for RAID Systems

Intel® Rapid Storage Technology application displays status information on your RAID configuration. Run the **Intel® Rapid Storage Technology** application from the **Intel** item in the **All Programs** menu.

When the **Intel® Rapid Storage Technology** application is launched the system will open the **Status** window. Here you can view the general health of the storage system. Various volume creation and management options are available depending on the system's status.

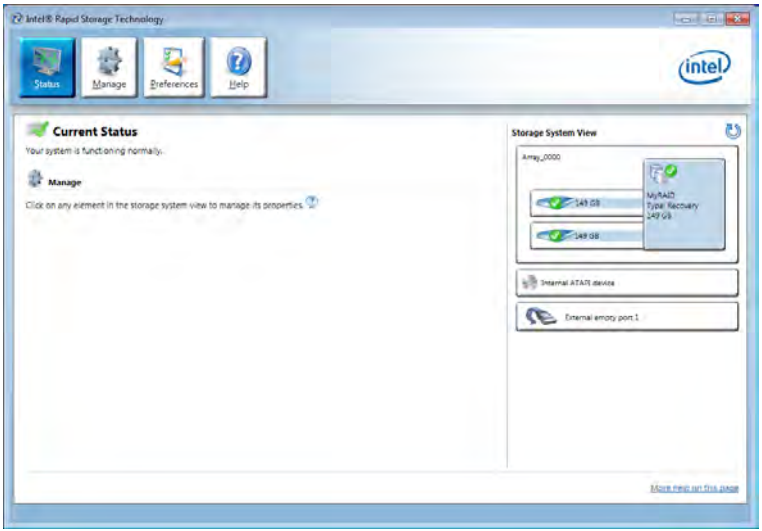

Figure 7 - 3
Intel® Rapid Storage Technology Status

Downloaded from LpManual.com Manuals

RAID Volume Data Verification and Repair

The RAID volume data verification process identifies any inconsistencies or bad data on a RAID 0 or RAID 1 volume. The table outlines what occurs for each RAID level:

Table 7 - 2
RAID Verification & Repair Status

RAID Level	Verify	Verify & Repair
RAID 0	Bad blocks are identified.	N/A
RAID 1	Bad blocks are identified. Data on the mirrored drive is compared to data on the source drive.	Bad blocks are reassigned. If the data on the mirrored drive does not match the data on the source drive, the data on the mirrored drive is overwritten by the data on the source.
RAID 5	Bad blocks are identified. Parity is recalculated and compared to the stored parity for that stripe.	Bad blocks are reassigned. If the newly calculated parity does not match the stored parity, the stored parity is overwritten with the newly calculated parity.

Replacing and Reverting Recovery and Master Volumes

If a master or recovery drive fails you will need to add a new identical drive and re-build the recovery volume to the drive. You can also revert the master drive to the state of the previous volume update. For details on how to do this see ***"Intel® Rapid Storage Technology Help" on page 7 - 11***.

See over for details on how to verify and repair RAID volume data.

Download from Intel Rapid Storage Technology

Intel® Rapid Storage Technology Help

If a hard drive member of a RAID volume is reported as "**Degraded**" or "**Failed**" it may be possible to recover the volume. If the volume cannot be restored then you will need to recreate the RAID volume and restore the data from a back up. Click the **Help** menu (or press **F1**) for instructions on how to recover or recreate RAID Volumes.

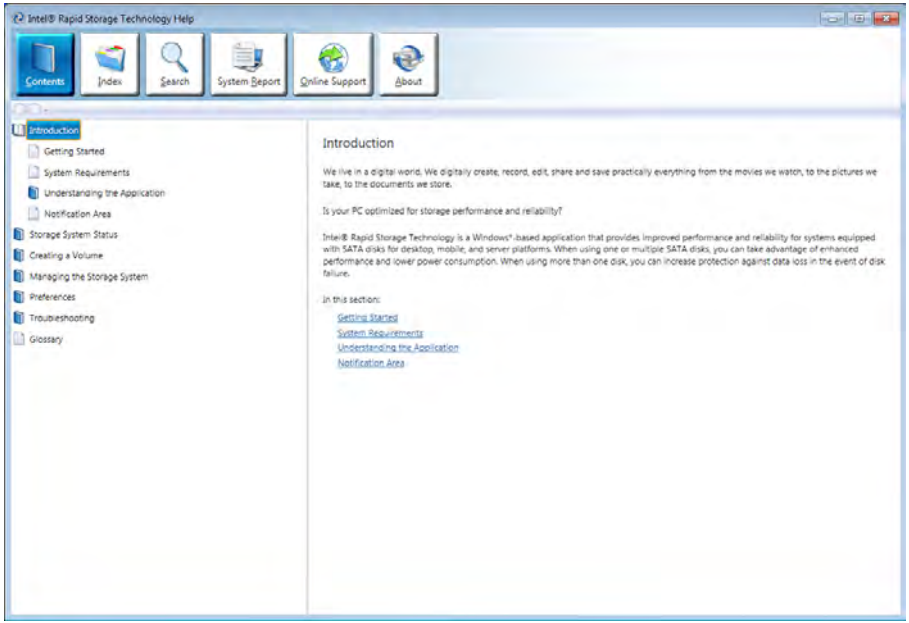
Intel® Rapid Storage Technology Help
Contents
Index
Search
System Report
Online Support
About
Introduction
Getting Started
System Requirements
Understanding the Application
Notification Area
Storage System Status
Creating a Volume
Managing the Storage System
Preferences
Troubleshooting
Glossary
Introduction
We live in a digital world. We digitally create, record, edit, share and save practically everything from the movies we watch, to the pictures we take, to the documents we store.
Is your PC optimized for storage performance and reliability?
Intel® Rapid Storage Technology is a Windows®-based application that provides improved performance and reliability for systems equipped with SATA disks for desktop, mobile, and server platforms. When using one or multiple SATA disks, you can take advantage of enhanced performance and lower power consumption. When using more than one disk, you can increase protection against data loss in the event of disk failure.
In this section:
Getting Started
System Requirements
Understanding the Application
Notification Area

Help

Click the **Help** (or press **F1**) menu button at the top of the **Intel® Rapid Storage Technology** application.

Click **Contents** to view the general list of subjects covered, click **Index** or **Search** for a more specific help topics on a particular item.

Click **More help on this page** at the bottom of any page for page specific help.

Figure 7 - 4
Intel® Rapid Storage Technology Help

Downloaded from LpManual.com Manuals

RAID Volume Data Verification and Repair

The RAID volume data verification process identifies any inconsistencies or bad data on a RAID 0 or RAID 1 volume. The table outlines what occurs for each RAID level:

Table 7 - 3
RAID Verification & Repair Status

RAID Level	Verify	Verify & Repair
RAID 0	Bad blocks are identified.	N/A
RAID 1	Bad blocks are identified. Data on the mirrored drive is compared to data on the source drive.	Bad blocks are reassigned. If the data on the mirrored drive does not match the data on the source drive, the data on the mirrored drive is overwritten by the data on the source.
RAID 5	Bad blocks are identified. Parity is recalculated and compared to the stored parity for that stripe.	Bad blocks are reassigned. If the newly calculated parity does not match the stored parity, the stored parity is overwritten with the newly calculated parity.

Replacing and Reverting Recovery and Master Volumes

If a master or recovery drive fails you will need to add a new identical drive and re-build the recovery volume to the drive. You can also revert the master drive to the state of the previous volume update. For details on how to do this see the help file *"Intel® Rapid Storage Technology Help" on page 7 - 11*. See over for details on how to verify and repair RAID volume data. Verification will identify and repair data inconsistencies on the volume.

Downloaded from Laptopmanuals.co.uk

Verifying and Repairing RAID Volume Data

1. Before verifying the volume data you will need to initialize the volume.
2. Run the **Intel® Rapid Storage Technology** application from the **Intel** item in the **Programs/All Programs** menu.
3. Click **Manage** and click **Advanced**.
4. Click **Initialize** and click **Yes** (button) to begin the process.
5. The completion percentage will be listed under **Status**.

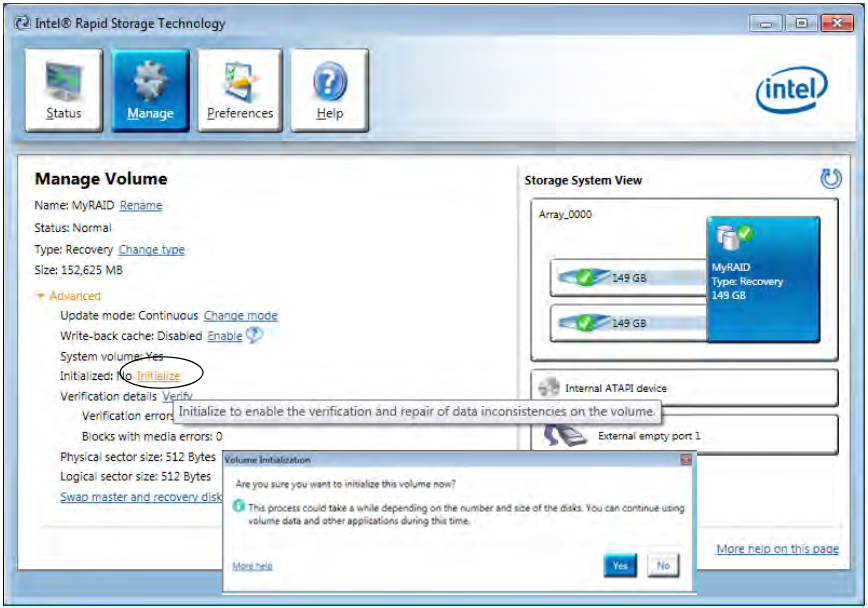

Figure 7 - 5
Intel® Rapid Storage Technology Initialize

Downloaded from LpManual.com Manuals

6. Click **Advanced** and click **Verify**, then click **Verify** (button) to begin the process.
7. The completion percentage will be listed under **Status** (verifying and repairing).

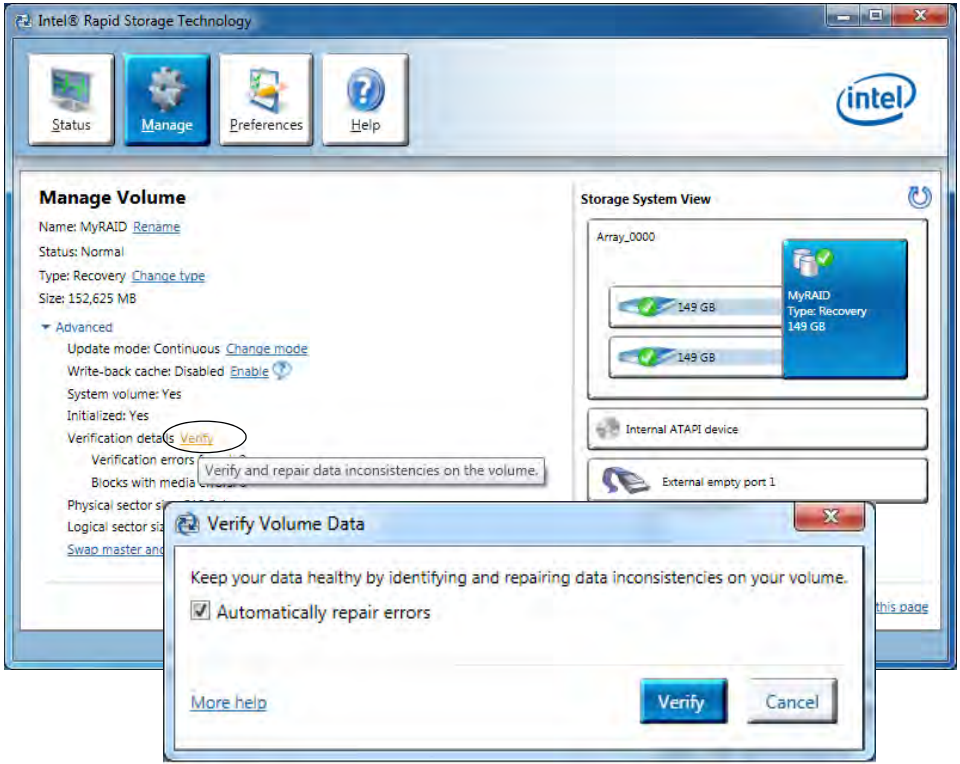

Figure 7 - 6
Intel® Rapid Storage Technology Verify

Downloaded from Laptopmanuals.co.uk

Wireless LAN Module

If you have included an **Intel® Wireless LAN** module or **3rd Party 802.11b/g/n WLAN module** in your purchase option, make sure that the Wireless LAN module is on before installing the driver.

Use the Fn + F11 key combination or **Touch Sensor Instant Key** to toggle power to the Wireless LAN module. When the WLAN module is powered on, the touch sensor LED will be highlighted and the indicator will briefly be displayed. Make sure you install the drivers in the order indicated in ***Table 4 - 1, on page 4 - 3***. The operating system is the default setting for Wireless LAN control in ***Windows 7***.

Note that you need to install both the WLAN & Bluetooth drivers for the WLAN & Bluetooth Combo module.

Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices aboard aircraft is usually prohibited. Make sure the module(s) are OFF if you are using the computer aboard aircraft.

Use the **Fn + F11** key combination/Touch Sensor Instant key to toggle power to the WLAN module, and check the LED to see if the module is powered on or not (see ***Table 1 - 4, on page 1 - 10***/ ***Table 1 - 3, on page 1 - 8***).

Downloaded from LpManual.com Manuals

Intel(R) PROSet/ Wireless

Access the **Intel PROSet Wireless** tools (Statistics and Diagnostic tools) from the Start menu (Start > Programs/All Programs > **Intel PROSet Wireless**). These tools provide diagnostic and statistical information only (use the WLAN control in ***Windows*** to connect to a WLAN access point).

Intel® Wi-Fi Link Series Driver Installation

If you see the message "**Found New Hardware**" click **Cancel** to close the window.

1. Make sure the module is powered on, then insert the ***Device Drivers & Utilities + User's Manual*** disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **1.Install WLAN Driver > Yes**.
4. Click **Next > Next**.
5. Click the button to accept the license and click **Next**.
6. Click **Next > Next > Finish**.

Note: The operating system is the default setting for Wireless LAN control in ***Windows*** (see overleaf).

802.11b/g/n Driver Installation

1. Make sure the module is powered on, then insert the ***Device Drivers & Utilities + User's Manual*** disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **1.Install WLAN Driver > Yes**.
4. Choose the language you prefer and click **Next**.
5. Click **Next > Install**.
6. Click **Finish** to restart the computer.

Note: The operating system is the default setting for Wireless LAN control in ***Windows 7*** (see overleaf).

Downloaded from Laptopmanuals.com manuals

Connecting to a Wireless Network in Windows 7

Make sure the Wireless LAN module is turned on.

1. **Click** the taskbar wireless icon , and then double-click an access point to connect to or click to **Open Network and Sharing Center** if you do not see a network you want to connect to in the taskbar menu (a list of options will appear allowing setting changes, and creating a new network).

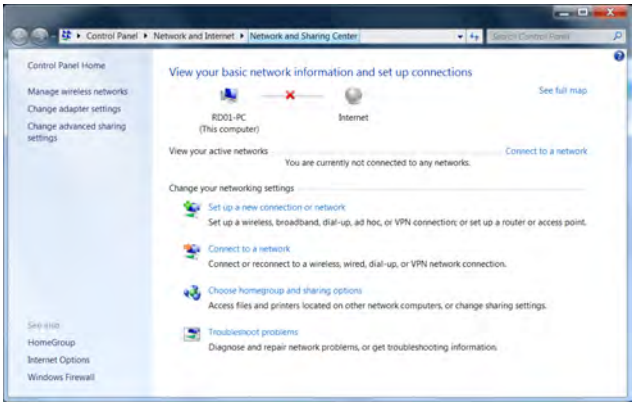
Control Panel
Network and Internet
Network and Sharing Center
Control Panel Home
Manage wireless networks
Change adapter settings
Change advanced sharing settings
View your basic network information and set up connections
See full map
RD01-PC
(This computer)
Internet
View your active networks
Connect to a network
You are currently not connected to any networks.
Change your networking settings
Set up a new connection or network
Set up a wireless, broadband, dial-up, ad hoc, or VPN connection; or set up a router or access point.
Connect to a network
Connect or reconnect to a wireless, wired, dial-up, or VPN network connection.
Choose homegroup and sharing options
Access files and printers located on other network computers, or change sharing settings.
Troubleshoot problems
Diagnose and repair network problems, or get troubleshooting information.
See also
HomeGroup
Internet Options
Windows Firewall

Network and Sharing Center

You can also use the **Network and Sharing Center** control panel in Windows (**Network and Internet**) to connect to any available wireless networks.

Figure 7 - 7
Click Taskbar Icon Menu & Network and Sharing Center

Downloaded from LpManual.com Manuals

2. You may need to enter a security key for any access point to which you are trying to connect.
3. Click to select a network location (e.g. **Home, Work or Public**).
4. Click "**View or change settings in Network and Sharing Center"** to access further options for the connection.

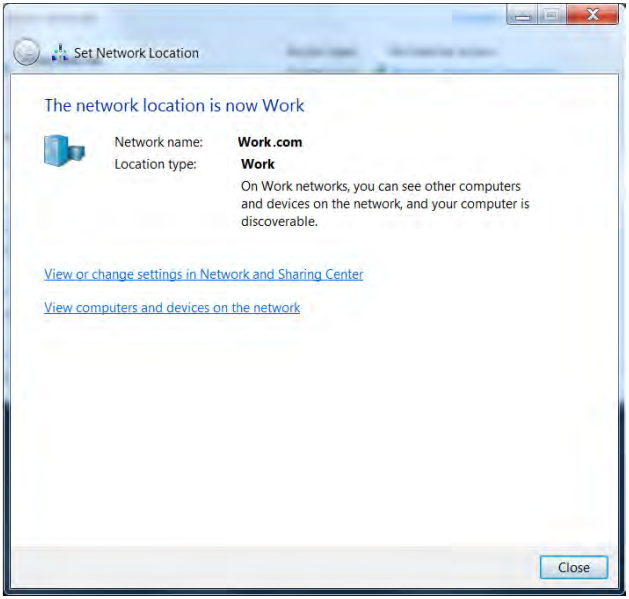
Set Network Location
The network location is now Work
Network name: Work.com
Location type: Work
On Work networks, you can see other computers and devices on the network, and your computer is discoverable.
View or change settings in Network and Sharing Center
View computers and devices on the network
Close

Figure 7 - 8
Network Location Set

Download from Specialist Manuals

5. Click the taskbar icon to see any currently connected networks.
6. To disconnect from the wireless network you can click the taskbar wireless icon, click the active connection and then click **Disconnect** (button).

Security Enabled Networks

You should try to make sure that any network you are connecting to is a secure network.

Connecting to unsecure networks may allow unauthorized access to your computer, documents, websites and files etc.

Figure 7 - 9
Click Taskbar Icon Menu - Disconnect

Downloaded from LpManual.com Manuals

Intel® My WiFi Help

To get help on **Intel® My WiFi** configuration and settings, access the **Intel® My WiFi Utility** from the **Start** menu (Start > Programs/All Programs > Intel PRO-Set Wireless > Intel My WiFi Technology), or by clicking the taskbar icon . Click the **Help** icon

and select a help topic from the **Contents** menu.

Intel® My WiFi Configuration

Intel® My WiFi Technology uses your WLAN (**for Intel WLAN modules only**) module to allow you to connect up to eight other WiFi enabled devices (e.g. digital cameras, other computers, cell phones, handheld devices etc.) to your computer (similar to Bluetooth), while still connecting to the Internet through your WiFi wireless connection. Intel® My WiFi Technology offers greater range and speed than other personal area networks, and does not require an access point.

Download from Professional Service Manuals

Intel® My WiFi Configuration

You can configure the My WiFi settings as follows.

1. Access the **Intel® My WiFi Utility** from the **Start** menu (**Start** > **Programs/All Programs** > **Intel PROSet Wireless > Intel My WiFi Technology**), or by double-clicking the taskbar icon .
2. Click **Enable** Enable (on the first run of the program there will be no connected devices listed).

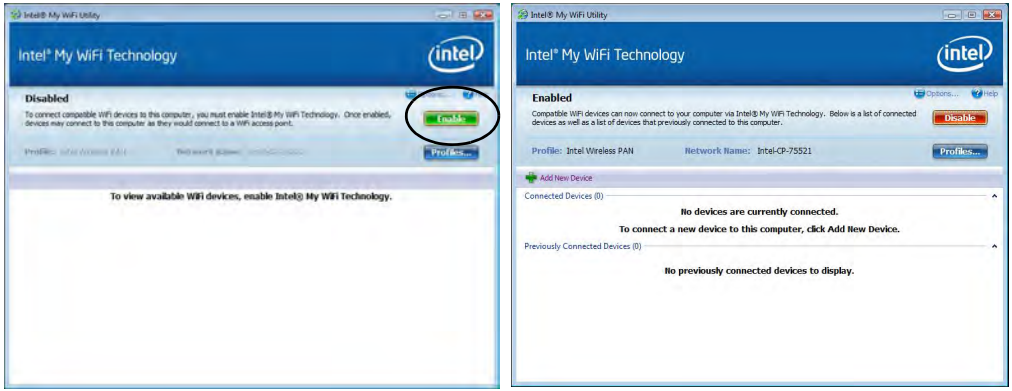
Intel® My WiFi Technology
Disabled
To view available WiFi devices, enable Intel® My WiFi Technology.
Intel® My WiFi Technology
Enabled
Disable
Profiles...
Add New Device
Connected Devices (0)
No devices are currently connected.
To connect a new device to this computer, click Add New Device.
Previously Connected Devices (0)
No previously connected devices to display.

Figure 7 - 10
Intel® My WiFi Utility

Downloaded from LpManual.com Manuals

3. Click **Start** and click **Control Panel**.
4. Click **Network and Sharing Center** (**Network and Internet**).
5. Click **Change adapter settings**.

Figure 7 - 11
Network and Sharing Center

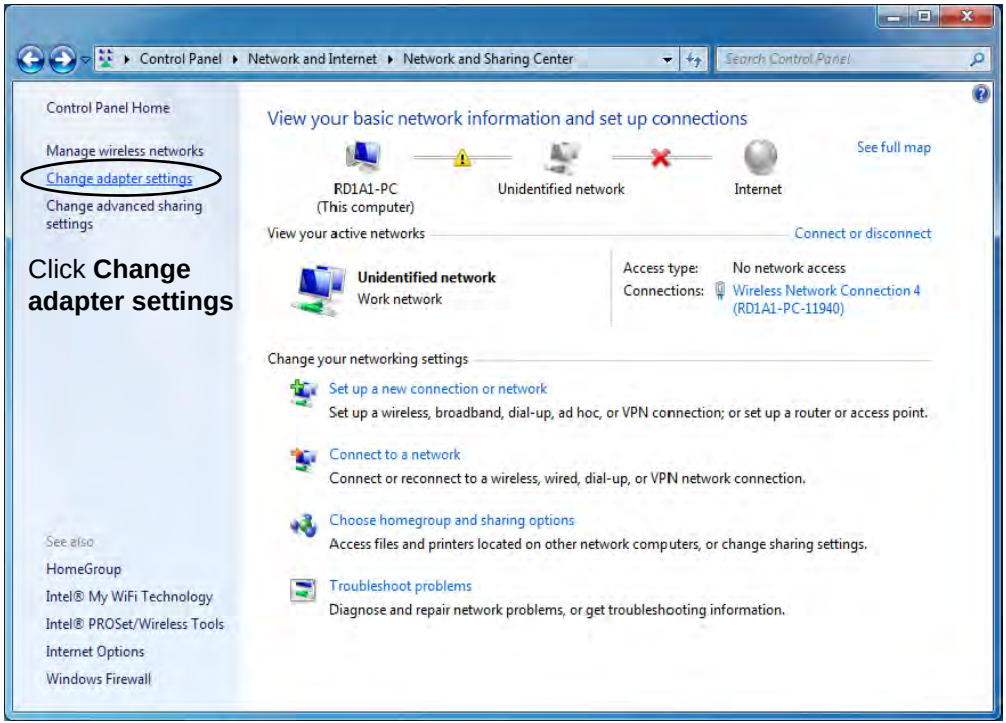
Control Panel ▸ Network and Internet ▸ Network and Sharing Center
Search Control Panel
Control Panel Home
Manage wireless networks
Change adapter settings
Change advanced sharing settings
Click Change adapter settings
View your basic network information and set up connections
See full map
RD1A1-PC (This computer)
Unidentified network
Internet
View your active networks
Connect or disconnect
Unidentified network
Work network
Access type: No network access
Connections: Wireless Network Connection 4 (RD1A1-PC-11940)
Change your networking settings
Set up a new connection or network
Set up a wireless, broadband, dial-up, ad hoc, or VPN connection; or set up a router or access point.
Connect to a network
Connect or reconnect to a wireless, wired, dial-up, or VPN network connection.
Choose homegroup and sharing options
Access files and printers located on other network computers, or change sharing settings.
Troubleshoot problems
Diagnose and repair network problems, or get troubleshooting information.
See also
HomeGroup
Intel® My WiFi Technology
Intel® PROSet/Wireless Tools
Internet Options
Windows Firewall

Downloaded from Specialized.com manuals

6. Right-click **Wireless Network Connection** and select **Properties**.

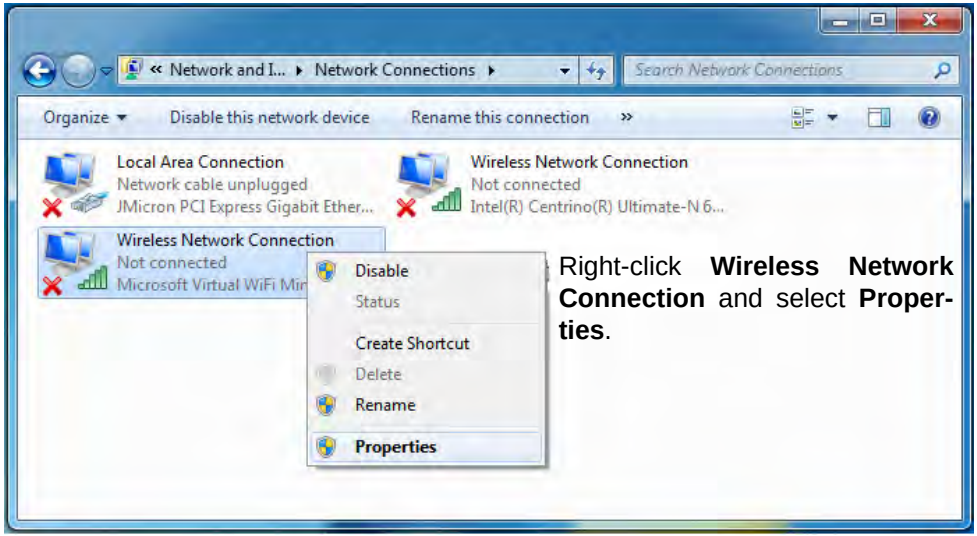

Figure 7 - 12
Network Connections

Downloaded from LpManual.com Manuals

7. Click **Sharing (tab)** and select "**Allow other network users to connect through this computer's Internet connection**".
8. Select **Wireless Network Connection** under **Home networking connection**.
9. Click **OK**.

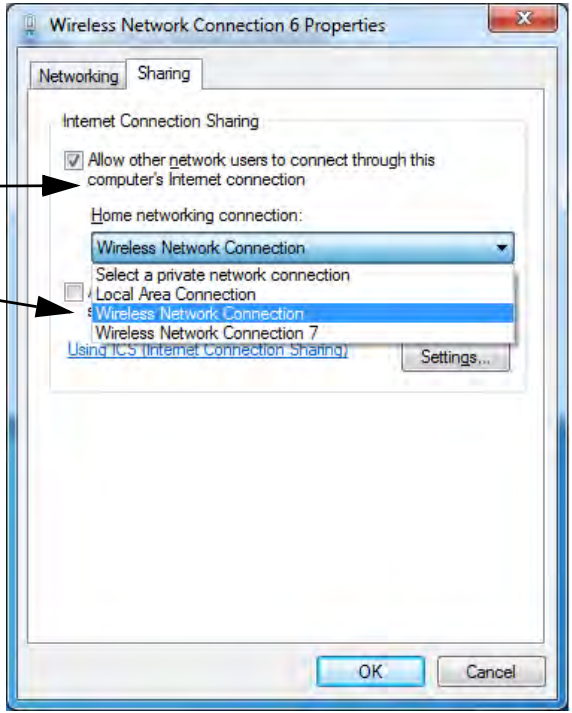

Click "**Allow other network users to connect through this computer's Internet connection**".

Select **Wireless Network Connection**.

Figure 7 - 13
Wireless Network Connection Properties - Sharing

Downloaded from Laptopmanuals.com manuals

10. Access the **Intel® My WiFi Utility** from the **Start** menu (**Start** > **Programs/All Programs** > **Intel PROSet Wireless > Intel My WiFi Technology**), or by double-clicking the taskbar icon .
11. Click **Profiles** Profiles... .

Intel® My WiFi Utility
Intel® My WiFi Technology
intel
Enabled
Options...
Help
Compatible WiFi devices can now connect to your computer via Intel® My WiFi Technology. Below is a list of connected devices as well as a list of devices that previously connected to this computer.
Disable
Profile: Intel Wireless PAN
Network Name: Intel-CP-75521
Profiles...
Add New Device
Connected Devices (0)
No devices are currently connected.
To connect a new device to this computer, click Add New Device.
Previously Connected Devices (0)
No previously connected devices to display.

Figure 7 - 14
Intel® My WiFi Utility - Profiles

Downloaded from LpManual.com Manuals

12. Click **Profiles,** click **Intel Wireless PAN** and click **Edit** or **New (Note that all preset settings may not be editable - see sidebar)**.

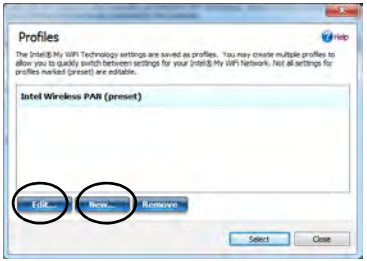

Figure 7 - 15
Profiles

13. You can change the **Profile Name** and **Network Name** to your personal preferences in **General** (tab).

Profile Settings

Profiles that are **preset may not be fully editable**. To edit all the profile settings, click **New** to create a new profile and adjust the settings to your preferences.

Profile and Network Names

The **Profile Name** is the name as displayed on your computer in the **Network Connections** control panel (see ***Figure 7 - 17 on page 7 - 27***).

The **Network Name (SSID)** is the name the devices see when they try to connect to your computer.

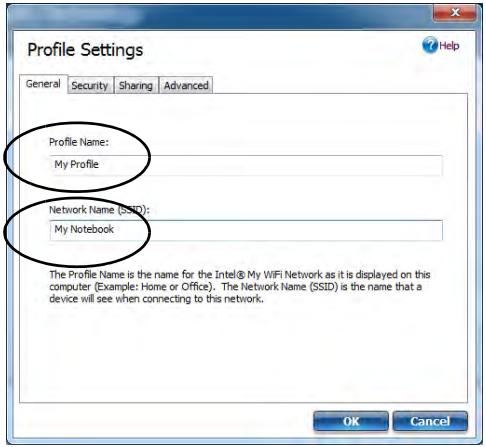
Profile Settings
Help
General
Security
Sharing
Advanced
Profile Name:
My Profile
Network Name (SSID):
My Notebook
The Profile Name is the name for the Intel® My WiFi Network as it is displayed on this computer (Example: Home or Office). The Network Name (SSID) is the name that a device will see when connecting to this network.
OK
Cancel

Figure 7 - 16
Intel® My WiFi Profile Settings - General

Downloaded from Specialized.com manuals

14. Click **Security** (tab).
15. Change the **Security Type** to **WEP** and the **Encryption Type** to **64bit**.
16. Enter a password (8 characters long) in the **Password** box.

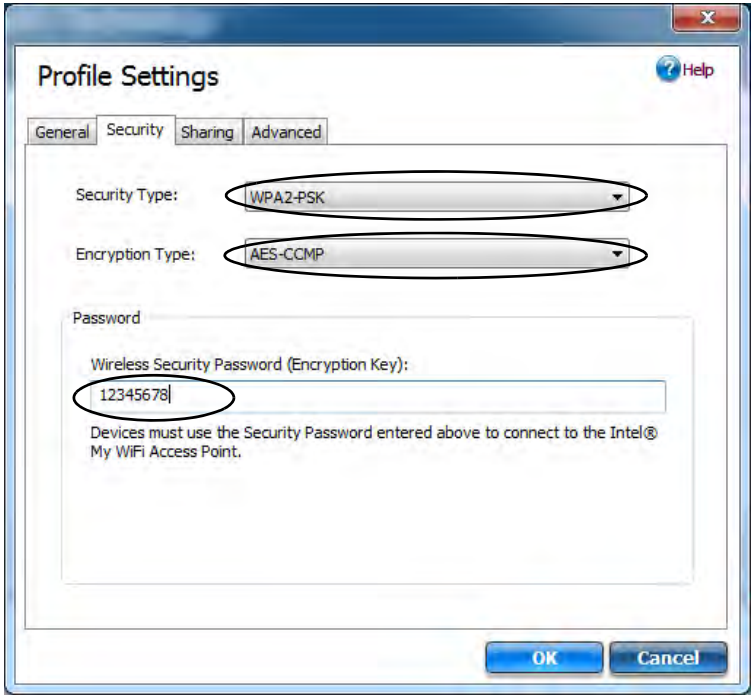

Figure 7 - 17
Intel® My WiFi Profile Settings - Security

Downloaded from LpManual.com Manuals

17. Click **Sharing** (tab).
18. It is recommended that the **Filter Network Traffic** and **DHCP and DNS Server** are **Disabled**.

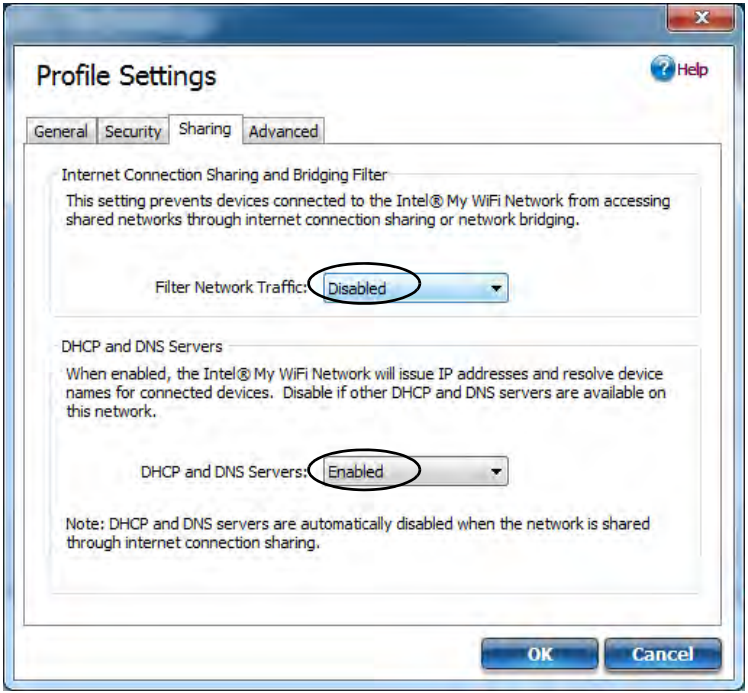
Profile Settings
Help
General
Security
Sharing
Advanced
Internet Connection Sharing and Bridging Filter
This setting prevents devices connected to the Intel® My WiFi Network from accessing shared networks through internet connection sharing or network bridging.
Filter Network Traffic:
Disabled
DHCP and DNS Servers
When enabled, the Intel® My WiFi Network will issue IP addresses and resolve device names for connected devices. Disable if other DHCP and DNS servers are available on this network.
DHCP and DNS Servers:
Enabled
Note: DHCP and DNS servers are automatically disabled when the network is shared through internet connection sharing.
OK
Cancel

Figure 7 - 18
Intel® My WiFi Profile Settings - Sharing

Downloaded from Elcodis.com electronic components

19. Click **Advanced** (tab).
20. It is recommended that the **Default Channel** is set to **Channel 1, 6** or **11**.
21. Click **OK** to save the settings.

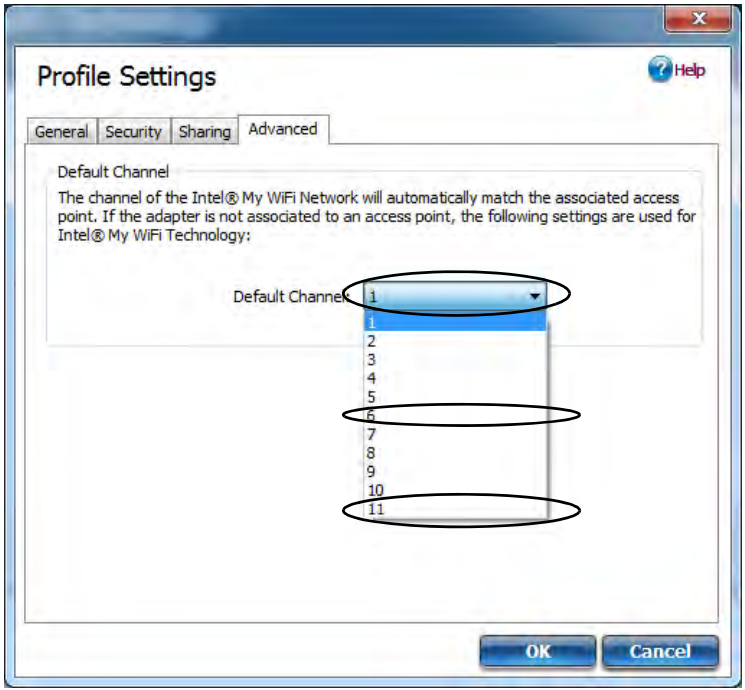

Figure 7 - 19
Intel® My WiFi Profile Settings - Advanced

Downloaded from LpManual.com Manuals

22. Double-click **Wireless Network Connection** in **Network Connections**.
23. Click **Details** to display the **Network Connection Details**.

Figure 7 - 20
Wireless Network Connection Details

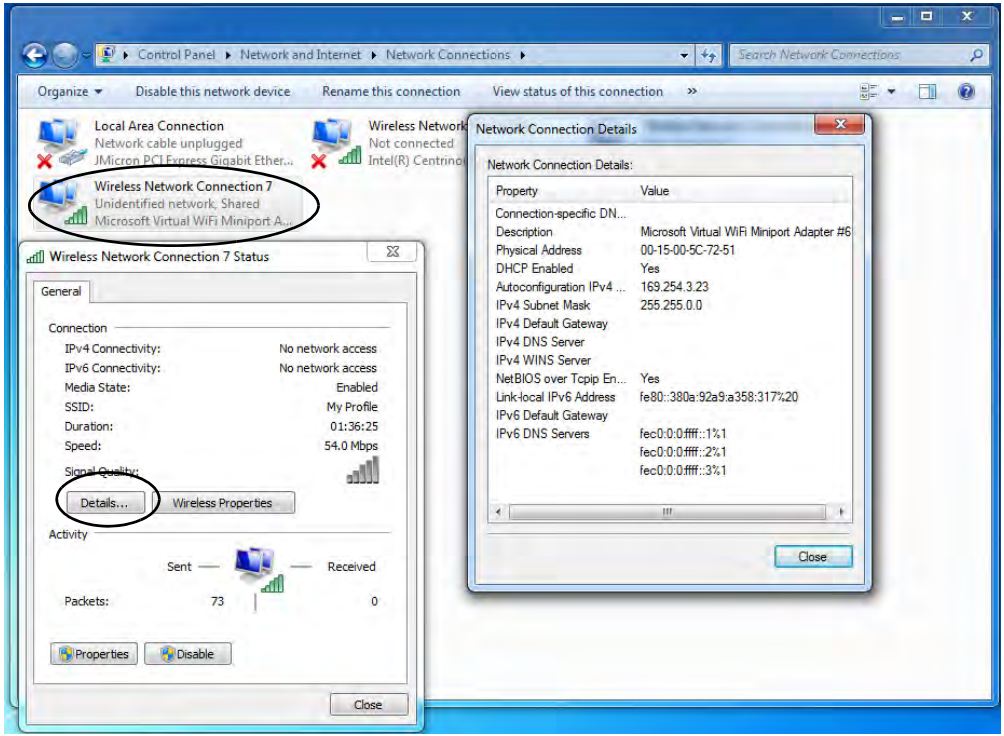

Downloaded from Elcodis.com electronic components

24. Access the **Intel® My WiFi Utility** from the **Start** menu (**Start** > **Programs/All Programs** > **Intel PROSet Wireless > Intel My WiFi Technology**), or by clicking the taskbar icon .
25. To add a new device follow the instructions in the devices' user guide for connecting to a WiFi network.
26. Click **Add New Device** in **Intel® My WiFi Utility** to confirm the security settings detail.

Intel® My WiFi Utility
Intel® My WiFi Technology
intel
Enabled
Compatible WiFi devices can now connect to your computer via In
devices as well as a list of devices that previously connected to th
Profile: My Profile
Network Nam
Add New Device
Block Device
Delete Devi
Connected Devices (0)
No devices are
To connect a new device to t
Previously Connected Devices (1)
Unnamed Device
00:22:43:92:FD:95
Add New Device
Manually configure a device
To add a new device, follow the instructions in the device's user guide for connecting to a WiFi network using the following security settings:
Network Name(SSID): My Notebook2
Security Type: WPA2-Personal
Encryption Type: AES
Security Passphrase: 12345678
OK

Figure 7 - 21
Intel® My WiFi Utility (Add New Device)

Downloaded from LpManual.com Manuals

Windows Mobility Center

The **Windows Mobility Center** control panel provides an easy point of access for information on battery status, power plans used and wireless device status etc.

To access the Windows Mobility Center:

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Double-click **Windows Mobility Center** (**Mobile PC**).
3. Click the button to **Turn wireless off/on**, or click the icon to access the network menu.

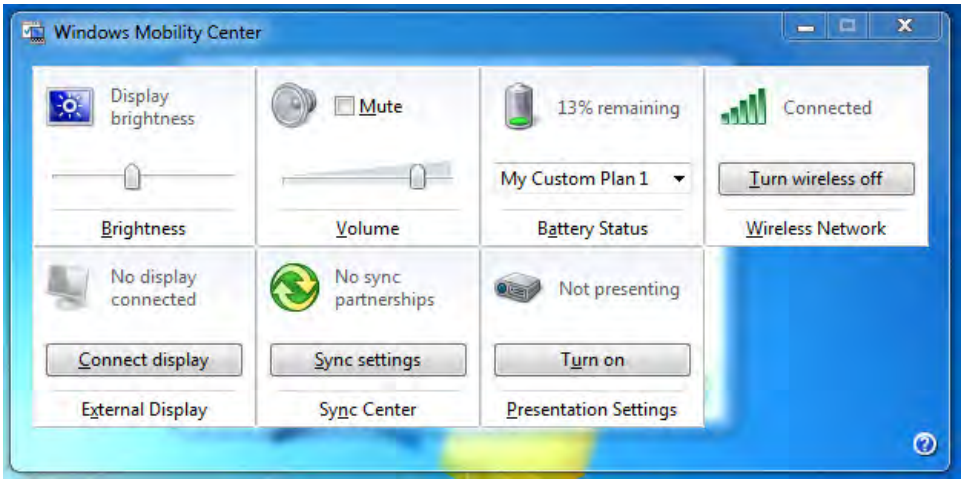

Figure 7 - 22
Windows Mobility Center

Downloaded from Elcodis.com electronic components

PC Camera Module

Before installing the driver, make sure the PC Camera is on. **Use the Fn + F10 key combination** or **Touch Sensor Instant Key** to toggle power to the to the PC Camera module. When the PC Camera module is powered on, the touch sensor LED will be highlighted and the indicator will briefly be displayed. Make sure you install the drivers in the order indicated in *Table 4 - 1, on page 4 - 3*.

There are a number of different camera modules available with this computer model series. You will have the appropriate application installed for your camera (note that some versions of the camera application do not support the zoom function). **Make sure you access the application via the desktop shortcut**.

PC Camera Application and Power-Saving States

If the computer enters **Sleep** or **Hibernate** mode while running the camera application, the program will stop running, and will need to be restarted when the system resumes from the power-saving state.

Latest PC Camera Driver Information

Check the ***Device Drivers & Utilities + User's Manual disc*** and any accompanying insert pages, for the latest updated information on the PC Camera driver, which may override the information provided here.

PC Camera Display

The PC Camera application software needs to be run while the ***default notebook LCD*** is the selected display device.

After a camera picture is obtained on the default notebook LCD, you may then use the **Fn + F7** to toggle through the display modes (give the screen time to refresh).

Downloaded from LpManual.com Manuals

PC Camera Driver Installation

1. Insert the ***Device Drivers & Utilities + User's Manual*** disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **2.Install WebCam Driver > Yes**.
4. Choose the language you prefer and click **Next > Next > Finish**.
5. Run the camera application program from the desktop shortcut (if the hardware is turned off use the **Fn + F10** key combination to turn it on again).

Downloaded from Laptopmanuals.com

PC Camera Audio Setup

If you wish to capture video & **audio** with your camera, it is necessary to setup the audio recording options in ***Windows***.

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Click **Sound** (**Hardware and Sound**).
3. Click **Recording** (tab).
4. Right-click **Microphone** (Realtek High Definition Audio) and make sure the item is not disabled.
5. Double-click **Microphone** (or select **Properties** from the right-click menu).
6. Click **Levels** (tab), and adjust the **Microphone** and **Microphone Boost** sliders to the level required.
7. Click **OK** and close the control panels.
8. Run the camera application program from the desktop shortcut.
9. Go to the **Devices** menu heading and select **Microphone** (**Realtek....**) (it should have a tick alongside it).
10. Go to the **Capture** menu heading and select **Capture Audio** (it should have a tick alongside it).

Downloaded from LpManual.com Manuals

Figure 7 - 23
Audio Setup for PC Camera

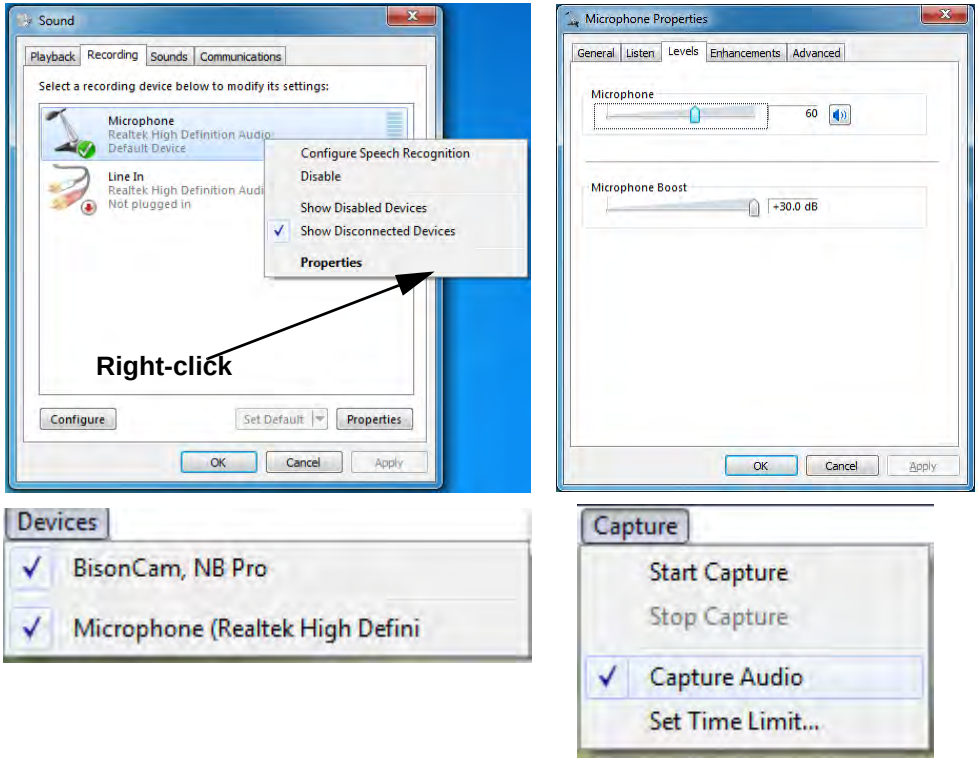

Download from Laptop-Manuals.com

Camera Application

The camera application is a video viewer for general purpose video viewing and testing, and for capturing video files to .avi format.

1. Run the camera application from the desktop shortcut (it is recommended that you **set the capture file** before the capture process - **see below**).
2. Go to the **Capture** menu heading (if you wish to capture audio check ***"PC Camera Audio Setup" on page 7 - 35***) and select **Start Capture**.
3. Click **OK/Yes** (the file location will be displayed in the pop-up box) to start capturing the video, and press **Esc** to stop the capture (you can view the file using the **Windows Media Player**).

Set Capture File

Prior to capturing video files you may select the **Set Capture File...** option in the **File** menu, and set the file name and location before capture (this will help avoid accidentally overwriting files). Set the name and location then click **Open**, then set the **"Capture file size:"** and click **OK**. You can then start the capture process as on the previous page.

Note the important information in *"Reducing Video File Size" on page 7 - 38* in order to save file space, and help prevent system problems.

Pre-Allocating File Size/Space

You may pre-allocate the file size (**File > Allocate File Size/Space**) for the capture file in the camera program (you may need to set a folder location first).

Pre-allocating space on the hard disk can improve the capture quality (particularly of large capture files), by reducing the amount of work the hard disk has to do in finding space for the video data as it is being captured.

See also ***"Reducing Video File Size" on page 7 - 38***.

Downloaded from LpManual.com Manuals

Reducing Video File Size

Note that capturing high resolution video files requires a substantial amount of disk space for each file. After recording video, check the video file size (right-click the file and select **Properties**) and the remaining free space on your hard disk (go to **My Computer**, right-click the hard disk, and select **Properties**). If necessary you can remove the recorded video file to a removable medium e.g. CD, DVD or USB Flash drive.

Note that the ***Windows*** system requires a minimum of **15GB** of free space on the **C: drive** system partition. In order to prevent system problems it is recommended that you save the captured video file to a location other than the **C: drive** (see ***"Set Capture File" on page 7 - 37***), limit the file size of the captured video (see ***"Pre-Allocating File Size/Space" on page 7 - 37***) or reduce video resolution (see below).

To Reduce Video Resolution Output Size:

1. Run the camera application program from the desktop shortcut.
2. Go to **Options** and scroll down to select **Video Capture Pin...**.
3. Click the **Output Size** drop box and select a lower resolution size in order to reduce the captured file size.
4. Click **OK**.

Downloaded from Laptopmanuals.com

Eliminating Screen Flicker

If you find that the video screen in the camera program is flickering, you can try to adjust the setting in the **Video Capture Filter** options.

1. Run the camera application from the desktop shortcut.
2. Go to **Options** and scroll down to select **Video Capture Filter...**.
3. Click either **50Hz** or **60Hz** under **Frequency (Anti Flicker)**.

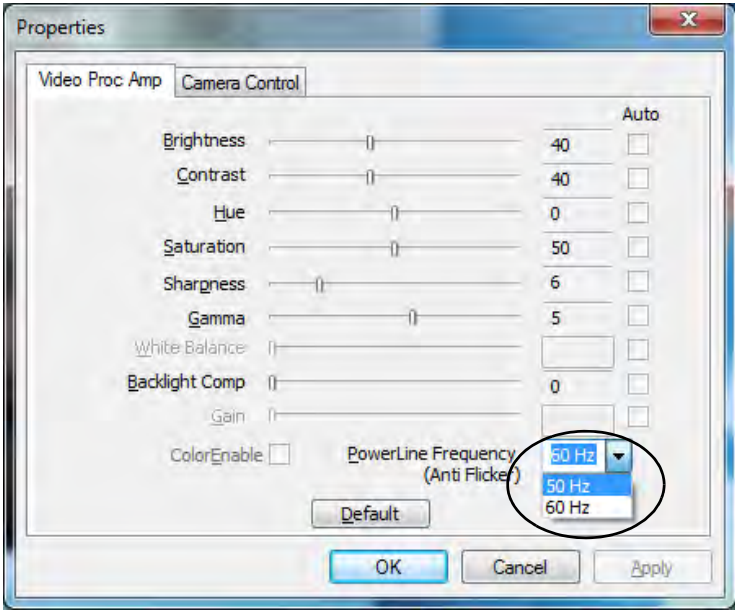

Latest PC Camera Driver Information

Check the ***Device Drivers & Utilities + User's Manual disc***, and any accompanying insert pages, for the latest updated information on the PC Camera driver, which may override the information provided here, including the figures pictured here.

Figure 7 - 24
Video Capture Filter

Downloaded from LpManual.com Manuals

Snapshot Folder

The Snapshot folder's default location is on the desktop. Do not move this folder or an error may appear when you try to take a still picture.

If you accidentally delete or move the folder, you can create a new Snapshot folder on the desktop in order to capture the files.

Taking Still Pictures

The camera application allows you to take still pictures.

1. Run the camera application from the desktop shortcut.
2. Go to **Options** and select **Take Picture**.
3. The picture (in JPEG format) will be placed in the **Snapshot** folder

on the desktop.

Downloaded from Laptopmanuals.com

TV Tuner Module

If your purchase configuration includes the **optional Hybrid** (Analog & Digital) USB Mini-Card TV Tuner module, you will be supplied with a remote control unit and appropriate antenna and fittings for the module. Software support for the TV Tuner module is provided by ***Windows Media Center*** in ***Windows 7 (not included in Starter or Home Basic versions)***. A driver is provided on the ***Device Drivers & Utilities + User's Manual*** disc for the remote control supplied with the TV Tuner.

The optional TV Tuner allows you to watch TV, play music CDs, video conference and capture still images and video on your PC.

The Cable (CATV) antenna will only be enabled when a TV Tuner module is installed. Make sure you connect the TV antenna.

TV Antenna

The TV antenna supplied with any TV Tuner module is intended for indoor use only. Please do not use your TV Tuner module outdoors.

TV Tuner Remote

Point the remote at the consumer **IR transceiver** to change channels etc.

Figure 7 - 25
TV Tuner Ports/ Jacks

1. Consumer Infrared Transceiver
2. CATV Antenna Jack

Downloaded from LpManual.com Manuals

TV Tuner Module Support

Note that the TV Tuner module options in ***Windows 7*** is supported by the **Windows Media Center** software which comes built-in to all the ***Windows 7 versions except Starter and Home Basic***.

If your purchase includes a TV Tuner option, and you are reconfiguring your system for a different system, you should install any ***Windows 7*** version except ***Starter*** and ***Home Basic***.

Consumer Infrared Driver

1. Insert the ***Device Drivers & Utilities + User's Manual*** disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **3.Install CIR Driver > Yes**.
4. Choose the language you prefer and click **Next > Next**.
5. Click **Finish** to restart the computer.

Windows Media Center

1. This TV Tuner module is fully supported by ***Windows Media Center*** in ***Windows 7 (not included in Starter or Home Basic versions)***.
2. Run ***Windows Media Center*** directly from the **Start** menu (**Start > Programs > Windows Media Center**).
3. ***Windows Help and Support*** provides information on the **Windows Media Center** functions. Click **Start** and select **Help and Support**, and then type "***Media Center***" in the **Search Help** box and click the magnifying glass icon to bring up the results.

Downloaded from Laptopmanuals.com Manuals

Digital TV Broadcast Signal

The antenna is the most crucial factor in receiving a clear digital terrestrial TV broadcast signal. The **passive** antenna provided should provide a clear signal when placed beside a window. If the signal is not clear then you can purchase an **active** antenna (it should also be placed beside a window) to improve the signal. You should also check with any related government website which provides information on digital terrestrial TV coverage for your area. Note that (unlike standard analog TV) if the digital signal is weak then no picture will appear on the TV at all.

TV Recording and Power Plans

If you intend to use the **optional** TV Tuner to record live TV, then go to the **Power Options** control panel and create a power plan (see ***"Power Plans" on page 3 - 4***) to prevent the power saving options from adjusting the computer's performance level.

Remote Control Unit

The remote control unit allows you to remotely start and send the system into a power saving state, to run ***Windows Media Center*** and to navigate the ***Media Center*** menus etc. The remote control unit also gives full control over all TV and video functions.

CATV Cable Safety

Make sure that your CATV system installer has connected the Coaxial cable shield to the grounding system of the building, as close to the point of cable entry as practical.

This reminder is provided to call the CATV system installer's attention to Article 820-93 of the NEC (Section 54, Part I of the Canadian Electrical Code).

Downloaded from LpManual.com Manuals

Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices aboard aircraft is usually prohibited. Make sure the module(s) are OFF if you are using the computer aboard aircraft.

Use the **Fn + F12** key combination to toggle power to the Bluetooth module, and check the LED to see if the module is powered on or not (see ***Table 1 - 4, on page 1 - 10*** / ***Table 1 - 3, on page 1 - 8***).

Note that you need to install both the WLAN & Bluetooth drivers for the WLAN & Bluetooth Combo module.

Bluetooth Module

The **optional** Bluetooth module allows you to connect your computer to Bluetooth enabled devices such as other computers, desktop computers, mobile phones, printers, digital cameras, PDAs, headsets etc. using a short-range radio frequency.

If your purchase option includes the **Combination Wireless LAN & V3.0 Bluetooth module (either Intel® Centrino Advanced-N 6230** or **3rd Party)** then install the driver as instructed below:

- For **3rd party Bluetooth modules** see the installation procedure see ***"3rd Party Bluetooth Combo Driver Installation" on page 7 - 46*** and ***"3rd Party Bluetooth & WLAN Combo Settings" on page 7 - 47***.
- For **Intel Bluetooth modules** see the installation procedure see ***"Intel Bluetooth Combo Driver Installation" on page 7 - 54*** and ***"Bluetooth Configuration in Windows 7" on page 7 - 55***.

If your purchase option includes the standalone **V2.1 Bluetooth module** then no driver is required and you can configure the settings as per the instructions in ***"Bluetooth Configuration in Windows 7" on page 7 - 55***.

Use the Fn + F12 key combination or **Touch Sensor Instant Key** to toggle power to the Bluetooth module**.** When the Bluetooth module is powered on, the touch sensor LED will be highlighted and the indicator will briefly be displayed.

Downloaded from Exportmanuals.com manuals

Bluetooth Data Transfer

Note that the transfer of data between the computer and a Bluetooth enabled device is supported **in one direction only (simultaneous data transfer is not supported)**. Therefore if you are copying a file from your computer to a Bluetooth enabled device, you will not be able to copy a file from the Bluetooth enabled device to your computer until the file transfer process from the computer has been completed.

Bluetooth Module & Resuming From Sleep Mode

The Bluetooth module's default state will be off after resuming from the **Sleep** power-saving state. Use the key combination (**Fn + F12**) to power on the Bluetooth module after the computer resumes from Sleep.

Downloaded from LpManual.com Manuals

High Speed Bluetooth Data Transfer

The **Combination Wireless LAN & V3.0 Bluetooth module** supports high speed (V3.0) data transfer. However to achieve such transfer speeds, **both devices must support high speed data transfer**.

To obtain high speed (V3.0) data transfer make sure that both the WLAN and Bluetooth modules are powered on.

Check your Bluetooth compatible device's documentation to confirm it supports high speed data transfer.

3rd Party Bluetooth Combo Driver Installation

Note this driver is required only for the combo Bluetooth and WLAN module only.

1. **Before installing the driver make sure the Bluetooth module is powered on** (use **Fn + F12** key combination), then insert the ***Device Drivers & Utilities + User's Manual*** disc into the CD/DVD drive. If a ***Found New Hardware*** window appears, click **Cancel** in all windows that appear, and then proceed to install the driver as below.
2. Click **Option Drivers** (button).
3. Click **6.Install Combo BT Driver > Yes**.
4. Choose the language you prefer and click **OK**.
5. Click **Next**.
6. Click the button to accept the license and click **Next**.
7. Click **Next** > *(select if you want to create an icon to appear on the desktop)* **Next > Install**.
8. Click **Finish**.
9. The **My Bluetooth** icon will appear on the desktop and the **Bluetooth** item will be installed in the **Programs/All Programs** menu.
10. See overleaf for information on Bluetooth networking.

Download from Service Repair Manuals

3rd Party Bluetooth & WLAN Combo Settings

This information applies to the combo Bluetooth and WLAN module only.

1. Make sure the Bluetooth module is powered on.
2. Double-click the **My Bluetooth** application on the desktop (or access **Bluetooth** from the **Programs/All Programs** menu).
3. Click **My Bluetooth Settings** (menu heading).

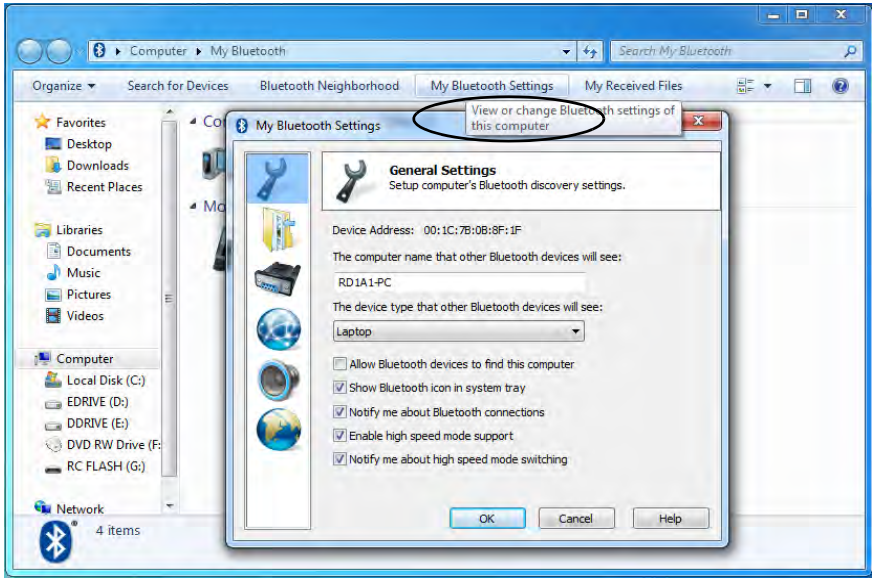

Bluetooth Module & Resuming From Sleep Mode

The Bluetooth module's default state will be off after resuming from the **Sleep** power-saving state. Use the key combination (**Fn + F12**) to power on the Bluetooth module after the computer resumes from Sleep.

Figure 7 - 26
My Bluetooth Settings

Downloaded from LpManual.com Manuals

4. Click **General Settings** to change the computer ***name that other Bluetooth devices will see***, and click the tickbox to ***Allow Bluetooth devices to find this computer***
5. Click **OK** to confirm the settings.

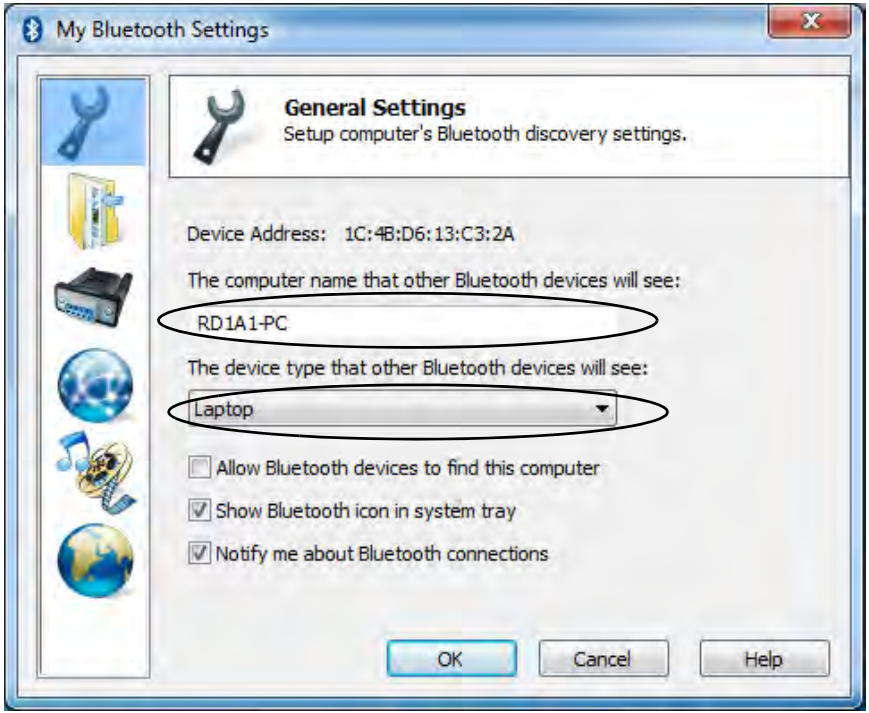

Figure 7 - 27
General Settings

Downloaded from eXpotential Manuals

6. Click **File Transfer Settings** to ***Enable sharing of my files with other Bluetooth devices***.
7. Click **OK** to confirm the settings.

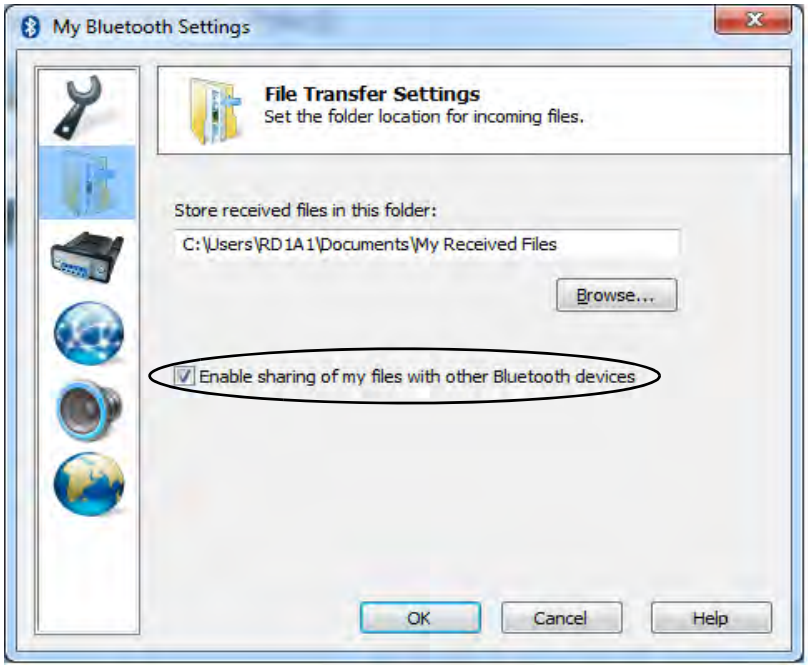

Figure 7 - 28
File Transfer Settings

Downloaded from LpManual.com Manuals

Bluetooth Networking Setup

This information applies to the combo Bluetooth and WLAN module only.

1. Make sure the Bluetooth module is powered on.
2. Double-click the **My Bluetooth** application on the desktop (or access it from the **Programs/All Programs** menu).
3. Click **My Bluetooth Settings** (see *Figure 7 - 26 on page 7 - 47*).

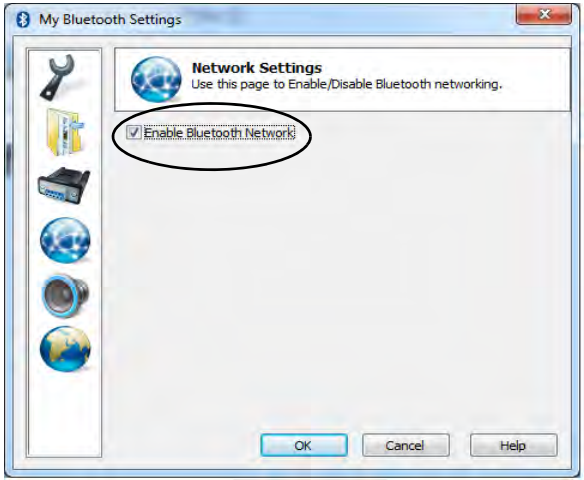

Figure 7 - 29
Network Settings

4. Click **Network Settings** (make sure the Bluetooth module is powered on.
5. Click **Enable Bluetooth Network** and click **OK**.
6. A message will appear in the notification area to confirm that the network driver has been installed.

Downloaded from Epcatalog.com Manuals

Bluetooth & WLAN Combo Module Configuration

Setup your Bluetooth Device so the Computer Can Find it

1. Turn your Bluetooth device (e.g. PDA, mobile phone etc.) on.
2. Make the device discoverable (to do this check your device documentation).

To Turn the Bluetooth Module On

1. Press the **Fn + F12** key combination to power on the Bluetooth module.

To Add a Bluetooth Device

1. Double-click the **My Bluetooth** application on the desktop (or access it from the **Programs/All Programs** menu).
2. Double-click the device you want to pair with the computer (if no devices appear press **F5** or click the **Refresh** button to search for devices).

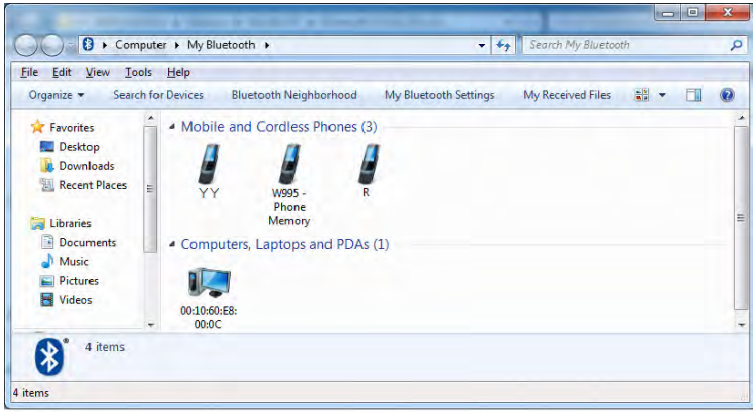

Bluetooth Module & Resuming From Sleep Mode

The Bluetooth module's default state will be off after resuming from the **Sleep** power-saving state. Use the key combination (**Fn + F12**) to power on the Bluetooth module after the computer resumes from Sleep.

Figure 7 - 30
My Bluetooth Devices

Downloaded from LpManual.com Manuals

3. You will then be presented with a menu of options to select from.

Computer ▸ My Bluetooth ▸ W995 - Phone Memory
Search My Bluetooth
Organize
Favorites
Desktop
Downloads
Recent Places
Libraries
Documents
Music
Pictures
Videos
Computer
Local Disk (C:)
DDRIVE (D:)
DVD RW Drive (E:) E
RC FLASH (F:)
Network
W995 - Phone Memory
Address: 00:25:E7:0E:D3:FE
Type: Mobile and Cordless Phones
Status: Discovered
Refresh
Files Exchange
Send File
With this service you can send a file to your device with just a few simple steps. Please press the Send button to start.
Send...
Browse Remote Folder
With this service you can browse a folder on your device and perform all typical file operations such us copy/paste with an explorer-like interface. Please press the Browse button to start.
Browse...
Audio & Video
Play Music
You can play music from this device using your computer's audio playback devices. Please consult your device user's manual for how to initiate audio playback.
Connect
Networking
Access the Internet via a Dial-Up Connection
With this service you can connect to the Internet using your mobile phone. Please press the Install button to start.
Install
Access an External Network via a Bluetooth Gateway
With this service you can connect an external network using your device. Please press the Connect button to start.
Connect
Make a Peer-to-Peer Network Connection
With this service you can make a network connection between
Connect
No preview available.
W995 - Phone Memory

4. Click the appropriate button to connect to the device.

Figure 7 - 31
Bluetooth Device Options

Downloaded from Laptop Manuals - Free Manuals

5. You may need to allow the connection from your device, and you will then need to provide a passcode from the device.
6. You can then enter the passcode on the computer and click **OK** to establish the connection.

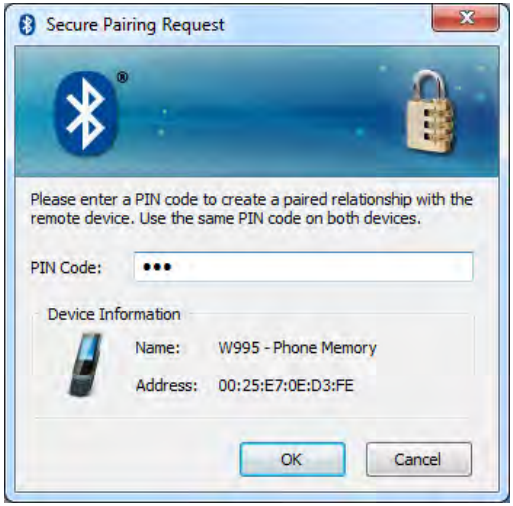
Secure Pairing Request
Please enter a PIN code to create a paired relationship with the remote device. Use the same PIN code on both devices.
PIN Code:
Device Information
Name: W995 - Phone Memory
Address: 00:25:E7:0E:D3:FE
OK
Cancel
Connection established
Connected to "OBEX File Transfer Client" service of "W995 - Phone Memory" device.

Figure 7 - 32
Bluetooth Pairing Code & Connection Established

Downloaded from LpManual.com Manuals

High Speed Bluetooth Data Transfer

The **Combination Wireless LAN & V3.0 Bluetooth module** supports high speed (V3.0) data transfer. However to achieve such transfer speeds, **both devices must support high speed data transfer**.

To obtain high speed (V3.0) data transfer make sure that both the WLAN and Bluetooth modules are powered on.

Check your Bluetooth compatible device's documentation to confirm it supports high speed data transfer.

Intel Bluetooth Combo Driver Installation

Note this driver is required only for the Intel combo Bluetooth and WLAN module only.

1. **Before installing the driver make sure the Bluetooth module is powered on** (use **Fn + F12** key combination), then insert the ***Device Drivers & Utilities + User's Manual*** disc into the CD/DVD drive. If a ***Found New Hardware*** window appears, click **Cancel** in all windows that appear, and then proceed to install the driver as below.
2. Click **Option Drivers** (button).
3. Click **4.Install Combo BT Driver > Yes**.
4. Click **Next > Next**.
5. Click the button to accept the license and click **Next**.
6. Click **Next > Finish**.
7. See over for configuration instructions.

Note that, at the time of going to press, **Intel® Centrino Advanced 6230** WLAN & Bluetooth V3.0+HS combo modules use the standard Bluetooth configuration in ***Windows 7*** (see ***"Bluetooth Configuration in Windows 7" on page 7 - 55***). **Do not use** the Bluetooth & WLAN Combo settings information outlined from page ***7 - 47*** to page ***7 - 53***. See also ***"Intel® WLAN & Bluetooth V3.0+HS Combo Modules" on page 8 - 19***.

Downloaded from eXpotential.com Manuals

Bluetooth Configuration in Windows 7

Setup your Bluetooth Device so the Computer Can Find it

1. Turn your Bluetooth device (e.g. PDA, mobile phone etc.) on.
2. Make the device discoverable (to do this check your device documentation).

To Turn the Bluetooth Module On

1. Press the **Fn + F12** key combination to power on the Bluetooth module.
2. A Bluetooth icon will appear in the taskbar.
3. You can then do any of the following to access the **Bluetooth Devices** control panel.

- **Double-click** the taskbar icon to access the **Bluetooth Devices** control panel.
- **Click/Right-click** the taskbar icon and choose an option from the menu.

Add a device

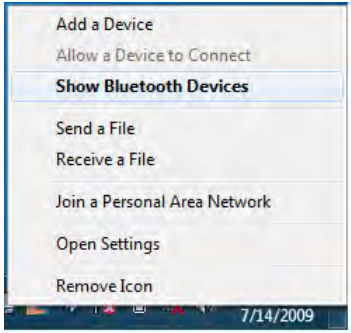

Right-Click Taskbar Icon

Add a Device

Click **Start**, and click **Control Panel** and then click **Devices and Printers (Hardware and Sound)**. Click **Add a device** to search for any available Bluetooth devices.

If you are experiencing problems connecting to some Bluetooth devices see ***"" on page 8 - 14***.

Figure 7 - 33
Bluetooth Devices & Click Icon Menu

Downloaded from LpManual.com Manuals

Pairing Options

If a device has been previously connected then the pairing option menu will appear when you attempt subsequent connections. You can choose to have the computer create a pairing code for you, use the device's existing pairing code or you can pair certain devices without using a code.

To Add a Bluetooth Device

1. Access the **Bluetooth Devices** control panel and click **Add a device**.
2. Double-click the device you want to pair with the computer.

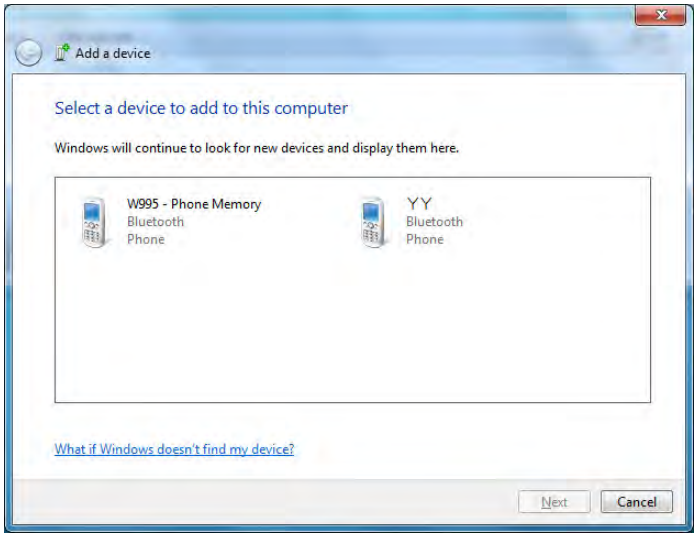

Figure 7 - 34
Add a Device

3. On first connection the computer will provide you with a pairing code to be entered onto the device.

Downloaded from eXpotential Manuals

4. Enter the code into your Bluetooth enabled device and follow any on-screen instructions to complete the pairing.

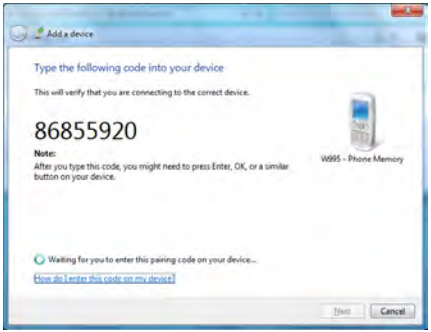
Add a device
Type the following code into your device
This will verify that you are connecting to the correct device.
86855920
Note:
After you type this code, you might need to press Enter, OK, or a similar button on your device.
W995 - Phone Memory
Waiting for you to enter this pairing code on your device...
How do I enter this code on my device?
Next
Cancel

Pairing Codes

The example outlined here shows a connection to a mobile device. Other devices e.g. computers, may have a slightly different connection procedure, and may require you to confirm a pairing code is correct on both devices. Follow the on-screen instructions to complete the pairing.

Figure 7 - 35
Pairing Code Example

5. ***Windows*** will check to see if any drivers are required to complete the pairing.
6. Follow any on-screen instructions on the computer if device drivers are required to be installed.
7. Click **Close**.

Add a device
This device has been successfully added to this computer
Windows is now checking for drivers and will install them if necessary. You may need to wait for this to finish before your device is ready to use.
To verify if this device finished installing properly, look for it in Devices and Printers.
W995 - Phone Memory
Close

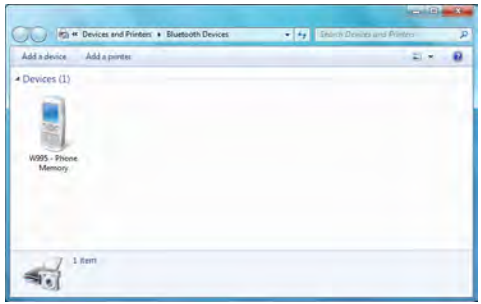

Figure 7 - 36
Pairing Complete & Bluetooth Device Enabled

Downloaded from LpManual.com Manuals

Bluetooth Help

To get help on Bluetooth configuration and settings, select **Help and Support** from the **Start** menu. Type Bluetooth in the **Search Help** box, and select an item from the returned search results to get more information.

To Change Settings for the Bluetooth Device

1. Click the taskbar icon and select **Show Bluetooth Devices**.
2. Right-click on the device you want to change and click **Properties** to:

- Change the **name** of the device (click **Bluetooth**, type a new name and click **OK**).
- Enable/Disable a **service** (click **Services**, clear/tick the check box next to the service and click **OK**).

To Make your Computer Discoverable to Bluetooth Devices

1. Click the taskbar icon and select **Open Settings**.
2. Click **Options**, and make sure that ***Allow Bluetooth devices to find this computer*** check box (**Discovery**) has a tick inside it.
3. Make sure that the ***Alert me when a new Bluetooth device wants to connect*** check box (**Connections**) has a tick inside it, if you want to be notified when a Bluetooth device wants to connect.

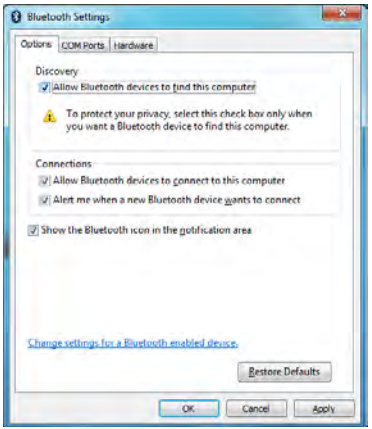
Bluetooth Settings
Options
COM Ports
Hardware
Discovery
Allow Bluetooth devices to find this computer
To protect your privacy, select this check box only when you want a Bluetooth device to find this computer.
Connections
Allow Bluetooth devices to connect to this computer
Alert me when a new Bluetooth device wants to connect
Show the Bluetooth icon in the notification area
Change settings for a Bluetooth enabled device.
Restore Defaults
OK
Cancel
Apply

Figure 7 - 37
Bluetooth Settings - Options

Download from Epo Manuals - Epo Manuals

Security Modules (Fingerprint & TPM)

The encrypted channel between the **Trusted Platform Module security chip** and the **fingerprint reader** with **Protector Suite Software** provides a high level of security for your computer. A further level of security and control is provided in the BIOS (see ***"Security Menu" on page 5 - 13*** and ***"Boot Menu" on page 5 - 15***).

The **fingerprint reader** and **Protector Suite Software** allow you to:

- Access or Lock your computer
- Protect sensitive files
- Display and file your favorite web pages
- Fill in frequently used dialogs
- Run your favorite applications

The **TPM security chip** allows you to create and manage digital certificates for user and platform authentication. This type of security is usually administered within large enterprises and organizations, and therefore requires implementation by a system administrator before users can access security features.

Password Warning

If you set passwords for any of the security modules, **NEVER** forget your password.

The consequences of this could be serious. If you cannot remember your boot password you must contact your vendor and you may lose all of the information on your hard disk.

Downloaded from LpManual.com Manuals

Password Warning

If you set passwords for any of the security modules, **NEVER** forget your password.

The consequences of this could be serious. If you cannot remember your boot password you must contact your vendor and you may lose all of the information on your hard disk.

Fingerprint Reader Module

If you have included the fingerprint reader in your purchase option you will need to install the driver as per the instructions below.

Make sure you have administrator's rights to your computer, and have a ***Windows*** password enabled for full security protection.

Before beginning the enrollment process it is recommended that you go through the fingerprint tutorial (see ***Figure 7 - 38 on page 7 - 61***).

Fingerprint Reader Driver Installation

1. Insert the ***Device Drivers & Utilities + User's Manual*** disc into the CD/DVD drive.
2. Click **Option Drivers**.
3. Click **7.Install FingerPrint Driver > Yes**.
4. Click **Next > Next > Next**.
5. Click **Finish > Yes** to restart the computer.
6. Click the tray icon , scan a finger or click **Start > Programs/All Programs > Protector Suite > Control Center and** then begin the enrollment process (see over).

Downloaded from fingerprint.manualslib.com

User Enrollment

1. Click **Start > Programs/All Programs > Protector Suite > Control Center**, or double click the taskbar icon (click **Initialize**).
2. On the first run of the program you will be asked to click the **Accept** button to accept the license.
3. If you have not set a ***Windows*** password you will be prompted to do so (**note**: If you have not set a password **Protector Suite** cannot secure access to your computer).
4. Click **Submit** when you have entered password.
5. You will then be prompted to enroll your fingerprints (you can click **Tutorial** to get help with fingerprint enrollment at any time).

Fingerprint Enrollment

Note that it is strongly recommended that you **enroll more than one finger in case of injury etc.**

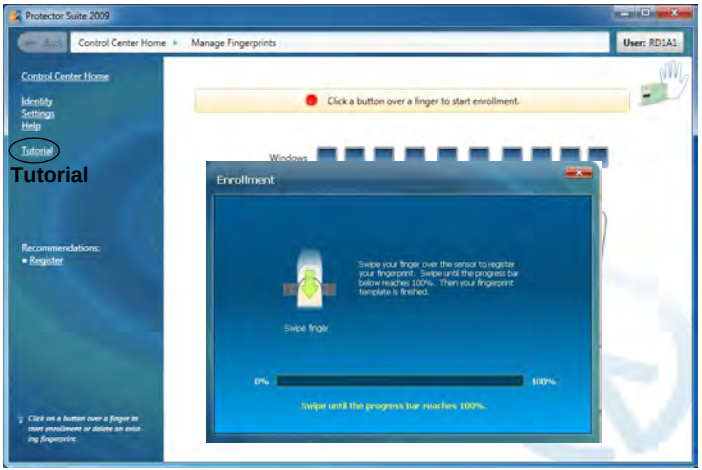

Figure 7 - 38
Fingerprint Enrollment

Downloaded from LpManual.com Manuals

Fingerprint Enrollment

Note that it is strongly recommended that you **enroll more than one finger in case of injury etc.**

6. Click the button above any of the fingers to begin the enrollment process for that finger.
7. Swipe the finger until the progress bar reaches **100%** to enroll that finger.

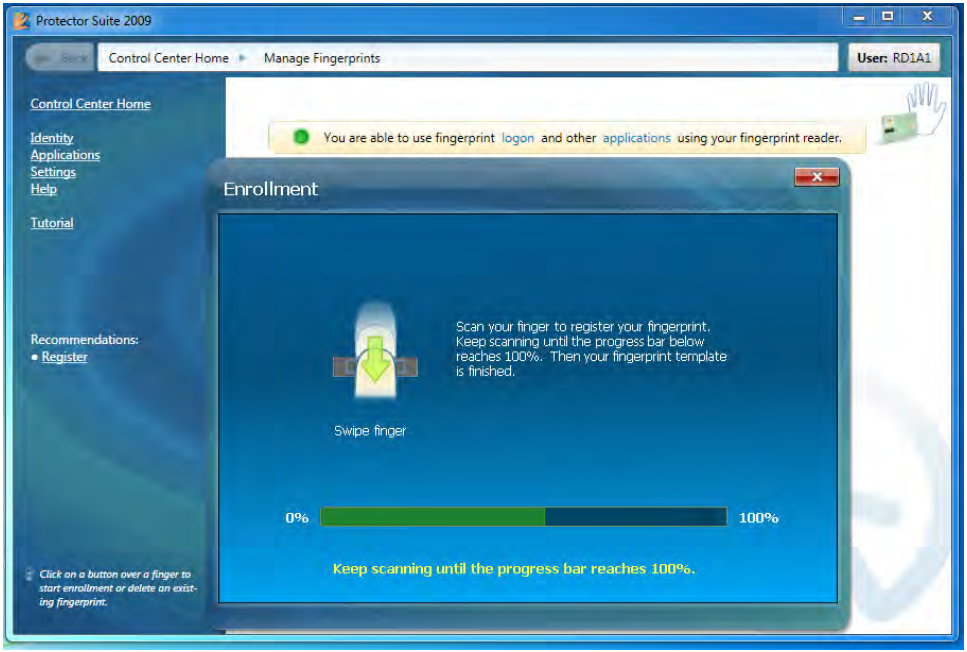
Protector Suite 2009
Control Center Home
Manage Fingerprints
User: RD1A1
Control Center Home
Identity
Applications
Settings
Help
Tutorial
Recommendations:
• Register
You are able to use fingerprint logon and other applications using your fingerprint reader.
Enrollment
Scan your finger to register your fingerprint. Keep scanning until the progress bar below reaches 100%. Then your fingerprint template is finished.
Swipe finger
0%
100%
Keep scanning until the progress bar reaches 100%.
Click on a button over a finger to start enrollment or delete an existing fingerprint.

8. Close the **Protector Suite 2009** window.

Figure 7 - 39
Fingerprint Enrollment Progress

Downloaded from p4print.com/manuals

9. Right-click the taskbar icon and select **Start Control Center** (and then swipe a finger) to allow you to **Edit Fingerprints**, register **Applications**, edit **Settings** and access the **Help** menu etc. You can also run the **Control Center** etc. from the **Protector Suite** item in the **Programs/All Programs** menu
10. Click "**Help**" to get more information on any topic.
11. You can also run the **Tutorial**, or **Product Tour** video to get more information.

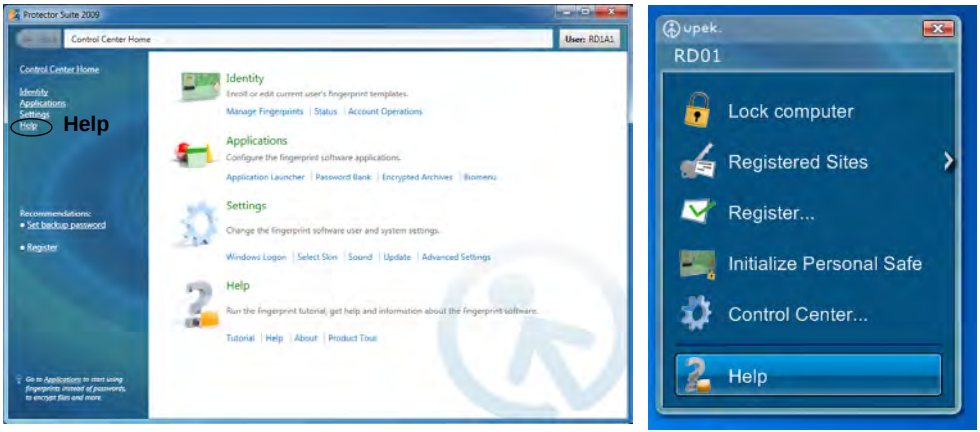

Figure 7 - 40
Control Center & Biomenu

12. If you swipe your finger over the reader at any time you can access the **Biomenu** to **lock the computer**, **register websites**, access the **Personal Safe,** open the **Control Center** and access the **Help** menu.

7

Downloaded from LpManual.com Manuals

Help

For more information on these and other features simply access "**Help**" in the **Fingerprint Control Center** and select the item from the menu on the left.

Fingerprint Control Center Features

Application Launcher

The **Application Launcher** allows you to register applications to be launched when assigned to a particular finger. Simply copy the application icon on to one of the registered fingers and ten click OK to close the application window. Once registered the application will launch when you swipe the appropriate finger across the sensor.

Password Bank

The **Password Bank** stores registrations of user names, passwords and other settings for web sites etc.

Personal Safe

The **Personal Safe** is an encrypted area assigned on your hard drive that allows you to store files and folders to be protected by fingerprint protection.

Downloaded from fingerprint-reader.com

Trusted Platform Module

Before setting up the TPM functions you must initialize the security platform.

Enabling & Activating TPM

1. Restart the computer.
2. Enter the **PhoenixBIOS Setup Utility by** pressing **F2** during the **POST**.
3. Use the arrow keys to select the **TPM State** menu.
4. Select **Change TPM State**, and set the item to ***Enable & Activate***.

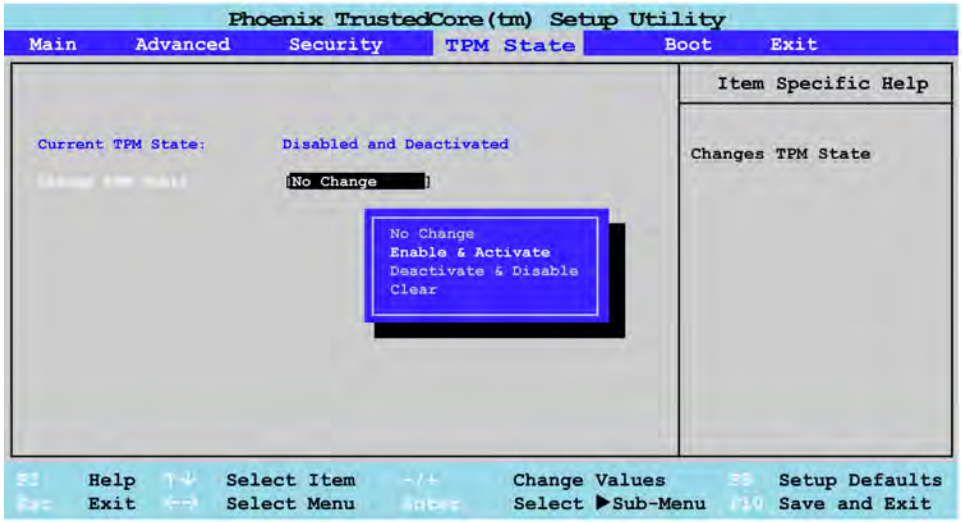

Figure 7 - 41
TPM State
(Enable & Activate)

Downloaded from LpManual.com Manuals

5. Press **F10** to save the changed BIOS information, exit the BIOS and restart the computer.
6. If you make any changes to the TPM State you will be asked to **Execute/Reject** the change after restart.

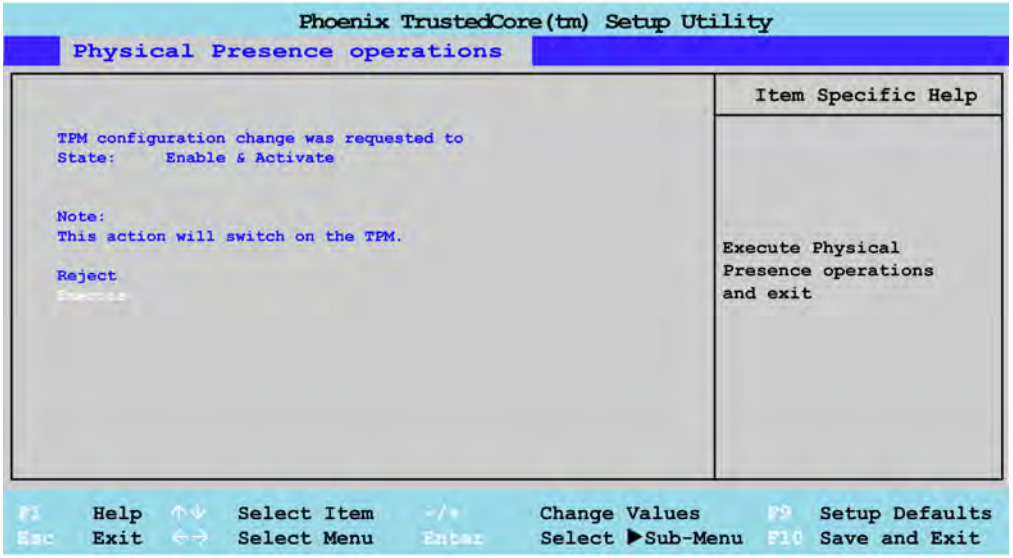
Phoenix TrustedCore(tm) Setup Utility
Physical Presence operations
Item Specific Help
TPM configuration change was requested to
State: Enable & Activate
Note:
This action will switch on the TPM.
Reject
Execute Physical Presence operations and exit
F1 Help ↑↓ Select Item -/+ Change Values F9 Setup Defaults
Esc Exit ←→ Select Menu Enter Select ▶Sub-Menu F10 Save and Exit

Figure 7 - 42
Physical Presence Operations

7. You can now **install the TPM driver** (see ***"Trusted Platform Module (TPM) Driver Installation" on page 7 - 67***) and then initialize the TPM.

Download from Service Manuals

Trusted Platform Module (TPM) Driver Installation

1. Insert the ***Device Drivers & Utilities + User's Manual*** disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **5.Install TPM Driver** > **Yes**.
4. Click **Install** > **Next**.
5. Click the button to accept the license and click **Next**.
6. Click **Next** > **Next** > **Install**.
7. Click **Finish** > **Yes** to restart the computer.

Initializing TPM

1. Run the application from the **Infineon Security Platform Solution > Manage Security Platform** item in the **Start > Programs/All Programs** menu.
2. Click **User Settings** (tab) and click **Yes,** or right-click the icon in the notification area of the taskbar, and select **Security Platform Initialization** (or click the **Security Platform State** taskbar bubble).
3. The **Quick Initialization** method will automatically be selected for you (if you need to use advanced settings provided by your network administrator then select **Advanced Initialization**).
4. You will need to use a removable media (e.g. a USB Flash Drive) to store passwords and data (keep the media in a safe place until required).

Downloaded from LpManual.com Manuals

5. Select the drive you want to use from the drop-down menu and click **Next**.

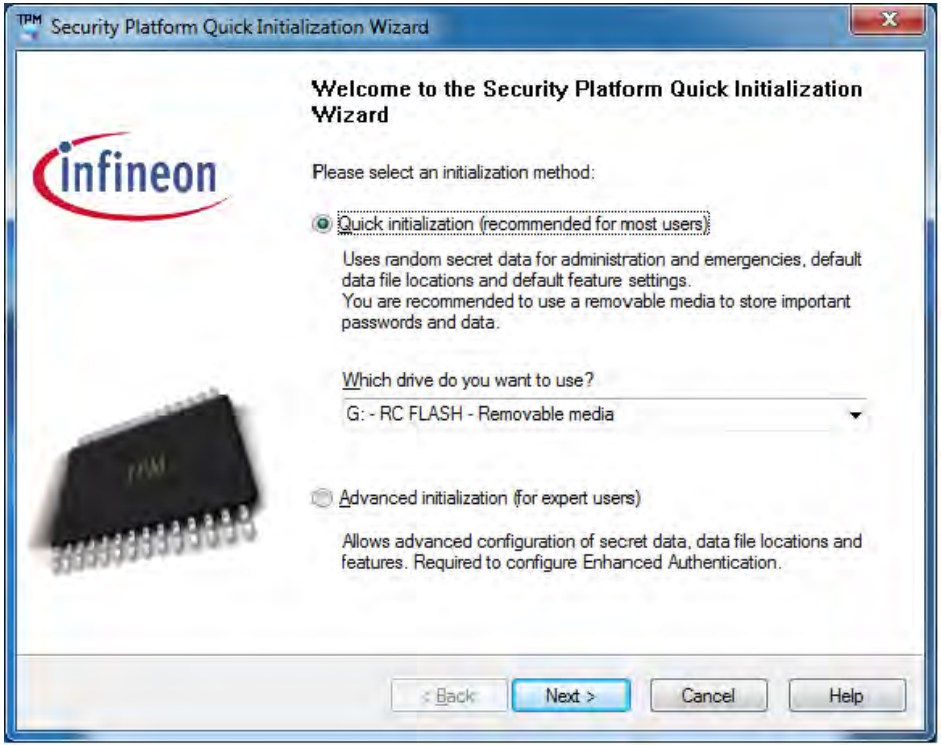
Security Platform Quick Initialization Wizard
Welcome to the Security Platform Quick Initialization Wizard
infineon
Please select an initialization method:
Quick initialization (recommended for most users)
Uses random secret data for administration and emergencies, default data file locations and default feature settings.
You are recommended to use a removable media to store important passwords and data.
Which drive do you want to use?
G: - RC FLASH - Removable media
Advanced initialization (for expert users)
Allows advanced configuration of secret data, data file locations and features. Required to configure Enhanced Authentication.
< Back
Next >
Cancel
Help

Figure 7 - 43
Security Platform Quick Initialization Wizard

Downloaded from Specialized Manuals

6. Choose the **Security Platform Features** you want to use by clicking the appropriate tickbox.
7. Enter a **Basic User Password** (and re-type to confirm it) and click **Next**.

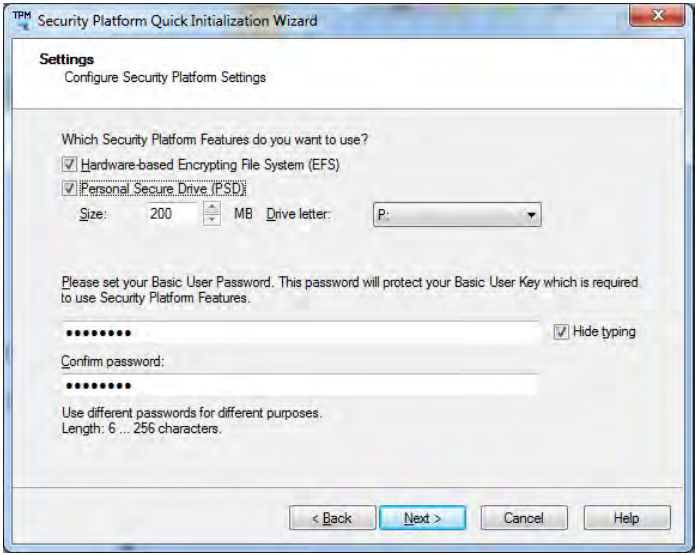
Security Platform Quick Initialization Wizard
Settings
Configure Security Platform Settings
Which Security Platform Features do you want to use?
Hardware-based Encrypting File System (EFS)
Personal Secure Drive (PSD)
Size: 200 MB Drive letter: P:
Please set your Basic User Password. This password will protect your Basic User Key which is required to use Security Platform Features.
Hide typing
Confirm password:
Use different passwords for different purposes.
Length: 6 ... 256 characters.
< Back
Next >
Cancel
Help

8. Click **Next** to confirm the settings.
9. The computer will then initialize the settings.
10. Click **Finish**.
11. Click the tabs and control panels to adjust the settings.
12. Double-click the taskbar icon to access the **Infineon Security Platform Settings Tool**, or right-click the taskbar icon and select a menu item.

Help

Right-click the icon in the notification area of the taskbar to bring up the menu to select ***Help*** or **How to use the Security Platform Features**.

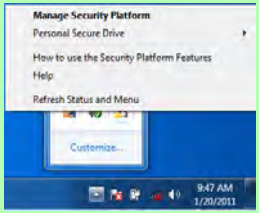

You can also click the **Help** button in any of the Infineon Security Platform Settings Tool tabs to bring up specific help topics on each tab.

Figure 7 - 44
Settings

Downloaded from LpManual.com Manuals

Menus

Note that not all the menus pictured here will be available for access. The menu items that appear will be dependent on your configuration settings etc. (see the **Help** file for full details).

Infineon Security Platform Settings Tool

The Infineon Security Platform Settings Tool allows you to manage and check the TPM state, manage your password information, and to backup and restore the TPM data. As TPM is usually administered within large enterprises and organizations, your system administrator will need to assist you in managing the information here.

Figure 7 - 45
Infineon Security Platform Settings Tool

Downloaded from Specialized Manuals

User Settings

This page allows the settings to be configured for the currently logged in Infineon Security Platform user including the ability to change the password, configure secure e-mail, file and folder encryption and Enhanced Authentication. You can also import or delete certificates protected by the security platform.

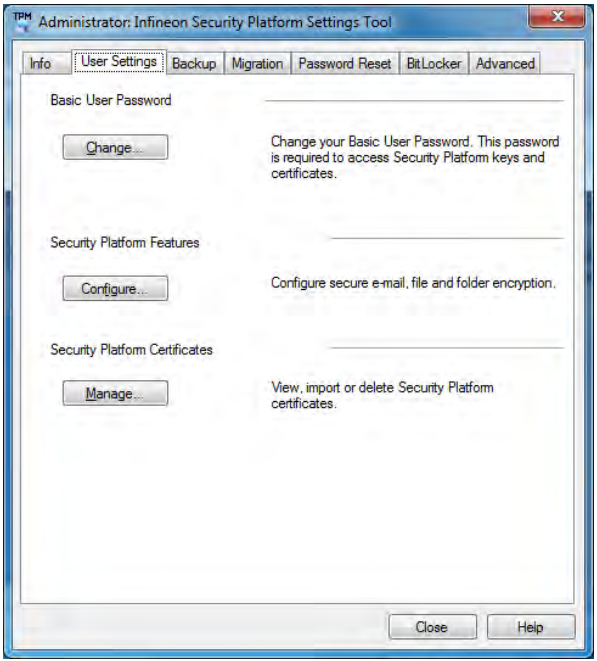

Figure 7 - 46
Infineon Security Platform Settings Tool (User Settings)

Downloaded from LpManual.com Manuals

Backup

Here you can configure backup and restore operations. Backup files contain the computer identification and user identification information which is used to match the machine name and user name with the current machine and user during restoration.

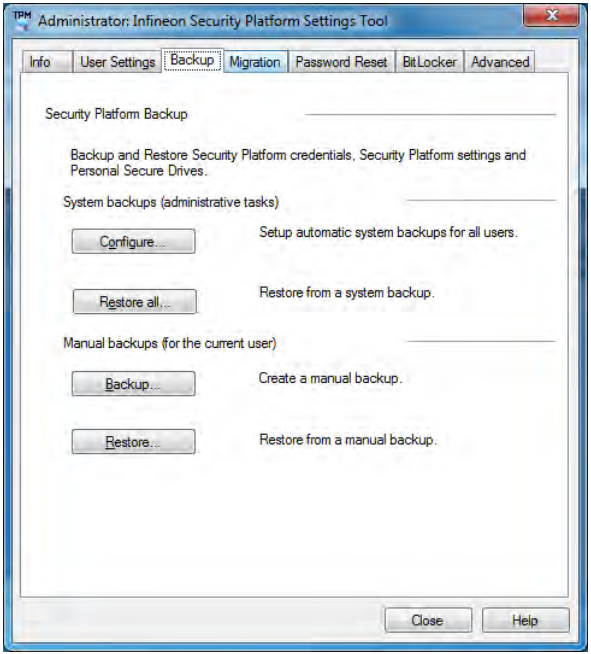

Figure 7 - 47
Infineon Security Platform Settings Tool (Backup)

Download from Service Manuals

Migration

The Migration tab is used to help securely transfer keys and certificates from one platform to another.

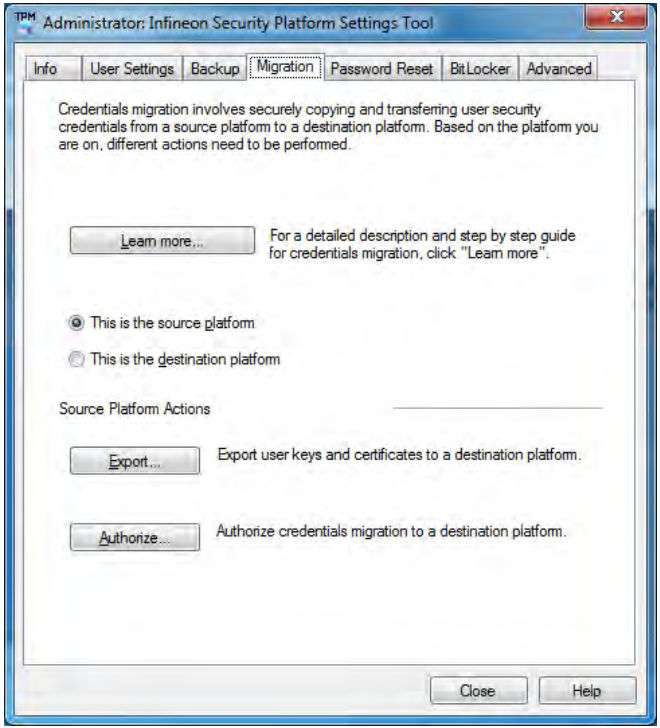
Administrator: Infineon Security Platform Settings Tool
Info
User Settings
Backup
Migration
Password Reset
BitLocker
Advanced
Credentials migration involves securely copying and transferring user security credentials from a source platform to a destination platform. Based on the platform you are on, different actions need to be performed.
Learn more...
For a detailed description and step by step guide for credentials migration, click "Learn more".
This is the source platform
This is the destination platform
Source Platform Actions
Export...
Export user keys and certificates to a destination platform.
Authorize...
Authorize credentials migration to a destination platform.
Close
Help

Figure 7 - 48
Infineon Security Platform Settings Tool (Migration)

Downloaded from LpManual.com Manuals

Password Reset

Use Password Reset to reset basic user passwords when required.

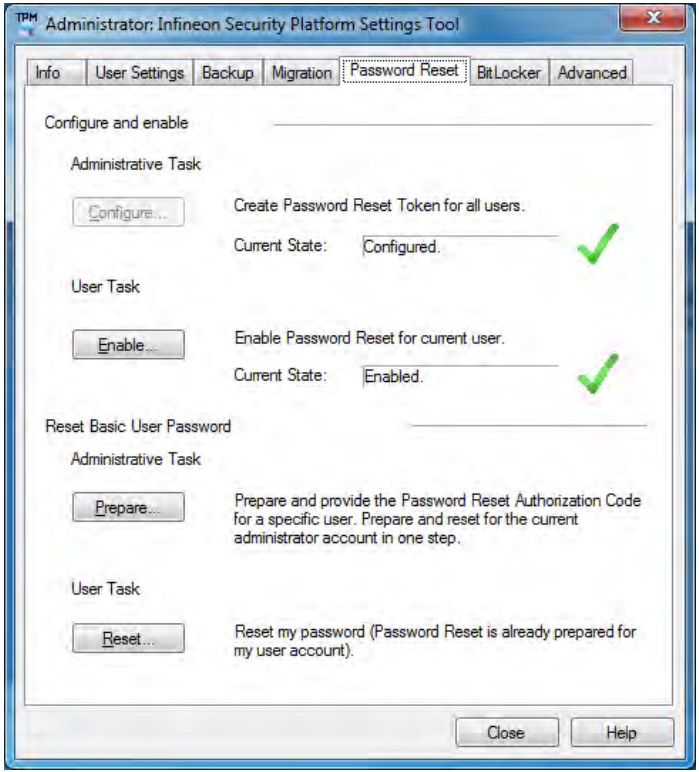

Figure 7 - 49
Infineon Security Platform Settings Tool (Password Reset)

Downloaded from Specialized Manuals

BitLocker

BitLocker Drive Encryption can be used in conjunction with the TPM to encrypt data on the disk and is done via the **Microsoft BitLocker Control Panel Applet**. Click **Configure** and select a drive to be encrypted and then follow the Wizard to begin the encryption process.

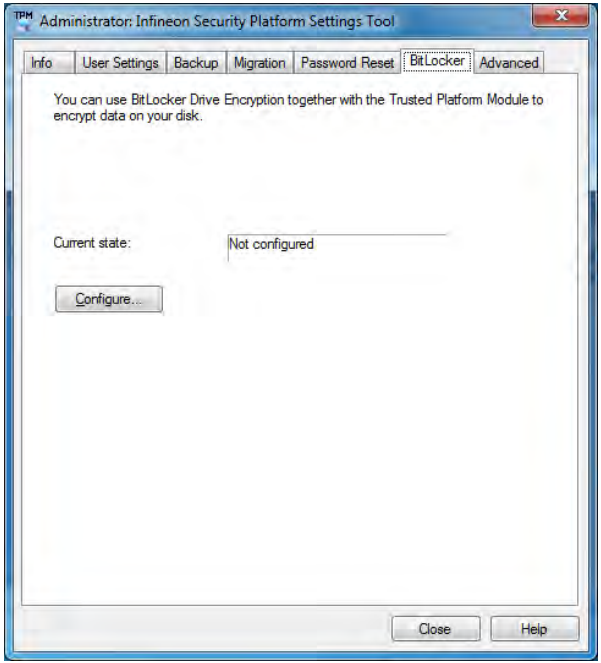

Figure 7 - 50
Infineon Security Platform Settings Tool (BitLocker)

Downloaded from LpManual.com Manuals

Access the Microsoft **BitLocker Drive Encryption** control panel applet from the ***Windows*** control panel (**System and Security**).

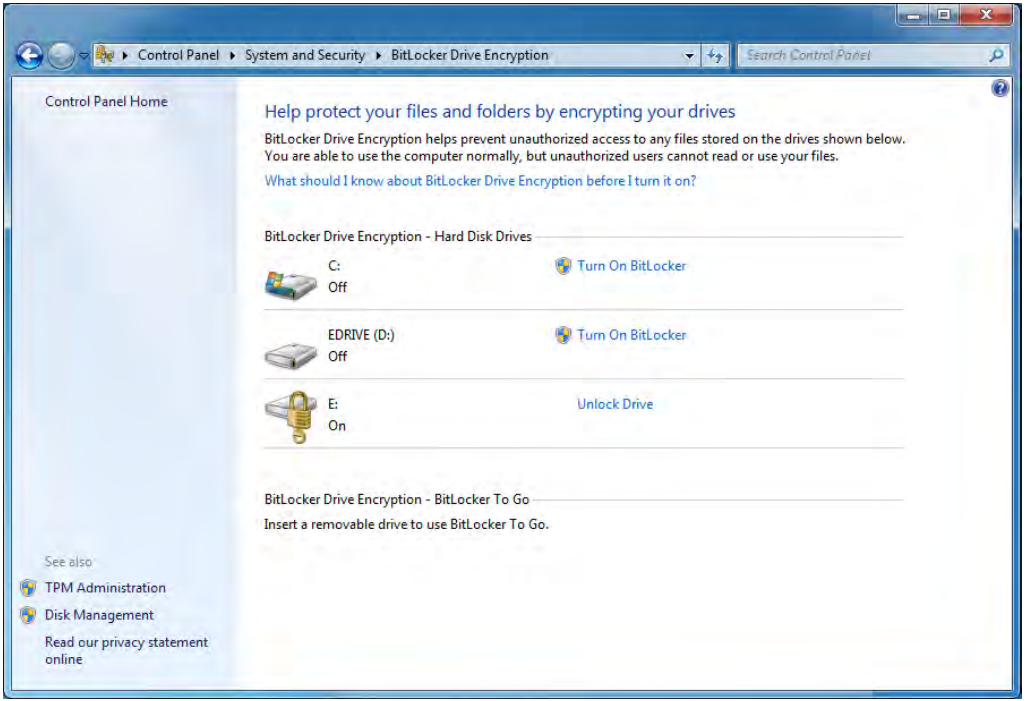
Control Panel ▸ System and Security ▸ BitLocker Drive Encryption
Search Control Panel
Control Panel Home
Help protect your files and folders by encrypting your drives
BitLocker Drive Encryption helps prevent unauthorized access to any files stored on the drives shown below.
You are able to use the computer normally, but unauthorized users cannot read or use your files.
What should I know about BitLocker Drive Encryption before I turn it on?
BitLocker Drive Encryption - Hard Disk Drives
C:
Off
Turn On BitLocker
EDRIVE (D:)
Off
Turn On BitLocker
E:
On
Unlock Drive
BitLocker Drive Encryption - BitLocker To Go
Insert a removable drive to use BitLocker To Go.
See also
TPM Administration
Disk Management
Read our privacy statement online

Figure 7 - 51
BitLocker Drive Encryption

Downloaded from Specialized Manuals

Advanced

Configure all the Security Platform owner and policy settings from the Advanced tab. The settings that can be changed are for the local computer only.

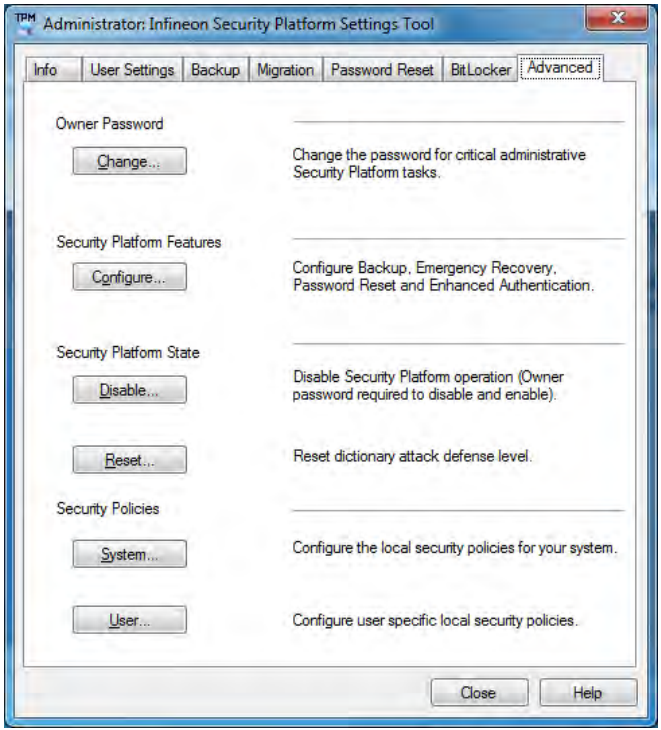

Figure 7 - 52
Infineon Security Platform Settings Tool (Advanced)

Downloaded from LpManual.com Manuals

Downloaded from LpManual.com Manuals

Chapter 8: Troubleshooting

Overview

Should you have any problems with your computer, before consulting your service representative, you may want to try to solve the problem yourself. This chapter lists some common problems and their possible solutions. This can't anticipate every problem, but you should check here before you panic. If you don't find the answer in these pages, make sure you have followed the instructions carefully and observed the safety precautions in the preface. If all else fails, talk to your service representative. You should also make a record of what happened and what remedies you tried.

Of course, if something goes wrong, it will happen at the most inconvenient time possible, so you should preview this section just in case. If, after you've tried everything, and the system still won't cooperate, try turning it off for a few minutes and then rebooting. You will lose any unsaved data, but it may start working again. Then call your service representative.

Downloaded from LpManual.com Manuals

Basic Hints and Tips

Many of the following may seem obvious but they are often the solution to a problem when your computer appears not to be working.

- **Power** - Is the computer actually plugged into a working electrical outlet? If plugged into a **power strip**, make sure it is actually working. Check the **LED Power Indicators** (see *"LED Indicators" on page 1 - 7*) to see the computer's power status.
- **Connections** - Check all the **cables** to make sure that there are no **loose connections** anywhere.
- **Power Savings** - Make sure that the system is not in **Hibernate** or **Sleep** mode by pressing the keys configured in your P*ower Options* (see *"Configuring the Power Buttons" on page 3 - 8*), the **Fn + F4** key combination, or power button to wake-up the system.
- **Brightness** - Check the brightness of the screen by pressing the **Fn** + **F8 and F9** keys to adjust the brightness (see *Table 1 - 4, on page 1 - 10*).
- **Display Choice** - Press **Fn** + **F7** to make sure the system is not set to "external only" display.
- **Boot Drive** - Make sure there are no **optical media and/or USB storage devices** in any connected drive when you start up your machine (this is a common cause of the message "***Invalid system disk - Replace the disk, and then press any key***" / "***Remove disks or other media. Press any key to restart***").

Downloaded from Service Manuals and Manuals

Backup and General Maintenance

- Always **backup** your important data, and keep copies of your OS and programs safe, but close to hand. Don't forget to note the **serial numbers** if you are storing them out of their original cases, e.g. in a CD wallet.

- Run **maintenance programs** on your hard disk and OS as often as you can. You may schedule these programs to run at times when you are not using your computer. You can use those that are provided free with your OS, or buy the more powerful dedicated programs to do so.

- Write down your passwords and keep them safe (away from your computer). This is especially important if you choose to use a **Boot** password for the SCU (see ***"Security Menu" on page 5 - 13***).

- Keep copies of vital **settings files** such as network, dialup settings, mail settings etc. (even if just brief notes).

Warranty

The CPU is not a user serviceable part. Opening this compartment, or accessing the CPU in any way, may violate your warranty.

Downloaded from LpManual.com Manuals

Viruses

- Install an **Anti-Virus** program and keep the **definitions file** (the file which tells your program which viruses to look for) up to date. New computer viruses are discovered daily, and some of them may seriously harm your computer and cause you to lose data. **Anti-Virus** programs are commercially available and the **definitions file updates** are usually downloadable directly from the internet.

- Be careful when opening e-mail from sources you don't know. **Viruses** are often triggered from within **e-mail attachments** so take care when opening any attached file. You can configure most **Anti-Virus** programs to check all **e-mail attachments**. **Note**: You should also beware of files from people you know as the virus may have infected an **address book** and been automatically forwarded without the person's knowledge.

- Keep a "**Bootable CD-ROM/DVD-ROM/USB storage device**" (this CD/DVD/USB device provides basic information which allows you to startup your computer) handy. You may refer to your OS's documentation for instructions on how to make one, and many **Anti-Virus** programs will also provide such a disk (or at least instructions on how to make one).

Downloaded from ServiceManual.com Manuals

Upgrading and Adding New Hardware/Software

- Do not be tempted to make changes to your **Windows Registry** unless you are very sure of what you are doing, otherwise you will risk severely damaging your system.

- Don't open your computer or undertake any repair or upgrade work if you are not comfortable with what you are doing.

- Read the **documentation**. We can assume, since you are reading this that you are looking at the computer's manual, but what about any new peripheral devices you have just purchased? Many problems are caused by the installation of new hardware and/or software. Always refer to the documentation of any new hardware and/or software, and pay particular attention to files entitled "**READ ME**" or "**READ ME FIRST**".

- When installing a new device always make sure the device is powered on, and in many cases you will need to restart the computer. Always check that all the cables are correctly connected.

- Make sure you have installed the **drivers** for any new hardware you have installed (latest **driver files** are usually available to download from vendor's websites).

- Thoroughly check any **recent changes** you made to your system as these changes may affect one or more system components, or software programs. If possible, go back and undo the change you just made and see if the problem still occurs.

Downloaded from LpManual.com Manuals

Troubleshooting

- Don’t over complicate things. The less you have to deal with then the easier the source of the problem may be found; **Example** - if your computer has many devices plugged into its ports, and a number of programs running, then it will be difficult to determine the cause of a problem. Try disconnecting all of the devices and restarting the computer with all the peripheral devices unplugged. A process of elimination (adding and removing devices and restarting where necessary) will often find the source of a problem, although this may be time consuming.

Downloaded from Laptopmanuals.com Academy

Problems & Possible Solutions

Problem	Possible Cause - Solution
You turned the **power on** but it doesn't work.	*Battery missing / incorrectly installed.* Check the battery bay, make sure the battery is present and seated properly (the design of the battery only allows it to go in one way). Make sure there's nothing interfering with the battery contacts.
The **Battery LED power** indicator , is blinking orange.	*Low Battery.* Plug in the AC power source. If the computer doesn't start up immediately, turn it off then on again.
You are losing **battery power** too quickly.	*The system is using too much power.* If your *OS* has a *Power Options* scheme (see ***"Power Plans" on page 3 - 4***) check its settings. You may also be using an ExpressCard device/USB device/external device that is drawing a lot of power. *You are attempting to run an SLI configuration on battery power.* Due to the high power and system demands created by enabling SLI Configuration, **you should not enable SLI configuration if your computer is powered by battery only**.
Actual **battery operating time** is shorter than expected.	*The battery has not been fully discharged before being recharged.* Make sure the battery is fully discharged and recharge it completely before reusing (see ***"Battery Information" on page 3 - 10***). Check the settings of any active power plan (see ***"Power Plans" on page 3 - 4***). *A peripheral device/USB device is consuming a lot of power.* Turn off/remove the unused device to save power.

Downloaded from LpManual.com Manuals

Problem	Possible Cause - Solution
The **computer feels too hot**.	Make sure the computer is properly ventilated and the vents/fan intakes are not blocked. If this doesn't cool it down, put the system into **Hibernate** mode or turn it off for an hour. Make sure the computer isn't sitting on a thermal surface (see ***"Overheating" on page 1 - 15***). Make sure you're using the correct adapter. Make sure that your notebook is completely powered off before putting it into a travel bag (or any such container). Putting a notebook which is powered on in a travel bag may cause the vents/fan intakes to be blocked.
Nothing appears on screen.	*The system is in a power saving mode*. Toggle the **Fn + F4** (see ***"Configuring the Power Buttons" on page 3 - 8***). *The screen controls need to be adjusted.* Toggle the screen control **Fn + F8/F9** key combinations. If you're connected to an external monitor, make sure it's plugged in and turned on. You should also check the monitor's own brightness and contrast controls. *The computer is set for a different display.* Toggle the screen display key **Fn + F7** combination. If an external monitor is connected, turn it on. *The **screen saver** is activated.* Press any key or touch the **TouchPad**.
No image appears on the **external monitor** I have plugged in and powered on.	*You haven't installed the video driver and configured it appropriately from the **Control Panel**.* See ***"NVIDIA Video Driver Controls" on page B - 1*** for instructions on installing and configuring the video driver.

Downloaded from LapManuals.com Manuals

Problem	Possible Cause - Solution
You forget the **boot password**.	*If you forget the password, you may have to discharge the battery of the CMOS.* Contact your service representative for help.
Password Warning If you choose to set a boot password, **NEVER** forget your password. The consequences of this could be serious. If you cannot remember your boot password you must contact your vendor and you may lose all of the information on your hard disk.	
The **sound** cannot be heard or the volume is very low.	*The volume might be set too low.* Check the volume control in the ***Volume Control Panel*** in the *Windows* taskbar, use the key combination **Fn + F5** and **F6 or** move your finger slowly along the volume control slider to adjust the system volume (see ***"Audio Features" on page 2 - 11***/ ***"Touch Sensor Instant Keys" on page 1 - 8***) to adjust.
The **compact disc** cannot be read.	*The compact disc is dirty.* Clean it with a CD-ROM cleaner kit.
The **compact disc tray** will not open when there is a disc in the tray.	*The compact disc is not correctly placed in the tray.* Gently try to remove the disc using the eject hole (see ***"Loading Discs" on page 2 - 3***).
The **DVD regional codes** can no longer be changed.	*The code has been changed the maximum **5** times.* See ***"DVD Regional Codes" on page 2 - 5***.

Downloaded from LpManual.com Manuals

Problem	Possible Cause - Solution
The **TouchPad** doesn't work.	*The Touchpad has been disabled*. Press the Touchpad toggle (**Fn + F1**) key combination (make sure you have installed the Touchpad driver.
The **system freezes** or the screen goes dark.	*The system's power saving features have timed-out*. Use the AC/DC adapter, press a key on the keyboard, or press the sleep (**Fn + F4**) key combination, or press the power button if no LEDs are lit.
The system never goes into a **power saving mode**.	Power Options features are not enabled. Go to the ***Windows*** Power Options menu and enable the features you prefer (see ***"Power-Saving States" on page 3 - 6***). Make sure you have enabled **Hibernate** mode from the control panel.
The **Wireless LAN/ Bluetooth/PC Camera modules** cannot be **detected**.	*The modules are off.* Check the appropriate LED indicator to see if the modules are on or off (see ***"Touch Sensor Instant Keys" on page 1 - 8***). If the LED indicator is not illuminated, then press the appropriate touch sensor instant key/function key combination in order to enable the modules.
The **Wireless LAN/ Bluetooth/PC Camera modules** cannot be **configured**.	*The driver(s) for the module(s) have not been installed*. Make sure you have installed the driver for the appropriate module (see the instructions in ***Chapter 7 "Modules"*** for the appropriate module).

Download from Diagmanuals.com

Problem	Possible Cause - Solution
When a **DVD** is played in **Windows Media Player/ Media Center**, the **audio track** in other languages (commentaries etc.) **is not clear** if connected to the S/PDIF-Out Jack.	*This is an issue with Windows Media Player/Media Center and audio output through the S/PDIF-Out Jack.* We recommend that you use the **Power DVD** application to play DVDs.
Nothing appears on the screen when the **PC Camera** software is run.	*You have selected an external display as the default display device*. The PC Camera application software needs to be run while the ***default notebook LCD*** is the selected display device. After a camera picture is obtained on the default notebook LCD, you may then use the **Fn + F7** to toggle through the display modes (give the screen time to refresh). If you have selected an external display as your display device do not run the PC Camera software application until you have switched back to the notebook LCD.
A file cannot be copied to/from a connected **Bluetooth** device.	*The transfer of data between the computer and a Bluetooth enabled device is supported **in one direction only (simultaneous data transfer is not supported)***. If you are copying a file from your computer to a Bluetooth enabled device, you will not be able to copy a file from the Bluetooth enabled device to your computer until the file transfer process from the computer has been completed
The **Bluetooth** module is **off** after resuming from Sleep.	*The Bluetooth module's default state will be off after resuming from the Sleep power-saving state*. Use the key combination (**Fn + F12**) to power on the Bluetooth module after the computer resumes from Sleep.

Downloaded from LpManual.com Manuals

Problem	Possible Cause - Solution
No sound can be heard through an **HDMI** connected display device.	*You have not configured the HDMI audio output*. See ***"HDMI Audio Configuration" on page 2 - 8***.
You are experiencing problems with **image distortion in a 3D game (or any 3D program)** when the computer is **powered by the battery**.	Where this is the case, install the beta video driver version provided on the ***Device Drivers & Utilities +User's Manual disc***. 1. ***Insert the Device Drivers & Utilities + User's Manual disc*** and click **Browse CD/DVD**. 2. The driver is located in the following location on the disc: **Drivers\02Video(beta)**. 3. Double-click the executable setup file and follow the on-screen instructions to install the driver.

Downloaded from Laptopmanuals.com Schematics

Problem	Possible Cause - Solution
When the battery is being used to power the system in an environment with an ambient temperature of below 10°C/50°F, **the battery reaches a low level very quickly.**	*This can occur as the battery cell performs poorly in a low temperature environment, especially with a discharge rate of over 2C.* Systems powered by the battery will perform normally at environmental temperatures over 10°C/50°F. To use the system at environmental temperatures below 10°C/50°F, it is recommended that the system is powered by the AC/DC adapter. **Battery Notes:** Note that when the the battery capacity is measured it may read less than the 5300mAh indicated on the label, and possibly less than 5000mAh. This can be due to either of the following factors: • The battery capacity listed on the label is defined by cell character specification. There is a -5% capacity tolerance based on a test at 0.2C charge/0.2C discharge. Therefore 5035mAh (-5% of 5300mAh) meets the battery capacity specification listed. • This system runs with a 0.6C charge/1C~2.5C discharge rate. The higher system charge/ discharge rate can result in a lower battery capacity measurement reading.

Downloaded from LpManual.com Manuals

Problem	Possible Cause - Solution
You have a RAID enabled and the system will not boot to ***Windows***.	You may need to recover the RAID volumes. 1. As the computer starts up press **Ctrl + i** to enter RAID configuration menu 2. If the RAID volume's **Physical disks** are marked in red, then press **4.Recovery Volume Options**. 3. If you cannot access **4.Recovery Volume Options** (i.e. it is grayed out) then press **5.Acceleration Options**. 4. Press **Enter** and return to the main menu, then press **4.Recovery Volume Options**. 5. Follow the on screen instructions to recover the **Physical disks**. 6. If only one of the physical disks now appears green, then press **6.Exit** to save the changes and exit and boot to ***Windows***. 7. When Windows is loaded run the **Intel® Matrix Storage Console** from the **Intel® Matrix Storage Manager** in the **Programs/All Programs** menu. 8. Click **View > Advanced Mode**. 9. Right-click on the RAID volume and select either **Verify Volume Data** or **Verify and Repair Volume Data**. 10. The verification or verification and repair process will run and display progress. 11. A dialog box will display the final status of the verification or verification and repair status.

Downloaded from Laptopmanuals.com Schematics

Bluetooth Connection Problems

If you are experiencing problems connecting to some Bluetooth devices (in particular certain mobile phones and headsets) it maybe necessary to download and install the **Windows Mobile Device Center** software (for ***Windows Vista*** and ***Windows 7***). Go to the Microsoft website and search for the **Microsoft Windows Device Center Driver for *Windows Vista* (*64-bit or 32-bit*) and *Windows 7* (*64-bit or 32-bit*)**, and then download the driver.

1. Install the ***Microsoft Windows Device Center Driver*** as appropriate for your operating system.
2. ***Windows Vista*** will automatically configure the driver for you, however ***Windows 7*** requires further configuration.
3. Make sure the Bluetooth device is powered on.
4. Go the ***Windows 7*** control panel and double-click **Device Manager** (**Hardware and Sound > Devices and Printers**).
5. **Bluetooth Peripheral Device(s)** will be listed under **Other Devices** (note this will only be listed if you have connected, or tried to connect to, a Bluetooth device previously).

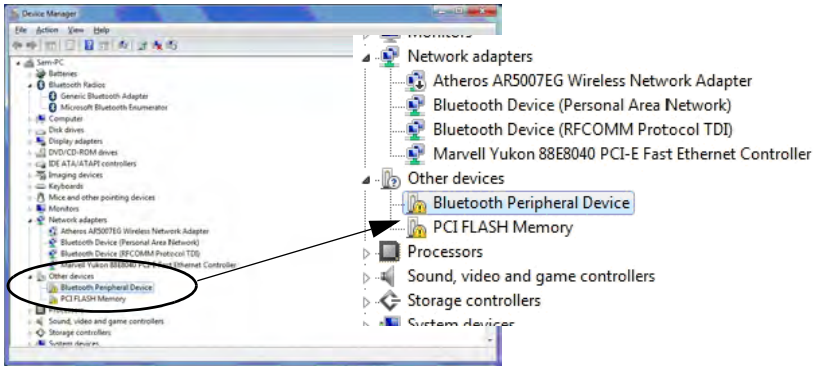

Figure 8 - 1 **- Device Manager**

Bluetooth Peripheral Devices

You will need to repeat the procedure listed here for all **Bluetooth Peripheral Devices** listed under **Other Devices** i.e. until there are no more **Bluetooth Peripheral Devices** listed under this menu heading.

Downloaded from LpManual.com Manuals

6. Right-click **Bluetooth Peripheral Device** and click on ***Update Driver Software***.
7. Click **Browse my computer for driver software**.
8. Click **Let Me pick from a list of device drivers on my computer**.

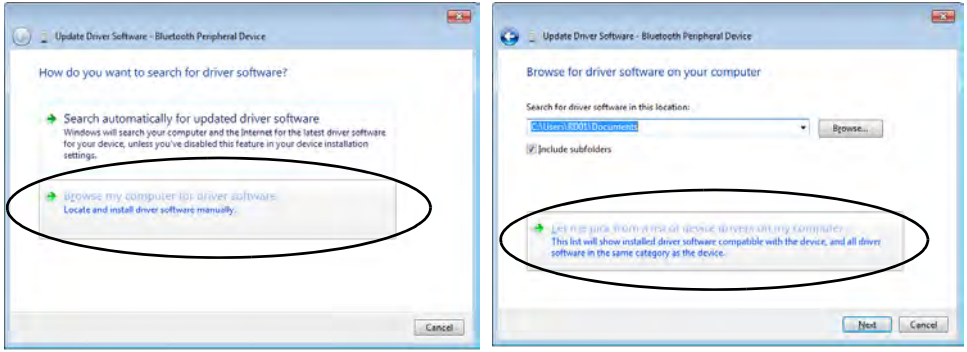
Update Driver Software - Bluetooth Peripheral Device
How do you want to search for driver software?
Search automatically for updated driver software
Windows will search your computer and the Internet for the latest driver software for your device, unless you've disabled this feature in your device installation settings.
Browse my computer for driver software
Locate and install driver software manually.
Cancel
Update Driver Software - Bluetooth Peripheral Device
Browse for driver software on your computer
Search for driver software in this location:
Browse...
Include subfolders
This list will show installed driver software compatible with the device, and all driver software in the same category as the device.
Next
Cancel

Figure 8 - 2 **- Browse my computer.../Let me pick from...**

9. Select **Bluetooth Radios** from the list.

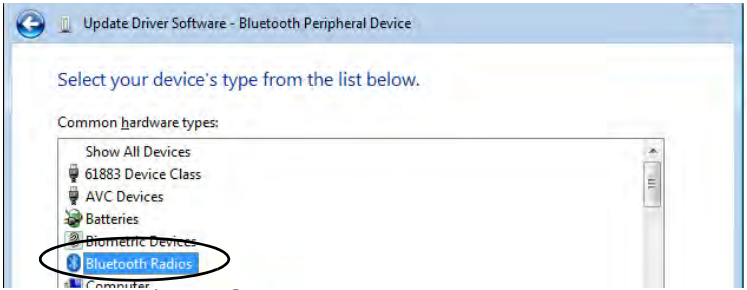

Figure 8 - 3 **- Select Bluetooth Radios**

Downloaded from Manualslib.com manuals search engine

10. A list of drivers will appear with **Manufacturer** on one side and **Model** in the other.
11. Choose **Microsoft Corporation** (make sure you choose the full name **Microsoft Corporation** and do not choose **Microsoft** - Note that you must have installed the **Microsoft Windows Device Center Driver** for **Microsoft Corporation** to appear in the list).
12. Select **Windows Mobile-based device support** from the **Model** list.

Make sure you select **Microsoft Corporation**

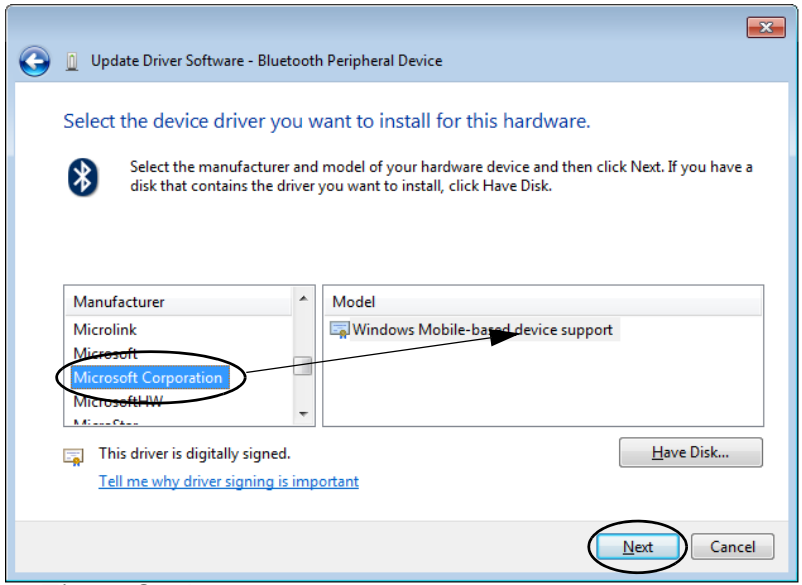
Update Driver Software - Bluetooth Peripheral Device
Select the device driver you want to install for this hardware.
Select the manufacturer and model of your hardware device and then click Next. If you have a disk that contains the driver you want to install, click Have Disk.
Manufacturer
Microlink
Microsoft
Microsoft Corporation
Model
Windows Mobile-based device support
This driver is digitally signed.
Tell me why driver signing is important
Have Disk...
Next
Cancel

Figure 8 - 4 **- Select Device Driver**

13. Click **Next > Yes** and the driver will install.
14. Click **Close** to complete the installation.

Downloaded from LpManual.com Manuals

15. The **Device Manager** should now display the **Windows Mobile-based device support** under **Bluetooth Radios**.
16. You will need to repeat the process for any other **Bluetooth Peripheral Devices** listed under **Other Devices**.

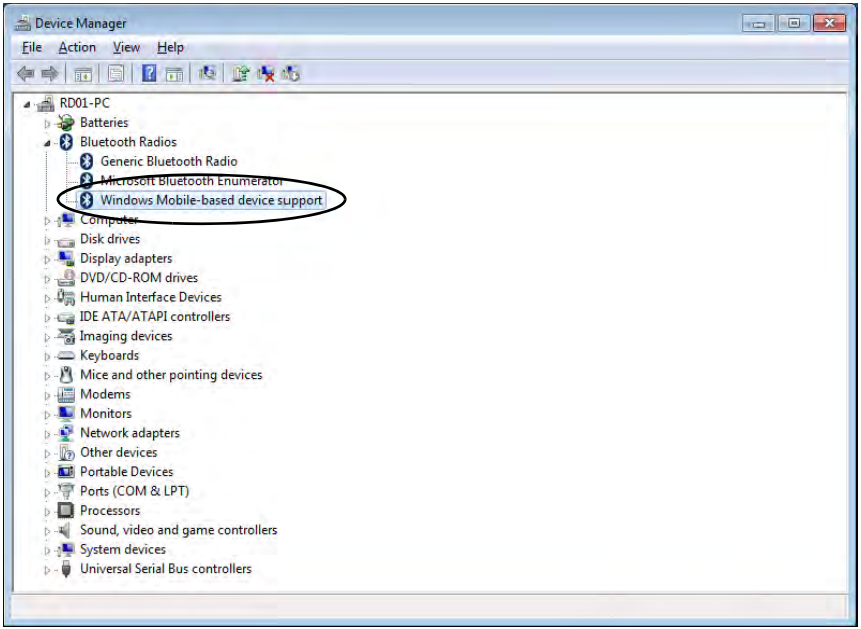

Figure 8 - 5 **- Device Manager - Bluetooth Radio**

Downloaded from Laptopmanuals.com Manuals

Intel® WLAN & Bluetooth V3.0+HS Combo Modules

Note that, at the time of going to press **Intel® Centrino Advanced 6230** WLAN & Bluetooth V3.0+HS combo modules use the standard Bluetooth configuration in ***Windows 7*** (see ***"Bluetooth Configuration in Windows 7" on page 7 - 55***). **Do not use** the Bluetooth & WLAN Combo settings information outlined from page *7 - 47* to page *7 - 53*.

Driver Release Update

Note also that, at the time of going to press, these modules do not support high speed Bluetooth (V3.0) data transfer. **Intel** have scheduled a driver release to allow this module to support high speed data transfer, so please check with Intel or your service center for details.

Downloaded from LpManual.com Manuals

Downloaded from LpManual.com Manuals

Appendix A: Interface (Ports & Jacks)

Overview

The following chapter will give a quick description of the ports & jacks which allow your computer to communicate with external devices, connect to the internet etc.

Downloaded from LpManual.com Manuals

Ports and Jacks

Item	Description
Card Reader MMC / SD / MS	The card reader allows you to use the following digital storage cards: MMC (MultiMedia Card) / RSMMC SD (Secure Digital) / Mini SD / SDHC / SDXC MS (Memory Stick) / MS Pro / MS Duo Push the card into the slot and it will appear as a removable device.
Cable (CATV) Antenna Jack CATV	Use this jack to connect a CATV cable if you have included the **optional** Mini-PCI TV Tuner in your purchase.
Consumer Infrared Transceiver	The **consumer infrared** transceiver at the **front** of the computer allows the computer to communicate with the remote control unit supplied with the **optional** Mini-PCI TV Tuner.
DC-In Jack	Plug the supplied AC/DC adapter into this jack to power your computer.
DVI-Out Port	The DVI-Out (**Digital Visual Interface**) Port is a video connector interface. This allows you to connect an external monitor, TV or Flat Panel Display etc. as a display device (see ***"Configuring an External Display using the NVIDIA Control Panel" on page B - 7***) by means of a DVI cable. If you are using an older type of monitor you will need to use a converter to convert the signal from DVI to VGA.

Downloaded from Laptopmanuals.us Manuals

Item	Description
e-SATA Port e-SATA	This **e-SATA** (**external Serial Advanced Technology Attachment**) port allows you to plug-in external Serial ATA hard drives.
HDMI-Out Port HDMI-OUT	The HDMI-Out (**High-Definition Multimedia Interface**) port is an audio/video connector interface for transmitting uncompressed digital streams. This allows you to connect an external monitor, TV or Flat Panel Display etc. as a display device (see ***"Configuring an External Display using the NVIDIA Control Panel" on page B - 7***) by means of a HDMI cable. **Note that HDMI carries both audio and video signals** (see ***"HDMI Audio Configuration" on page 2 - 8***).
Headphone-Out Jack	**Headphones** or **speakers** may be connected through this jack. **Note**: Set your system's volume to a reduced level before connecting to this jack.
Line-In Jack	The Line-In jack allows you to play audio sources through the computer's speakers. Note that audio input through Line-in will default to the **mute** setting. To set up your audio sources to play through the Line-in jack go to the **Sound** control panel and make sure the Mute box is not ticked.
Microphone-In Jack	Plug an external microphone in to this jack to record on your computer.

Downloaded from LpManual.com Manuals

Interface (Ports & Jacks)

Item	Description
Mini-IEEE 1394b Port IEEE 1394	This allows high-speed connection to various peripheral devices, e.g. external disk drives and digital cameras (**see note below**). **IEEE 1394b** The Mini-IEEE 1394 ports only support **SELF POWERED** IEEE 1394 devices.
RJ-45 LAN Jack	This port supports LAN (Network) functions. **Note**: Broadband (e.g. ADSL) modems usually connect to the LAN port.
S/PDIF-Out Jack	This S/PDIF (**Sony/Philips Digital Interface Format**) Out Port allows you to connect your DVD-capable PC to a Dolby AC-3 compatible receiver for “5.1” or ‘dts’ surround sound.
Security Lock Slot	To prevent possible theft, a Kensington-type lock can be attached to this slot. Locks can be purchased at any computer store.

A

Downloaded from Laptopmanuals.us Manuals

Item	Description
USB 2.0/1.1 Ports USB 3.0 Port 	These USB (**Universal Serial Bus**) 2.0 compatible ports (USB 2.0 is fully USB 1.1 compliant) are for low-speed peripherals such as keyboards, mice or scanners, and for high-speed peripherals such as external HDDs, digital video cameras or high-speed scanners etc. Devices can be plugged into the computer, and unplugged from the computer, without the need to turn the system off (if the power rating of your USB device is 500mA or above, make sure you use the power supply which comes with the device). The USB 3.0 ports are denoted by their blue color; USB 2.0 ports are colored black. USB 3.0 will transfer data much faster than USB 2.0, and is backwards-compatible with USB 2.0. Note that the USB 3.0 port requires a driver installation (see ***"USB 3.0" on page 4 - 8***), does not support wake on USB and is not operational under DOS.

Downloaded from LpManual.com Manuals

Downloaded from LpManual.com Manuals

Appendix B: NVIDIA Video Driver Controls

The basic settings for configuring the LCD are outlined in *"Video Features" on page 1 - 17*.

NVIDIA Video Driver Installation

Make sure you install the drivers in the order indicated in *Table 4 - 1, on page 4 - 3*.

1. Insert the *Device Drivers & Utilities + User's Manual* disc and click ***Install Drivers*** (button).
2. Click **2.Install Video Driver > Yes**.
3. Click **AGREE AND CONTINUE** (button) to accept the terms of the license agreement.
4. Click **NEXT**.
5. Click the **RESTART NOW** button to restart the computer.

Video Card Options

Note that card types, specifications and drivers are subject to continual updates and changes. Check with your service center for the latest details on video cards supported. Note that not all video card options for this computer model series support SLI configuration (**see** ***"Video Adapter Options" on page D - 2*****, or contact your service center for details**).

Downloaded from LpManual.com Manuals

NVIDIA Control Panel

To access the **GeForce.....** control panel from the desktop; right-click the **desktop**, then click **NVIDIA Control Panel**.

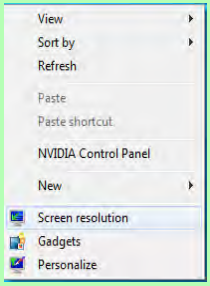

Figure B - 1

NVIDIA GeForce..... Control Panel

NVIDIA Control Panel (Win 7)

More advanced video configuration options are provided in the **NVIDIA Control Panel** tab.

1. Open the **Display** (see page ***1 - 18***) control panel.
2. Click **Advanced Settings** (button).
3. Click **GeForce.....** (tab).
4. Click **Start the NVIDIA Control Panel** to make any video adjustments.

OR

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Double-click **NVIDIA Control Panel** (click "**Classic View"** from the left of the menu if you are in **Control Panel Home**).

Generic PnP Monitor and NVIDIA GeForce Properties
Adapter
Monitor
Troubleshoot
Color Management
GeForce GTX
NVIDIA
Looking for the NVIDIA Display Control Panel?
All of the NVIDIA control panels have been consolidated into a single application, the NVIDIA Control Panel. It can be launched from the Windows Control Panel or by right-clicking on the Windows desktop.
Start the NVIDIA Control Panel
OK
Cancel
Apply

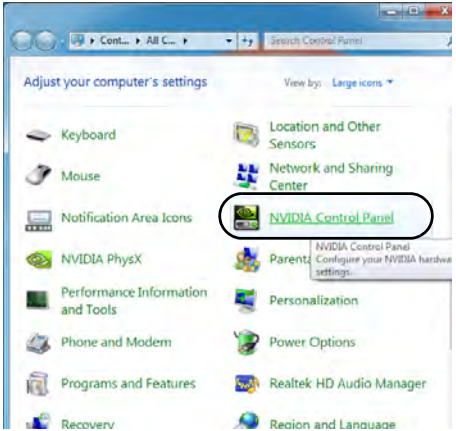

Downloaded from ManualsNet.com manuals

The **NVIDIA Control Panel** provides additional video configuration controls and tools which allow quick access to features such as display configuration, 3D Settings and Help menus etc.

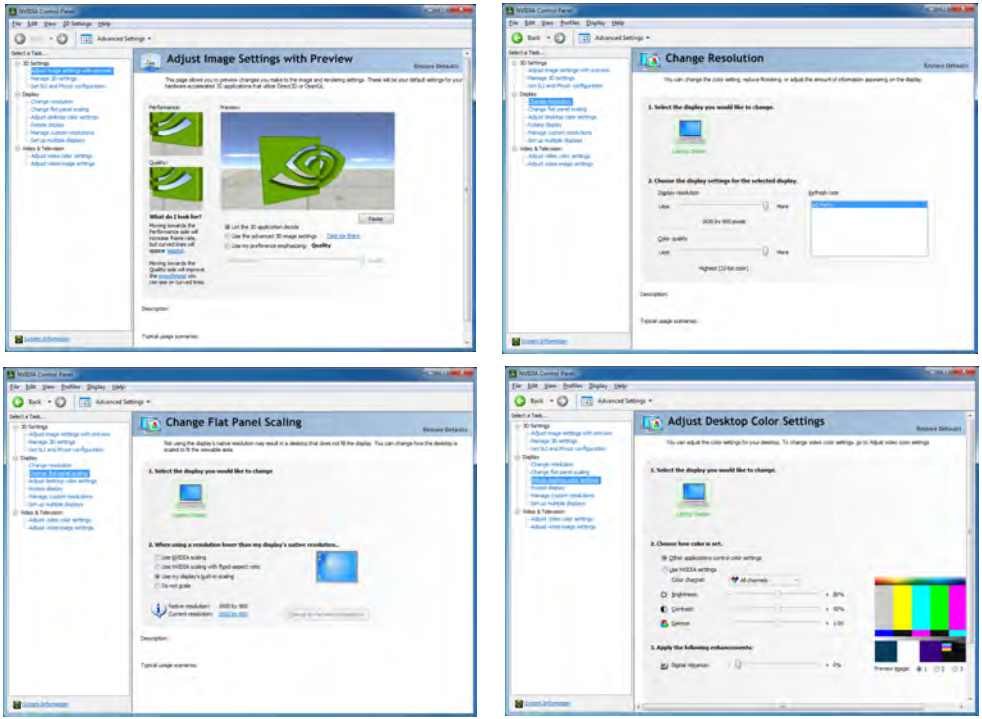

Navigating the Control Panel

Navigate through the control panels in much the same way as you would a web page. Click on the sub-heading tasks in the left menu (and on the highlighted links) for information. Use the buttons on the top left to go back, forward etc.

Figure B - 2
NVIDIA Control Panels

B

Downloaded from LpManual.com Manuals

The **Help** menus provide index and search features, and direct links to the NVIDIA website etc.

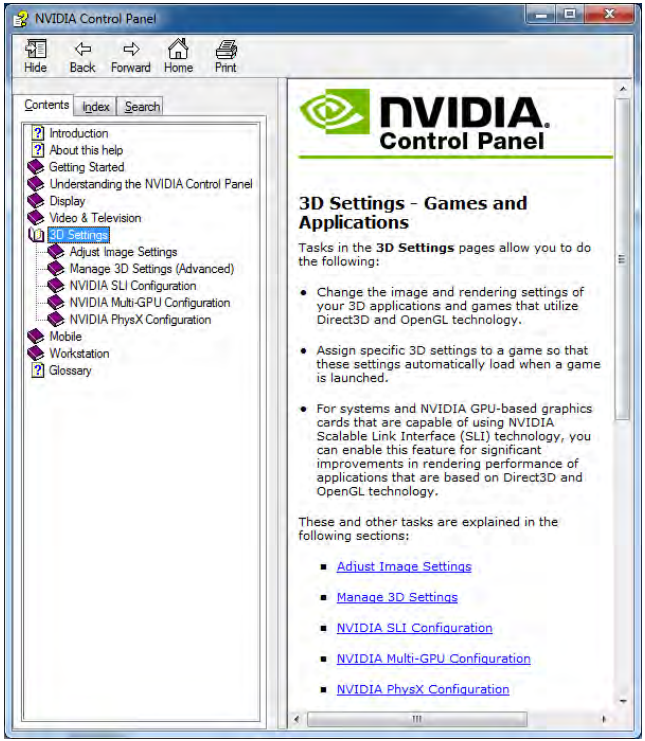
NVIDIA Control Panel
Hide
Back
Forward
Home
Print
Contents
Index
Search
Introduction
About this help
Getting Started
Understanding the NVIDIA Control Panel
Display
Video & Television
3D Settings
Adjust Image Settings
Manage 3D Settings (Advanced)
NVIDIA SLI Configuration
NVIDIA Multi-GPU Configuration
NVIDIA PhysX Configuration
Mobile
Workstation
Glossary
NVIDIA
Control Panel
3D Settings - Games and Applications
Tasks in the 3D Settings pages allow you to do the following:
Change the image and rendering settings of your 3D applications and games that utilize Direct3D and OpenGL technology.
Assign specific 3D settings to a game so that these settings automatically load when a game is launched.
For systems and NVIDIA GPU-based graphics cards that are capable of using NVIDIA Scalable Link Interface (SLI) technology, you can enable this feature for significant improvements in rendering performance of applications that are based on Direct3D and OpenGL technology.
These and other tasks are explained in the following sections:
Adjust Image Settings
Manage 3D Settings
NVIDIA SLI Configuration
NVIDIA Multi-GPU Configuration
NVIDIA PhysX Configuration

Figure B - 3
Help Menu

Downloaded from ManualsDirectory.com

Display Devices

Note that you can use a DVI cable connected to the DVI-Out port, or an HDMI (High-Definition Multimedia Interface) cable connected to the HDMI-Out port to connect an external display (if you are using an older type of monitor you can use a converter to convert the signal from DVI to VGA). See your display device manual to see which formats are supported.

1. The built-in LCD.
2. An external display connected to the DVI-Out Port.
3. An external display/TV (if the TV supports an HDMI connection) connected to the HDMI-Out Port.

Monitor and TV Tuner

If you are connecting both a monitor/flat panel display to the DVI-Out Port, and a cable/aerial to the optional TV Tuner module, **make sure you attach the cable/aerial to the TV Tuner first**, then the monitor.

Display Devices

Besides the built-in LCD, you can also use an external monitor/flat panel display as your display device. The display options are:

- The built-in LCD.
- An external display connected to the DVI-Out port.
- An external display connected to the HDMI-Out port.

Note that HDMI supports video and audio signals.

DO NOT use the **Fn + F7** key combination to toggle through display options when SLI is enabled.

B

Downloaded from LpManual.com Manuals

SLI Configuration & Multiple Displays

Note that if SLI configuration is enabled only a **Single** display may be used as the display device.

DO NOT use the **Fn + F7** key combination to toggle through display options when SLI is enabled. SLI supports only a **Single** display, and attempting to configure dual displays may cause an error. Use the NVIDIA control panel to select the display to be used.

Display Modes

Single Display Mode

Only one of your displays is used.

Duplicate Displays

Duplicate simply shows an exact copy of the Primary display desktop on the other display(s). This mode will drive multiple displays with the same content.

Extend Desktop

Extend Desktop treats both connected displays as separate devices, and they act as a virtual desktop resulting in a large workspace. When enabled, you can drag any icons or windows across to the other display desktop. It is therefore possible to have one program visible in one of the displays, and a different program visible in the other display.

Downloaded from ManualsLib.com Manuals

Configuring an External Display using the NVIDIA Control Panel

You can use the **NVIDIA control panel** to configure any attached displays.

1. Attach your external display to the DVI-Out Port or HDMI-Out port, and turn it on.
2. Go to **NVIDIA Control Panel** (see page ***B - 2***).
3. Double-click **Display** (if the sub-menus are not visible)**,** and then click **Set up multiple displays**.
4. Any attached display will appear under "**1.Select the displays you want to use.**"

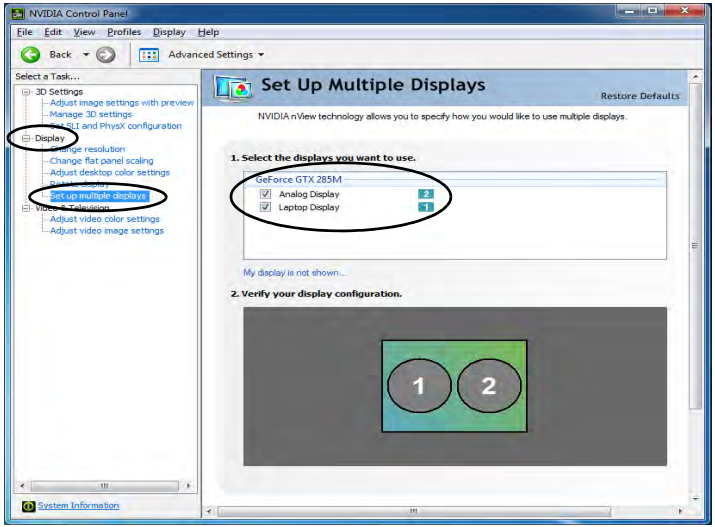

5. Click the tickbox alongside any display you wish to use.
6. Click **Apply > Yes** to save any changes made.

Display Not Shown

If the attached display does not appear in the "***1.Select the displays you want to use.***" window, click "***My Display is not shown...***" and then click the appropriate button to force detection of the missing display.

Figure B - 4
Set Up Multiple Displays

B

Downloaded from LpManual.com Manuals

Duplicating the Displays

1. Attach your external display to the DVI-Out Port or HDMI-Out port, and turn it on.
2. Go to **NVIDIA Control Panel** (see page ***B - 2***).
3. Double-click **Display** (if the sub-menus are not visible)**,** and then click **Set up multiple displays**.
4. Any attached display will appear under *"**1.Select the displays you want to use.**"*
5. Click the tickbox alongside any display you wish to use.
6. Right-click one of the display icons and click "**Duplicate displays....**" (select which is to be the primary display) to duplicate the desktop on both displays.

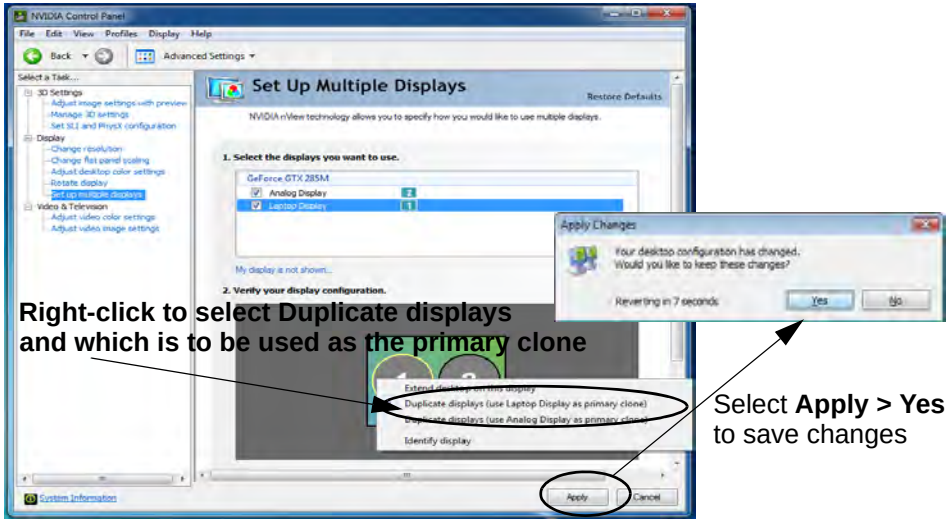
NVIDIA Control Panel
Set Up Multiple Displays
1. Select the displays you want to use.
2. Verify your display configuration.
Apply Changes
Your desktop configuration has changed.
Would you like to keep these changes?
Yes
No
Right-click to select Duplicate displays
and which is to be used as the primary clone
Duplicate displays (use Laptop Display as primary clone)
Identify display
Apply
Cancel
Select Apply > Yes
to save changes

Figure B - 5
Duplicate Displays

7. Click **Apply > Yes** to save any changes.

Downloaded from Laptop Motherboard Manuals

Extending the Display

1. Attach your external display to the DVI-Out Port or HDMI-Out port, and turn it on.
2. Go to **NVIDIA Control Panel** (see page ***B - 2***).
3. Double-click **Display** (if the sub-menus are not visible)**,** and then click **Set up multiple displays**.
4. Click to select a primary display under ***"1.Select the displays you want to use."***
5. Right-click one of the display icons and click "**Extend Desktop on this display...."** to extend the desktop across both displays.

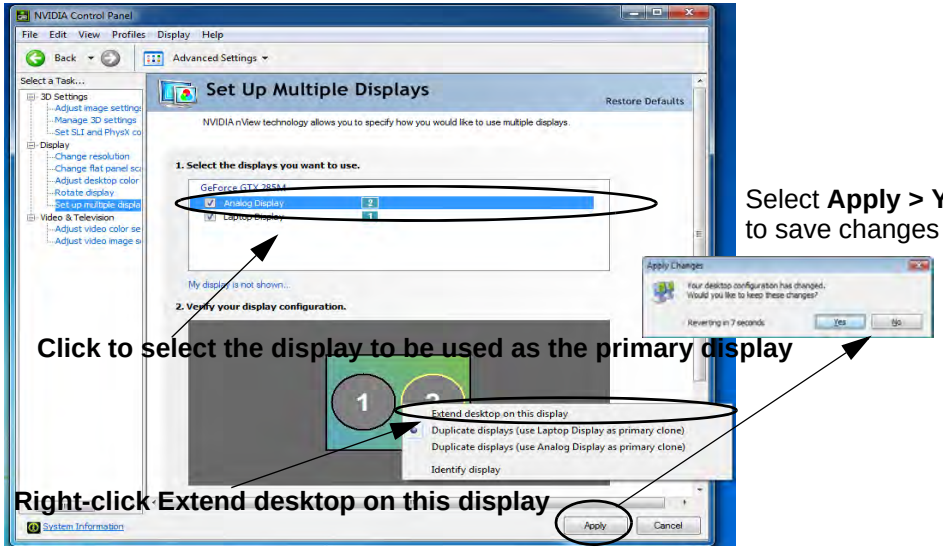
NVIDIA Control Panel
File Edit View Profiles Display Help
Back
Advanced Settings
Select a Task...
3D Settings
Display
Video & Television
Set Up Multiple Displays
Restore Defaults
NVIDIA nView technology allows you to specify how you would like to use multiple displays.
1. Select the displays you want to use.
Analog Display
2. Verify your display configuration.
Extend desktop on this display
Duplicate displays (use Laptop Display as primary clone)
Duplicate displays (use Analog Display as primary clone)
Identify display
Apply
Cancel
System Information
Select Apply > Yes to save changes
Click to select the display to be used as the primary display
Right-click Extend desktop on this display

Figure B - 6
Extend the Display

6. Click **Apply > Yes** to save any changes.

Downloaded from LpManual.com Manuals

Changing the Primary Display on Extended Displays

1. If you want to switch the primary display if the displays are extended then right-click the **secondary** display icon.
2. Select **Make this the Windows primary display**.
3. Click **Apply > Yes** to save the change.

Figure B - 7
Switch Primary Display

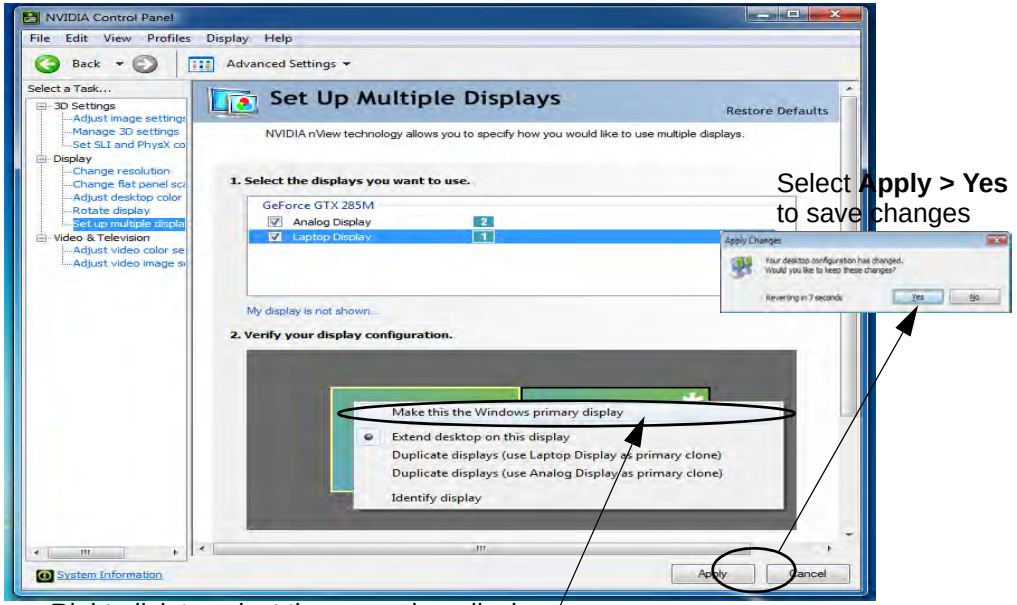
NVIDIA Control Panel
File Edit View Profiles Display Help
Back
Advanced Settings
Select a Task...
3D Settings
Display
Video & Television
Set Up Multiple Displays
Restore Defaults
NVIDIA nView technology allows you to specify how you would like to use multiple displays.
1. Select the displays you want to use.
GeForce GTX 285M
Analog Display
Laptop Display
My display is not shown...
2. Verify your display configuration.
Make this the Windows primary display
Extend desktop on this display
Duplicate displays (use Laptop Display as primary clone)
Duplicate displays (use Analog Display as primary clone)
Identify display
System Information
Apply
Cancel
Select Apply > Yes to save changes
Right-click to select the secondary display and select Make this the Windows primary display.

Download from Programmer's Manuals

Attaching Other Displays (Win 7)

Configuring an External Display in Windows 7

1. Attach your external display to the DVI-Out Port or HDMI-Out port, and turn it on.
2. Go to the **Screen resolution** control panel.
3. Click the **Detect** button.
4. The computer will then detect any attached displays.

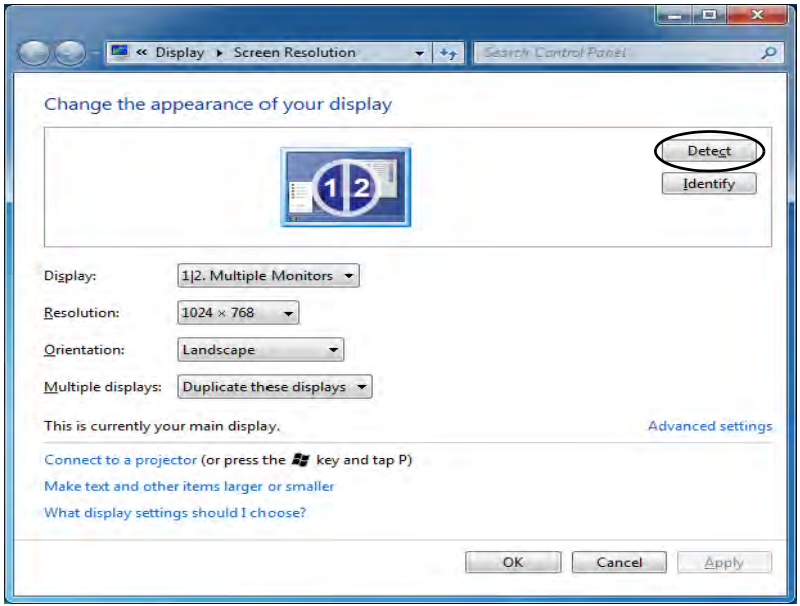

Function Key Combination

You can use the **Fn + F7** key combination to toggle through the display options:

- Notebook Only
- External Display Only
- Notebook + External Display

Make sure you give the displays enough time to refresh.

DO NOT use the **Fn + F7** key combination to toggle through display options when SLI is enabled.

Figure B - 8
Screen Resolution Multiple Displays (Win 7)

B

Downloaded from LpManual.com Manuals

5. You can configure the displays from the **Multiple Displays** menu.

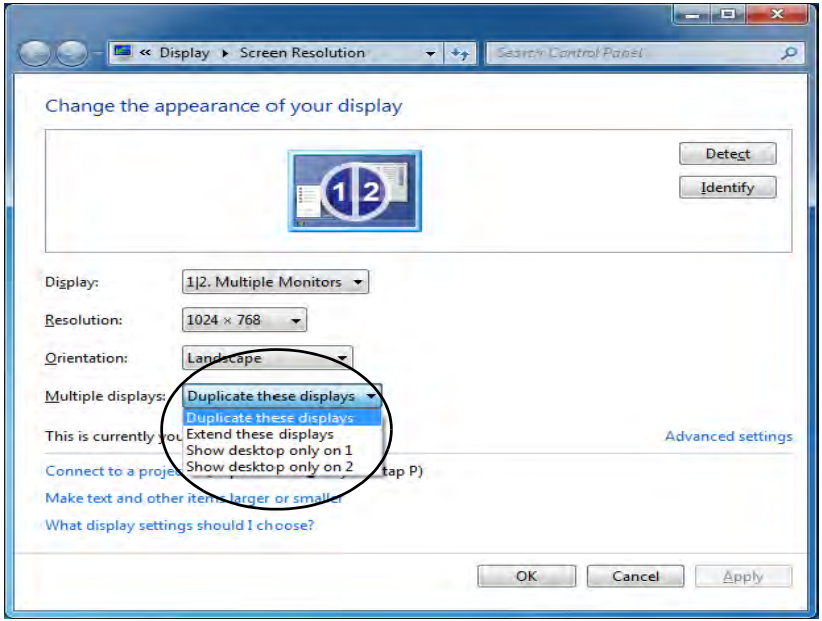

Figure B - 9
Screen Resolution Multiple Display Options (Win 7)

- Duplicate these displays - Shows an exact copy of the main display desktop on the other display(s)
- Extend these displays - Treats both connected displays as **separate** devices
- Show desktop only on 1/2 - Only one of your displays is used.

Download from Www.Somanuals.com. All Manuals

Using the Windows Logo Key + P Key Combination to Switch Displays

You can also use the + **P** key combination to quickly change display configuration and modes (this is particularly useful when attaching a projector) in ***Windows 7***.

1. Attach your external display to the external monitor port and turn it on.
2. Press the + **P** key combination.
3. An on-screen menu will pop up.
4. Use the cursor keys (or + **P**) to select the appropriate configuration from the menu, and press Enter to confirm the selection.

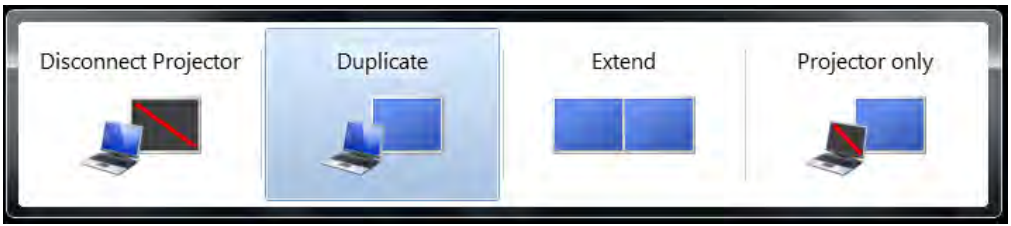

Figure B - 10
+ P Display Configuration Selection (Win 7)

Downloaded from LpManual.com Manuals

Video Card Options

Note that card types, specifications and drivers are subject to continual updates and changes. Check with your service center for the latest details on video cards supported. Note that not all video card options for this computer model series support SLI configuration (**see *"Video Adapter Options" on page D - 2*, or contact your service center for details**).

SLI Multi GPU Configuration

This computer features an **NVIDIA Scalable Link Interface (SLI)** that improves graphic quality and performance by combining **dual** NVIDIA GPUs (two video cards are required) in a single system. To enable/disable SLI Configuration:

1. Go to **NVIDIA Control Panel** (see page ***B - 2***).
2. Click "**+**" next to **3D Settings** if its sub-items are not shown and then click **Set SLI and PhysX configuration**.

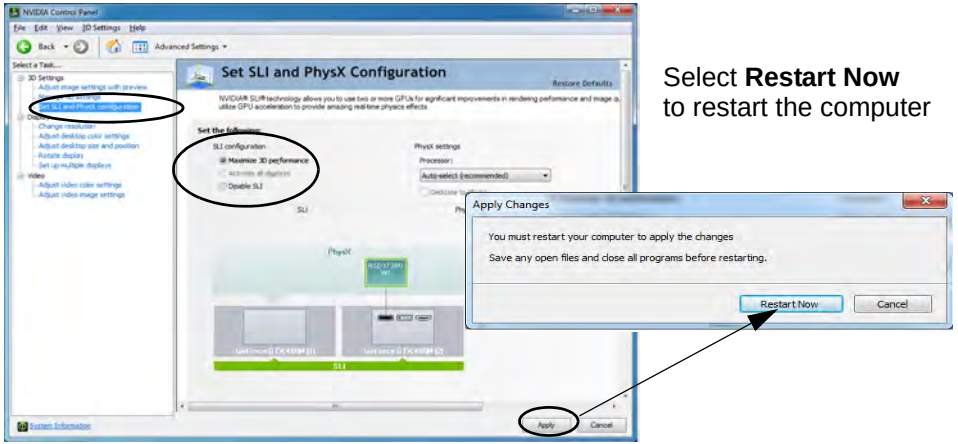

Select **Restart Now** to restart the computer

Figure B - 11
Set SLI Configuration

3. Click "**Maximize 3D Performance**" under "**SLI configuration:"**.
4. Click to select "**PhysX settings;** Auto-select (recommended) is the default setting.
5. Click **Apply** and **Restart Now** to restart the computer (see over).

Downloaded from Manualslib.com manuals

SLI Multi GPU Configuration & Battery Power

Note that due to the high power and system demands created by enabling SLI Configuration, **you should not enable SLI configuration if your computer is powered by battery only**. If you attempt to run an SLI configuration when the computer is powered by the battery only, then system problems may occur.

- If the computer is currently powered by battery only **do not enable SLI configuration**.
- If you have currently enabled SLI configuration, and the computer is powered by the AC/DC adapter, **do not switch to battery power only** (or go to the NVIDIA Control Panel and disable SLI configuration before switching to battery power only).

SLI Configuration & Multiple Displays

Note that if SLI configuration is enabled only a **Single** display may be used as the display device.

DO NOT use the **Fn + F7** key combination to toggle through display options when SLI is enabled. SLI supports only a **Single** display, and attempting to configure dual displays may cause an error. Use the NVIDIA control panel to select the display to be used.

Downloaded from LpManual.com Manuals

Detect Displays

To get a full range of display options click "***My display is not shown in the list...***".

HDMI Audio Setup

See ***"HDMI Audio Configuration" on page 2 - 8*** for instructions on configuring audio for HDMI display devices.

Set up your external display (TV or LCD) for HDMI input (see your display device manual).

Enabling TV Display

To display desktop images on a TV, connect the TV to your computer by using an HDMI cable/DVI cable from the TV to the HDMI-Out port/DVI-Out port (if supported by your TV).

You will need to enable the TV display from the **NVIDIA Control Panel** as per the instructions on ***B - 7***. The TV will appear as a display option (***1. Select the displays you would like to use.***) when attached to the appropriate port. **Apply** the settings, and then click **Yes** to save the changes.

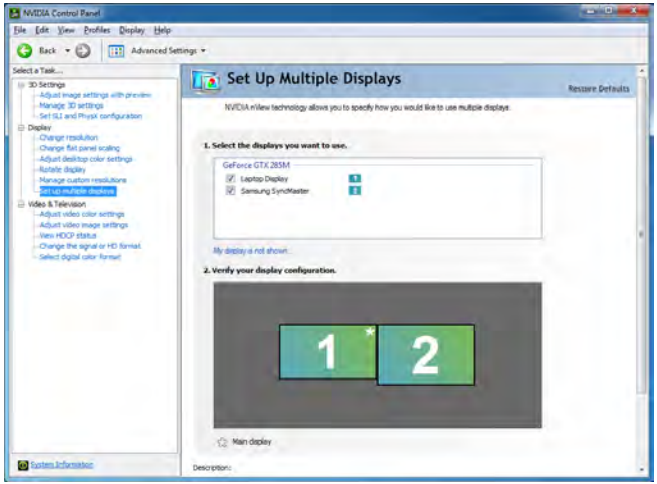

Figure B - 12
Set Up Multiple Displays (with TV connected)

Download from Laptop Manual.com Displays

Changing the TV Signal Format

1. When the TV is enabled as a display device click the sub-menus under **Video & Television**.
2. Click "***Change the signal or HD format***".
3. Select the connector or format you want to use (the menu that appears will depend upon your type of connector).
4. **Apply** the settings, and then click **Yes** to save the changes.

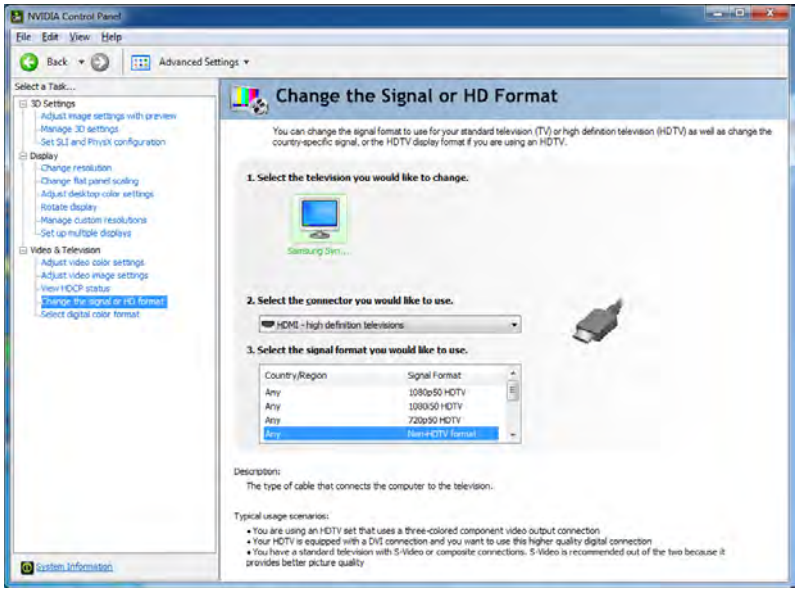
NVIDIA Control Panel
File Edit View Help
Back
Advanced Settings
Select a Task...
3D Settings
Adjust image settings with preview
Manage 3D settings
Set SLI and PhysX configuration
Display
Change resolution
Change flat panel scaling
Adjust desktop color settings
Rotate display
Manage custom resolutions
Set up multiple displays
Video & Television
Adjust video color settings
Adjust video image settings
View HDCP status
Change the signal or HD format
Select digital color format
System Information
Change the Signal or HD Format
You can change the signal format to use for your standard television (TV) or high definition television (HDTV) as well as change the country-specific signal, or the HDTV display format if you are using an HDTV.
1. Select the television you would like to change.
Samsung Sm...
2. Select the connector you would like to use.
HDMI - high definition televisions
3. Select the signal format you would like to use.
Country/Region
Signal Format
Any
1080p50 HDTV
Any
1080i50 HDTV
Any
720p50 HDTV
Any
Description:
The type of cable that connects the computer to the television.
Typical usage scenarios:
• You are using an HDTV set that uses a three-colored component video output connection
• Your HDTV is equipped with a DVI connection and you want to use this higher quality digital connection
• You have a standard television with S-Video or composite connections. S-Video is recommended out of the two because it provides better picture quality

Figure B - 13
Change the Signal or HD Format

B

Downloaded from LpManual.com Manuals

The **NVIDIA Control Panel** provides additional configuration controls to adjust the TV settings in the **Video & Television** menu.

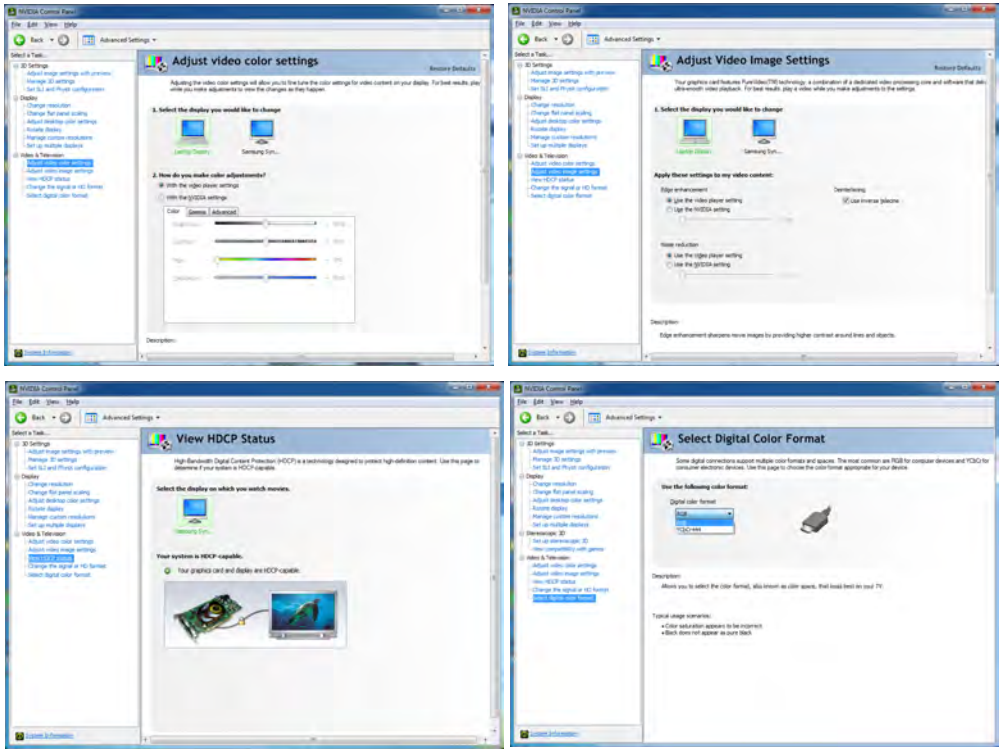

Figure B - 14
NVIDIA Control Panels (Video & Television)

Downloaded from ManualsPrinter.com Manuals

Appendix C: AMD Video Driver Controls

The basic settings for configuring the LCD are outlined in *"Video Features" on page 1 - 17*.

Video Driver Installation

Make sure you install the drivers in the order indicated in *Table 4 - 1, on page 4 - 3*.

Video (VGA)

1. Click **2.Install Video Driver** > **Yes**.
2. Click **Next** > **Install** (button).
3. Click the **Express** (or **Custom** if you prefer to manually configure the driver installation settings) button and click **Next**.
4. Click **Accept** (button) and click **Yes**.
5. Click **Finish** > **Yes** to restart the computer.
6. After the computer has restarted, click **Restart Now** to restart again to refresh the video driver.

Note: After installing the video driver go to the **Display**/**Display Settings** control panel to adjust the video settings to the highest resolution.

Video Card Options

Note that card types, specifications and drivers are subject to continual updates and changes. Check with your service center for the latest details on video cards supported (**see** ***"Video Adapter Options" on page D - 2ID - 3*****, or contact your service center for details**).

C

Downloaded from LpManual.com Manuals

Taskbar Icon

The **Catalyst™ Control Center** can also be accessed by double-clicking the icon in the taskbar (or by right-clicking the icon and selecting **Configure Graphics**).

If you don't see the icon in the taskbar, click **Preferences** in the **Catalyst™ Control Center**, and select **Enable System Tray Menu (see over)**.

Catalyst™ Control Center

Adjust the video settings from the **Catalyst™ Control Center**.

1. Right-click the desktop and select **Catalyst Control Center**.
   OR
2. Click **Advanced settings** in the **Screen Resolution** control panel (see ***"Video Features" on page 1 - 17***), click the **Catalyst Control Center** tab and then click **ATI Catalyst control Center**.

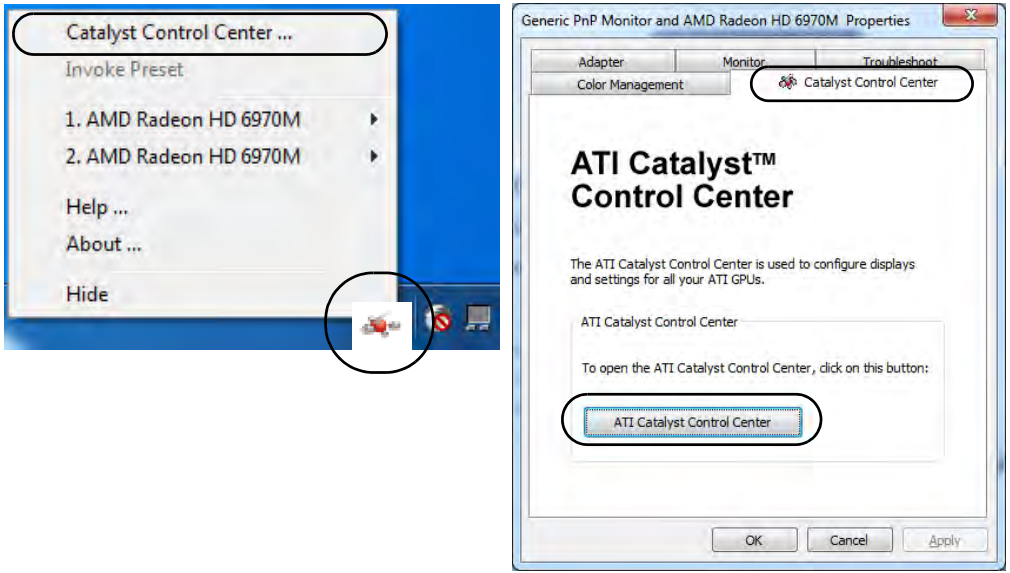

Figure C - 1
Catalyst Control Center Access

Downloaded Catalyst Manuals from Manuals

Catalyst™ Control Center Preferences

The **Preferences** button in the **Catalyst™ Control Center** menu allows you to configure the control panel settings. You can view the control panel in either **Standard View** or **Advanced View**. To display **Standard View** or **Advanced View**:

1. Open the **Catalyst™ Control Center**.
2. Click the Preferences button and select either **Advanced View** or **Standard View**.

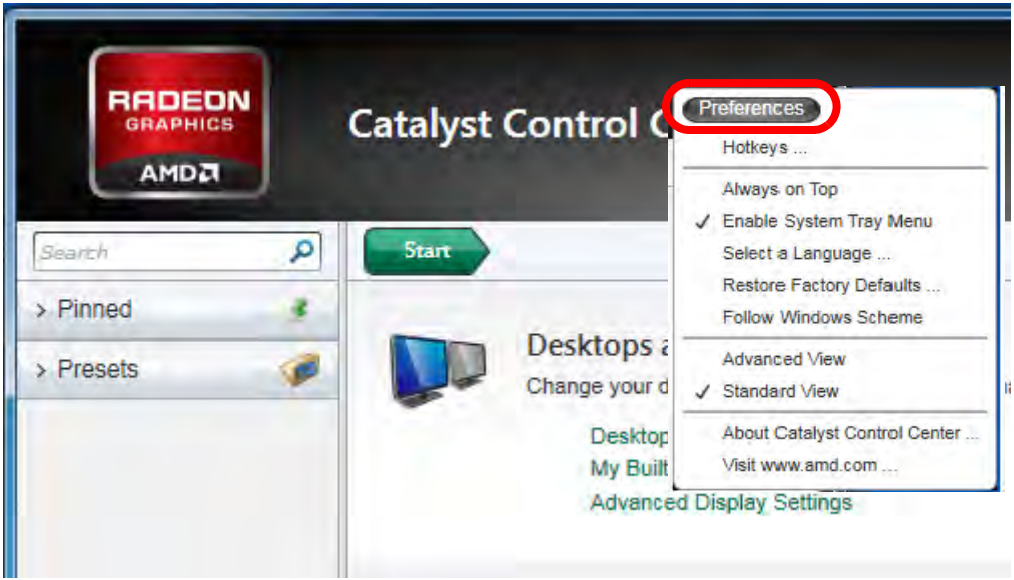

Preferences & Views

You can switch between **Advanced** and **Standard** views from the **Preferences** menu.

Figure C - 2
Catalyst Control Center Preferences

C

Downloaded from LpManual.com Manuals

Standard View

The **Standard View** menus feature a series of menu headings with clickable sub-menus which allow you to adjust **Desktops and Displays**, **Power**, **Video**, **Gaming** and **Information**. Click the **Start** button to access the top level menu from any sub-menu heading.

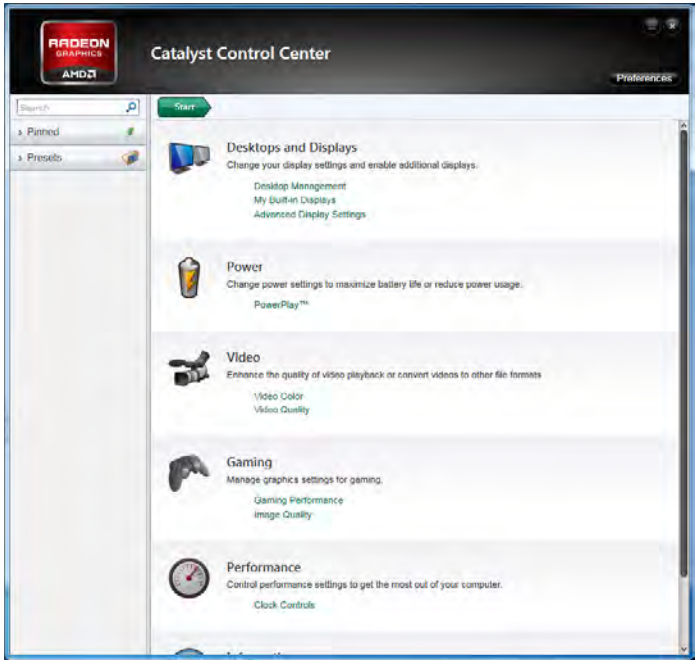

Figure C - 3
Catalyst Control Center Standard View

C

Downloaded Catalyst Manuals from Manuals

Advanced View

The **Advanced View** menus display all the menu headings as a series of buttons on the left. Click the arrows in any button to display the sub-menus (note all the figures in the remainder of this chapter are in **Advanced View**).

Figure C - 4
Catalyst Control Center Advanced View

Sub-Menus

Click a menu button to expand any sub-menus, and then click the appropriate sub-menu heading to configure the item.

Catalyst Control Center Versions

Due to driver updates your Control Center screens may appear slightly different from those pictured on these pages.

C

Downloaded from LpManual.com Manuals

Help Menus

Press **F1** to bring up **Help** menu. Click the question mark icon in the top right to bring up help on a specific page.

The **Catalyst™ Control Center** provides additional video configuration controls and tools which allow quick access to features such as display options, 3D Settings, color, power and Information menus etc. Adjust settings from the options in the sub-menus.

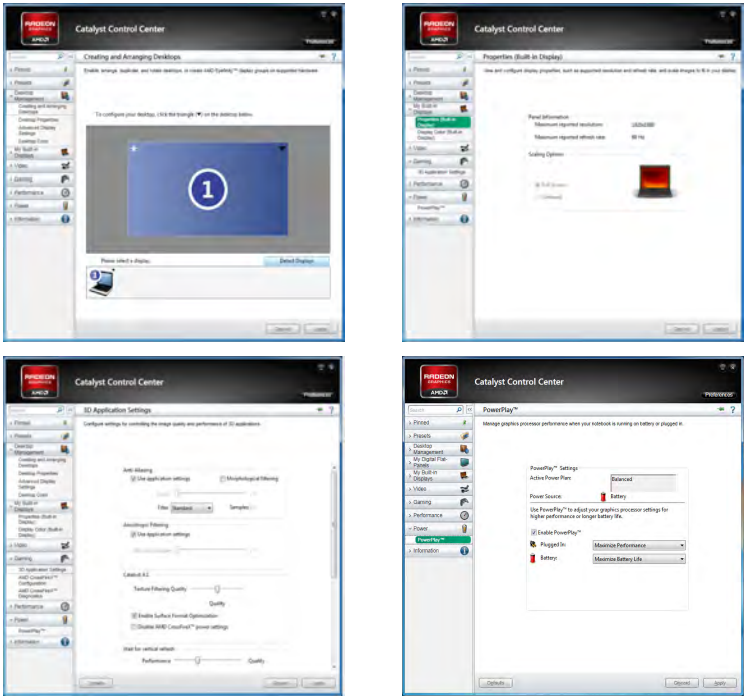

Figure C - 5
ATI Catalyst Control Center Advanced Menus

Downloaded Catalyst Manuals from Manuals

Display Devices & Options

Note that you can use a DVI cable connected to the DVI-Out port, or an HDMI (High-Definition Multimedia Interface) cable connected to the HDMI-Out port to connect an external display. See your display device manual to see which formats are supported.

Display Mode	Description
Single	One of the connected displays is used as the display device
Duplicate	Both connected displays output the same view
Extend	Both connected displays are treated as separate devices, act as a virtual desktop and may be configured independently

Table C - 1
Display Modes

Downloaded from LpManual.com Manuals

Detect Displays

Click **Detect Displays** (button) to automatically update the attached display information.

You can set a preference for automatic display detection in **Advanced Display Settings (Desktop Management)**. You can choose to have attached displays automatically detected when the CCC is opened, or to use manual detection only.

Configuring an External Display In the CCC

You can use the **Catalyst™ Control Center** to configure any attached displays.

1. Attach your external display to the external monitor port/HDMI-Out port, and turn it on.
2. Open the **Catalyst™ Control Center**.
3. Select **Desktop Management** from the **m**enu on the left (click the arrow to expand the menu) and click **Creating and Arranging Desktops**.
4. Attached displays will appear in the lower part of the screen (click **Detect Displays** to find any attached displays that do not automatically appear).

Figure C - 6
Desktop Management

Click **Detect Displays** to find any attached displays that do not automatically appear.

Downloaded from Display Manuals - Laptop Manuals

5. Click the triangle icon ▼ (or right-click the display icon) on the attached display icon at the bottom to bring up the options (e.g **Duplicate** or **Extend**).
6. Select an option from the menu (click **Continue** if required), and click **Yes** to accept the settings.

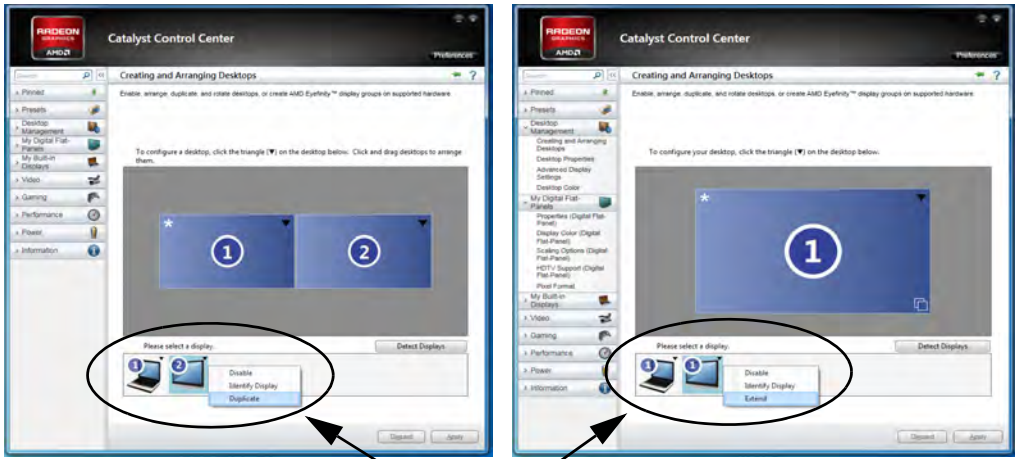

7. An extra menu button (e.g. **My VGA Displays**) will be available to offer configuration options for your external display (depending on the type of display attached).

Disable Displays

If you want to disable any of the displays, right-click the display icon at the bottom of the screen and click **Disable**.



Figure C - 7
Desktop Management with External Display

C

Downloaded from LpManual.com Manuals

My Digital Flat-Panels

An additional menu button entitled My Digital Flat-Panels will appear (depending on the type of display attached) when an external display is attached. This menu allows you to configure the properties of the external display. After making any adjustments you may need to click the **Apply** button to confirm the changes.

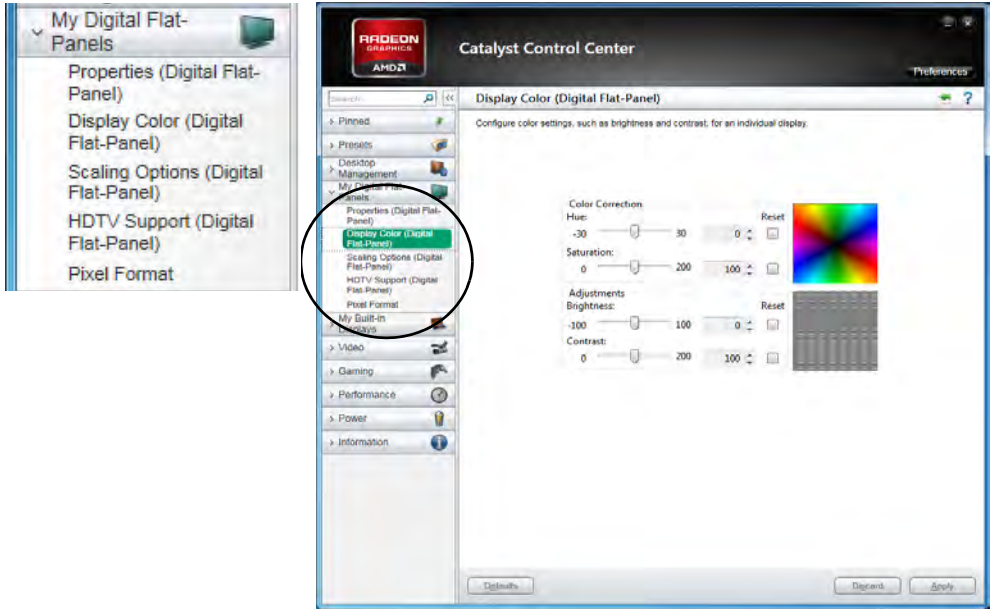

Figure C - 8
My Digital Flat-Panels

Download from Panasonic Manuals

HDTV Support

If your flat panel supports HDTV functions then this can be configured from **My Digital Flat-Panels > HDTV Support (Digital Flat-Panel)**.

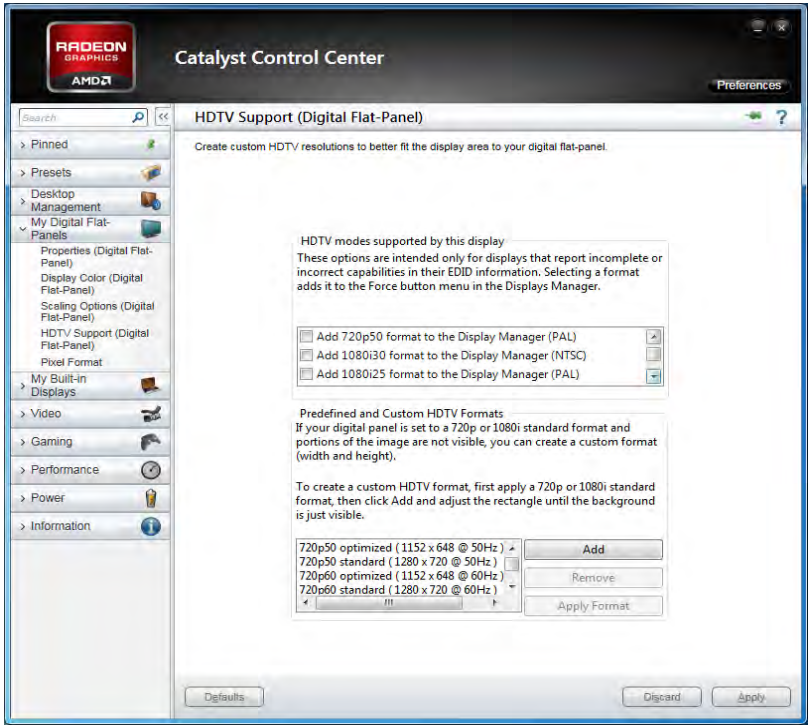
RADEON GRAPHICS
AMD
Catalyst Control Center
Preferences
Search
Pinned
Presets
Desktop Management
My Digital Flat-Panels
Properties (Digital Flat-Panel)
Display Color (Digital Flat-Panel)
Scaling Options (Digital Flat-Panel)
HDTV Support (Digital Flat-Panel)
Pixel Format
My Built-in Displays
Video
Gaming
Performance
Power
Information
HDTV Support (Digital Flat-Panel)
Create custom HDTV resolutions to better fit the display area to your digital flat-panel.
HDTV modes supported by this display
These options are intended only for displays that report incomplete or incorrect capabilities in their EDID information. Selecting a format adds it to the Force button menu in the Displays Manager.
Add 720p50 format to the Display Manager (PAL)
Add 1080i30 format to the Display Manager (NTSC)
Add 1080i25 format to the Display Manager (PAL)
Predefined and Custom HDTV Formats
If your digital panel is set to a 720p or 1080i standard format and portions of the image are not visible, you can create a custom format (width and height).
To create a custom HDTV format, first apply a 720p or 1080i standard format, then click Add and adjust the rectangle until the background is just visible.
720p50 optimized (1152 x 648 @ 50Hz)
720p50 standard (1280 x 720 @ 50Hz)
720p60 optimized (1152 x 648 @ 60Hz)
720p60 standard (1280 x 720 @ 60Hz)
Add
Remove
Apply Format
Defaults
Discard
Apply

Figure C - 9
My Digital Flat-Panels (HDTV Support)

C

Downloaded from LpManual.com Manuals

Function Key Combination

You can use the **Fn + F7** key combination to toggle through the display options:

- Notebook Only
- External Display Only
- Notebook + External Display

Make sure you give the displays enough time to refresh.

Configuring an External Display In Windows 7

1. Attach your external display to the external monitor port/HDMI-Out port, and turn it on.
2. Go to the **Screen resolution** control panel (see *"Video Features" on page 1 - 17*).
3. Click the **Detect** button.
4. The computer will then detect any attached displays.

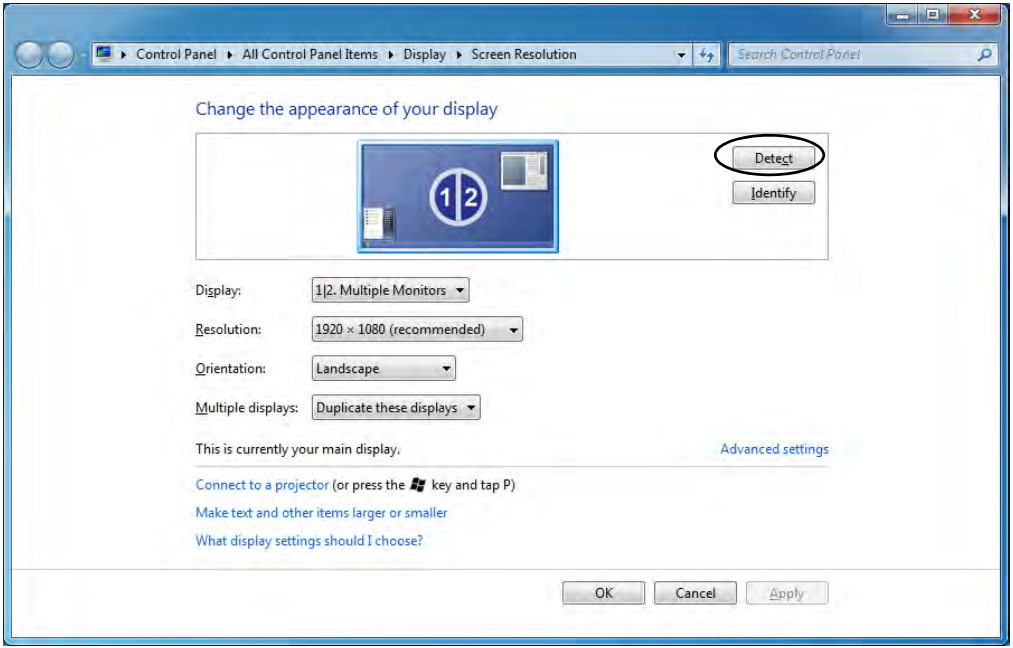
Control Panel ▸ All Control Panel Items ▸ Display ▸ Screen Resolution
Search Control Panel
Change the appearance of your display
Detect
Identify
1 2
Display: 1|2. Multiple Monitors
Resolution: 1920 × 1080 (recommended)
Orientation: Landscape
Multiple displays: Duplicate these displays
This is currently your main display.
Advanced settings
Connect to a projector (or press the key and tap P)
Make text and other items larger or smaller
What display settings should I choose?
OK
Cancel
Apply

Figure C - 10
Screen Resolution Multiple Displays (Win 7)

C

Download from Laptopvideo2go.com Manuals

5. You can configure the displays from the **Multiple Displays** menu.

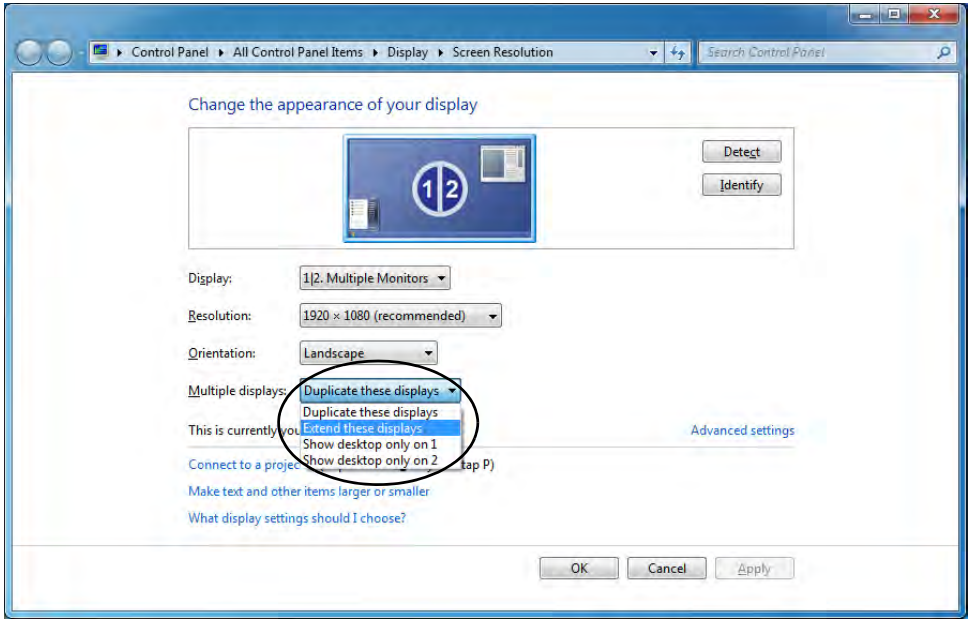

Figure C - 11
Screen Resolution Multiple Display Options (Win 7)

- Duplicate these displays - Shows an exact copy of the main display desktop on the other display(s)
- Extend these displays - Treats both connected displays as **separate** devices
- Show desktop only on 1/2 - Only one of your displays is used.

C

Downloaded from LpManual.com Manuals

Using the Windows Logo Key + P/Fn +F7 Key Combination to Switch Displays

You can also use the + **P/Fn** + **F7** key combination to quickly change display configuration and modes (this is particularly useful when attaching a projector) in ***Windows 7***.

1. Attach your external display to the external monitor port and turn it on.
2. Press the + **P/Fn** + **F7** key combination.
3. An on-screen menu will pop up.
4. Use the cursor keys (or + **P/Fn** + **F7**) to select the appropriate configuration from the menu, and press Enter to confirm the selection.

Figure C - 12
+ P/Fn + F7 Display Configuration Selection (Win 7)

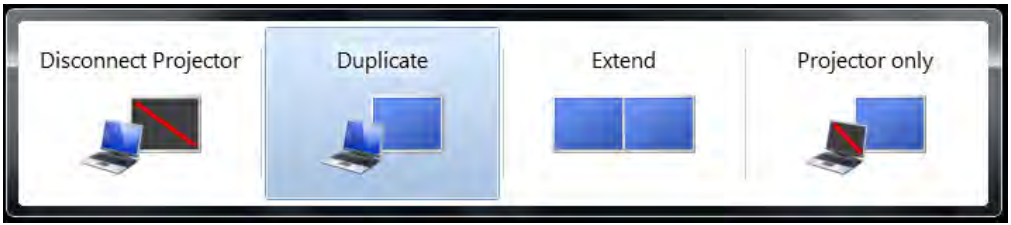

C

Download from Service Manuals

PowerPlay™

When enabled, **PowerPlay™** can be used to automatically set to adjust the graphics processor settings for higher performance or longer battery life when the system is either **Plugged In** or on **Battery**.

Figure C - 13
PowerPlay™

C

Downloaded from LpManual.com Manuals

Gaming

The **Gaming** menu includes configuration options for **AMD CrossFireX™**. **AMD CrossFireX™** combines the processing power of multiple GPUs to s single display, and this may be enabled/disabled from the **AMD CrossFireX™ Configuration** menu (this sub-menu is also available in the Performace menu).

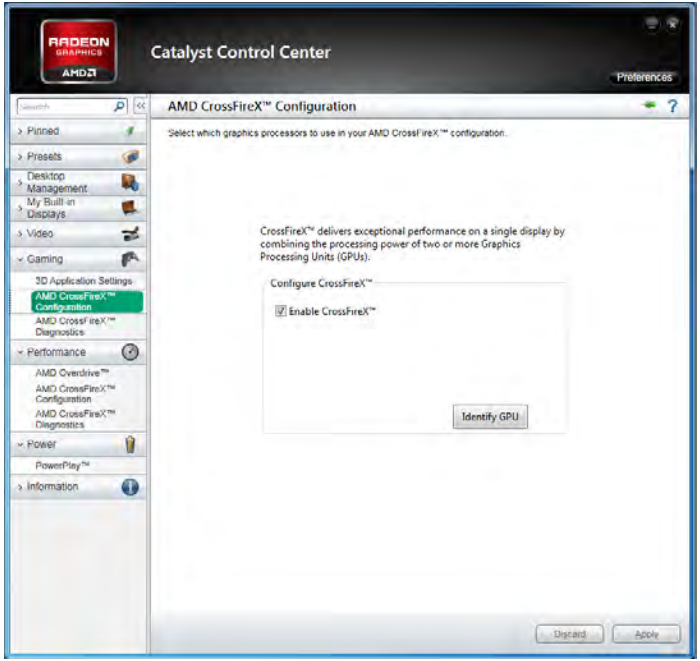

Figure C - 14
Gaming AMD CrossFireX™ Configuration

C

Download from Laptopvideo2go.com Manuals

HDMI Audio Configuration

HDMI (High-Definition Multimedia Interface) carries both **audio** and video signals. Configure the audio output as per the instructions below.

1. Connect a device with HDMI support to the HDMI-Out port.
2. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
3. Click **Sound** (**Hardware and Sound**), and click **Playback** (tab).
4. Depending on your display, the playback device may be selected automatically; however in some cases you may need to select the audio device and click **Set Default** (button) or select **Realtek Digital Output** and click **Set Default** (button).

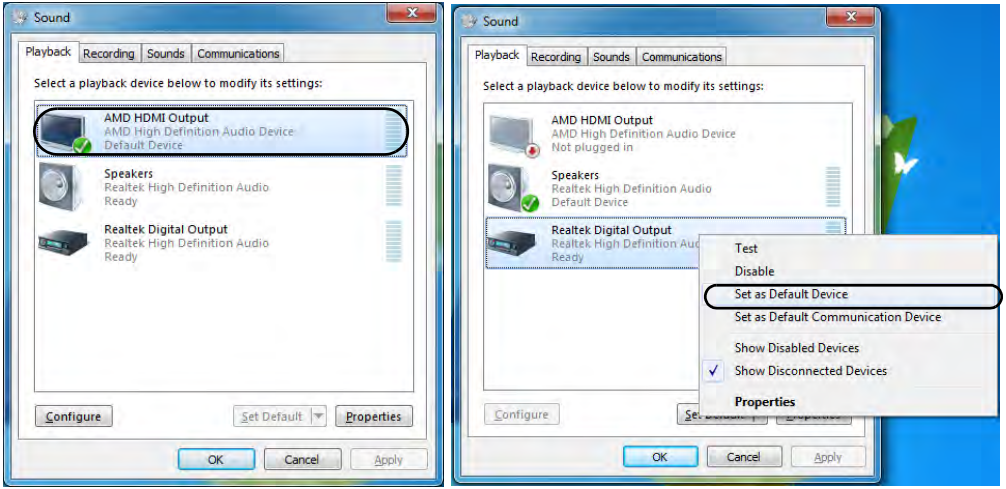

Figure C - 15
Sound - HDMI Device (Set Default)

C

Downloaded from LpManual.com Manuals

5. Double-click the connected HDMI device (or right-click and select **Properties**) to adjust the HDMI settings from the control panel tabs.
6. Click **OK** to close the control panel (see notes overleaf).

Figure C - 16
HDMI Device Properties

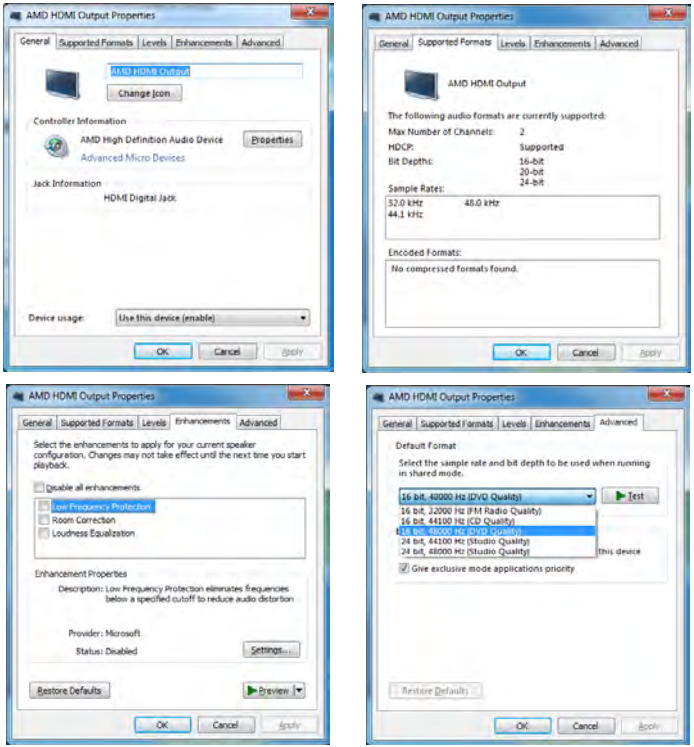

Download from Mp Manuals Forum

HDMI Notes

- Connect a device with HDMI support to the HDMI-Out port **BEFORE** attempting to play audio/video sources through the device.
- To play audio sources through your external display's (TV or LCD) speakers you will need to go to the audio configuration control panel on the display and configure the audio input accordingly (see your display device manual).

HDMI Video Configuration

1. Connect an HDMI cable from the HDMI-Out port to your external display.
2. Configure your external display as per the instructions in ***"Configuring an External Display In the CCC" on page C - 8***.
3. Set up your external display (TV or LCD) for HDMI input (see your display device manual).
4. You can now play video/audio sources through your external display.

Other Applications

If you are using a third party application to play DVDs etc. from any attached DVD device, you will need to consult the application's documentation to see the appropriate audio configuration (the application must support digital to analog translation).

Downloaded from LpManual.com Manuals

Download from LpManual.com Manuals

Appendix D: Specifications

Latest Specification Information

The specifications listed in this Appendix are correct at the time of going to press. Certain items (particularly processor types/ speeds and CD/DVD device types) may be changed, updated or delayed due to the manufacturer's release schedule. Check with your service center for details.

Downloaded from LpManual.com Manuals

Processor

Intel® Core i7 Processor:
==========

i7-990x (3.46GHz)
6.4 GT/s on QPI, 12M L3 Cache, 32nm (32 Nanometer), LGA1366 Package, TDP130W

i7-980x (3.33GHz)
6.4 GT/s on QPI, 12M L3 Cache, 32nm (32 Nanometer), LGA1366 Package, TDP130W

i7-975 (3.33GHz)
6.4 GT/s on QPI, 8M L3 Cache, 45nm (45 Nanometer), LGA1366 Package, TDP130W

i7-950 (3.06GHz)
4.8 GT/s on QPI, 8M L3 Cache, 45nm (45 Nanometer), LGA1366 Package, TDP130W

i7-930 (2.8GHz)
4.8 GT/s on QPI, 8M L3 Cache, 45nm (45 Nanometer), LGA1366 Package, TDP130W

i7-920 (2.66GHz)
4.8 GT/s on QPI, 8M L3 Cache, 45nm (45 Nanometer), LGA1366 Package, TDP130W

Core Logic

Intel® X58 + ICH10R

Display

17.3" (43.94cm) FHD (1920 * 1080), 16:9 Wide Screen LED Backlit LCD

Memory

Triple Channel **DDRIII (DDR3)**

Three 204 Pin SO-DIMM Sockets Supporting **DDRIII (DDR3)** 1066MHz/ 1333MHz Memory Modules

Memory Expandable up to 12GB
Compatible with 1GB, 2GB or 4GB Modules

Video Adapter Options

nVIDIA® GeForce GTX 485M PCIe Video Card
2GB GDDR5 Video RAM On Board
Supports PCIe * 16
Supports Microsoft DirectX® 11.0
Supports HDCP
Supports DVI Dual Link
Supports HDMI 1.4
NVIDIA PhysX™
GeForce CUDA™ Technology

Video Adapter Options

nVIDIA® GeForce GTX 470M PCIe Video Card
1.5GB GDDR5 Video RAM on board
Supports PCIe * 16
Supports Microsoft DirectX® 11.0
Supports HDCP
Supports HDMI 1.4
Supports SLI
Supports DVI Dual Link

nVIDIA® GeForce GTX 460M PCIe Video Card
1.5GB GDDR5 Video RAM on board
Supports PCIe * 16
Supports Microsoft DirectX® 11.0
Supports HDCP
Supports HDMI 1.4
Supports SLI
Supports DVI Dual Link

See over for more video adapter information

Downloaded Specification from Manuals

Video Adapter Options
nVIDIA® Quadro FX 3800M PCIe Video Card (Does not support SLI) 1GB GDDR3 Video RAM On Board Supports PCIe * 16 Supports Microsoft DirectX® 10.1 Supports HDCP Supports DVI Dual-Link Supports Open GL 3.1 nVIDIA® Quadro 5010M PCIe Video Card (Does not support SLI) 4GB GDDR5 Video RAM On Board Supports PCIe * 16 Supports Microsoft DirectX® 11.0 Supports HDCP Supports DVI Dual-Link Supports Open GL 4.1

Video Adapter Options
nVIDIA® GeForce GTX 560M PCIe Video Card 1.5GB GDDR5 Video RAM On Board Supports PCIe * 16 Supports Microsoft DirectX® 11.0 Supports HDCP Supports DVI Dual Link Supports HDMI 1.4a NVIDIA PhysX™ GeForce CUDA™ Technology Supports SLI nVIDIA® GeForce GTX 580M PCIe Video Card 2.0GB GDDR5 Video RAM On Board Supports PCIe * 16 Supports Microsoft DirectX® 11.0 Supports HDCP Supports DVI Dual Link Supports HDMI 1.4 NVIDIA PhysX™ GeForce CUDA™ Technology

Video Adapter Options
AMD Radeon™ HD 6970M PCIe * 16 Video Card (Crossfire x PCIe * 16) 2GB GDDR5 Video RAM On Board Supports Microsoft DirectX® 11.0 Supports HDCP Supports Crossfire AMD Radeon™ HD 6990M PCIe * 16 Video Card (Crossfire x PCIe * 16) 2GB GDDR5 Video RAM on board Microsoft DirectX® 11 compatible Supports HDCP

BIOS
One 16Mb Flash ROM Phoenix™ BIOS

See over

Downloaded from LpManual.com Manuals

Storage

Up to three (**Factory Option**) Changeable 2.5" 9.5 mm (h) **SATA** (Serial) Hard Disk Drives supporting RAID level 0/1/5

One 12.7 mm Super Multi/Blu-Ray Combo/Blu-Ray Writer SATA Optical Device Drive (**Factory Option**)

Audio

High Definition Audio
S/PDIF Digital Output
UAA (Universal Audio Architecture)
Built-In Microphone
5 Built-In Speakers and One Sub woofer
Dolby Home Theater Certified

Keyboard & Pointing Device

Full Size Winkey Keyboard with Numeric Keypad
Built-In TouchPad (with Multi Gesture Functionality)
Touch Sensor Instant Keys
(Mute, Vol Control, Bluetooth, WLAN & Camera)

Slots

One ExpressCard/34 Slot

Three Mini Card Slots:

Slot 1 for PCIe WLAN Module
Slot 2 for PCIe TV Tuner Module

Card Reader

Embedded Multi-In-1 Card Reader
- MMC / RSMMC
- SD / Mini SD / SDHC / SDXC
- MS / MS Pro / MS Duo

Note: Some of these cards require PC adapters that are usually supplied with the cards.

Interface

Two USB 3.0 Ports (No DOS Support)
Three USB 2.0 Ports
One HDMI-Out (High-Definition Multimedia Interface) Port-1.4 (with HDCP Support)
One DVI-Out Port (with CRT out)
One eSATA Port
One S/PDIF Out & Surround Out Combo Jack (supporting external 7.1ch audio)
One Headphone/Speaker-Out Jack
One Microphone-In Jack
One Line-In Jack
One Mini-IEEE1394b Port with TI Controller
One RJ-45 LAN Jack
One DC-In Jack
One CATV-In Jack (for TV Tuner)
One Consumer Infrared Transceiver for TV Tuner Remote Controller

Downloaded from Service Manuals

Communication

Built-In 10/100/100 Base-TX Ethernet LAN

Bluetooth v2.1 + EDR (Enhanced Data Rate) Module (**Factory Option**)

Combo **Bluetooth v3.0+HS** & **802.11b/g/n Wireless LAN** Half Mini-Card Module (**Factory Option**)

Intel® Centrino® Advanced-N 6230 2*2 (802.11 a/g/n) Half Mini-Card PCIe WLAN + Bluetooth V3.0+HS Combo Module (**Factory Option**)

Intel® Centrino® Advanced-N 6200 2 * 2 (802.11 a/g/n) Half Mini-Card PCIe WLAN Module (**Factory Option**)

Intel® Centrino® Ultimate-N 6300 3 * 3 (802.11 a/g/n) Half Mini-Card PCIe WLAN Module (**Factory Option**)

3rd Party 802.11b/g/n Wireless LAN PCIe Interface Half Mini-Card Module (**Factory Option**)

2.0M Pixel PC Video Camera Module with USB Interface

Hybrid TV Tuner Module (**Factory Option**)

Security

Security (Kensington® Type) Lock Slot
BIOS Password
Fingerprint Reader Module
Trusted Platform Module V1.2

Operating System

Windows® 7
Note that the TV Tuner module (factory) option in is supported by the **Windows Media Center** software. **Windows Media Center** is not included in **Starter** or **Home Basic** versions of ***Windows 7***.

Power Management

Supports Wake on LAN
Supports Wake on USB (for USB 2.0 Ports Only)

Power

Full Range AC/DC Adapter – AC in 100 - 240V, 50 - 60Hz DC Output 20V, 15A (**300 Watts**)

Removable Polymer Smart Lithium-Ion 78.44Wh Main Battery

Environmental Spec

Temperature
Operating: 5°C - 35°C
Non-Operating: -20°C - 60°C
Relative Humidity
Operating: 20% - 80%
Non-Operating: 10% - 90%

Physical Dimensions & Weight

419mm (w) * 286mm (d) * 56.5 - 60.7mm (h)

5.5kg with Single nVIDIA® GeForce GTX 485M Video Card, ODD and 78.44Wh Battery

D

Downloaded from LpManual.com Manuals

Downloaded from LpManual.com Manuals